





SYVER TRUE WIRELESS

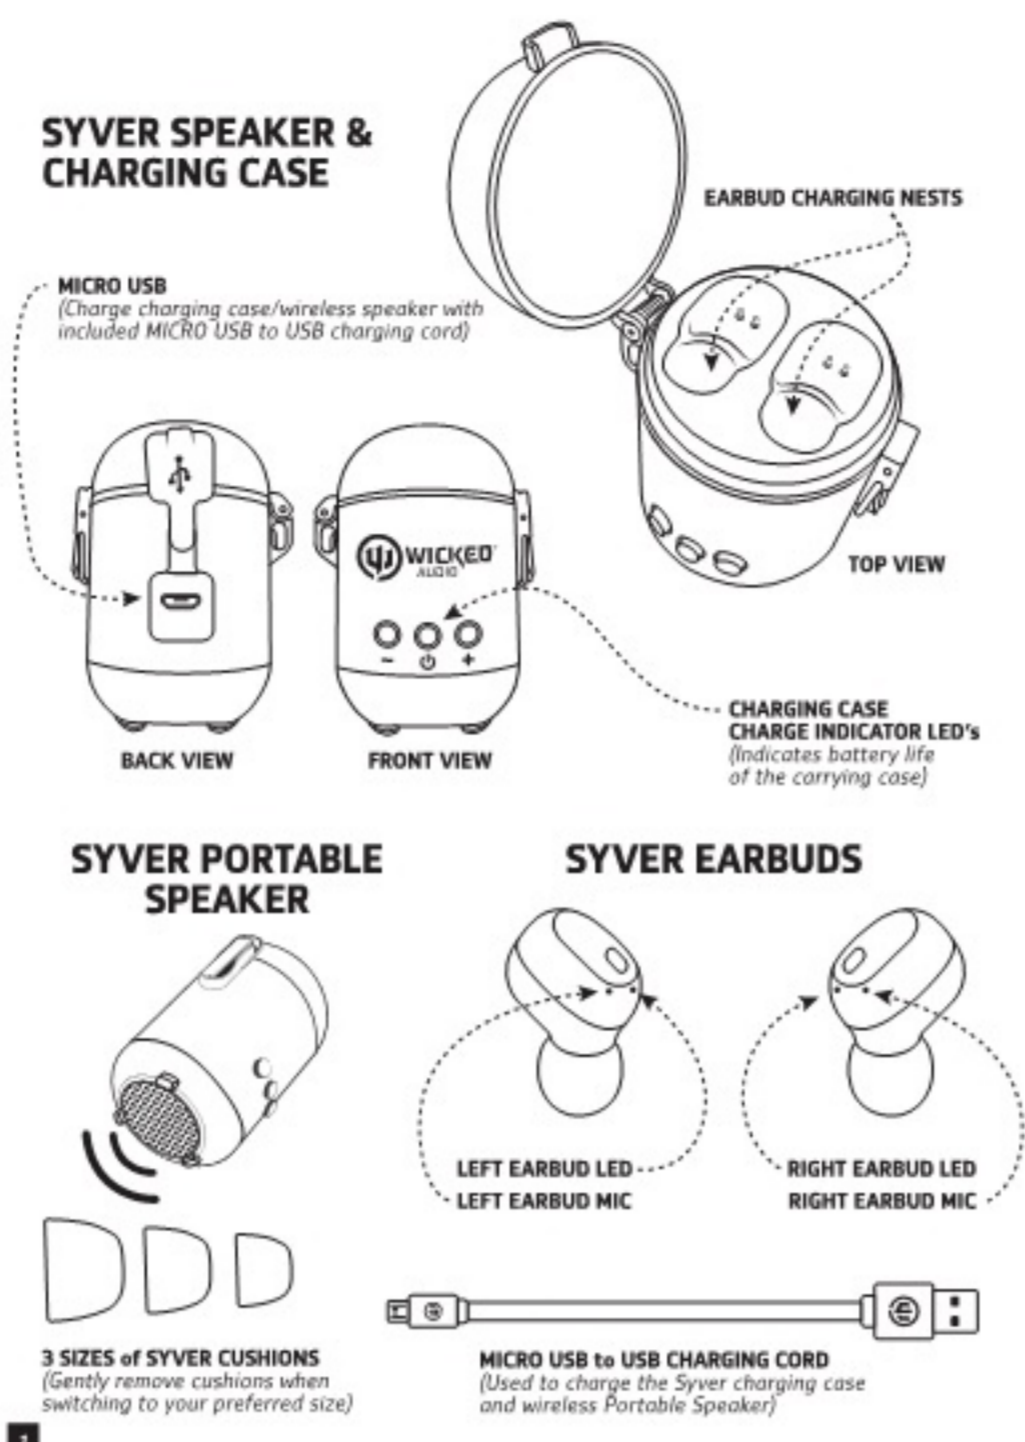

SPEAKER & CHARGING CASE
CHARGING THE CHARGING CASE and WIRELESS PORTABLE SPEAKER
To charge the Syver Charging Case and Bluetooth Portable Speaker, use the included Micro USB to USB charging cord...

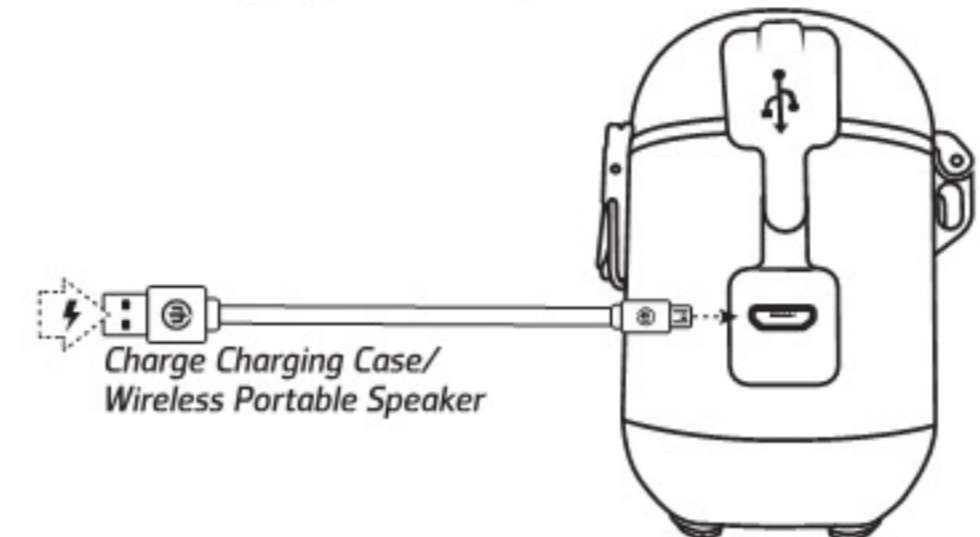

CHARGING THE SYVER EARBUDS
Delicately place the Syver earbuds into the earbud charging nests. Make sure each earbud is placed in its corresponding nest...

The charging case will shut down automatically if the Syver earbuds both reach full charge or when both of the earbuds are removed from the charging case.

FIRST TIME USE for DUAL EARBUD MODE
(If you want to use a single earbud, please refer to section "Single Earbud Use" on Page 7)

- 1 Make sure the Syver earbuds are charged (Please refer to section "Charging the Syver Earbuds" on page 2) and Bluetooth device (phone, computer, tablet etc.) is turned on with the Bluetooth feature enabled...
2 Remove charged earbuds from charging case. They will turn on and pair together automatically.
3 Both earbuds will pair together; both will beep and the left earbud will announce "Left" and then the right earbud will announce "Right"...

2 Hold both center buttons for 3-5 seconds. (This is when the earbuds have shut down outside of the charging case.) (For pairing instructions, please see "First Time Use" on page 3)

TURNING OFF EARBUDS
There are two ways to turn off the earbuds:
1 Place earbuds back into their charging case. They will automatically turn off.
OR
2 Hold center button, on either right or left earbud, for a few seconds until the earbuds beep twice and the LEDs flash red and turn off.

DISCONNECTED
When out of range, or if your device becomes disconnected from the Syver earbuds, the left earbud will beep and announce "Disconnected" followed by "Pairing". The Syver earbuds will automatically go into pairing mode with the left earbud's LED flashing Red/Blue while the right earbud's LED will be off...

PAUSE/PLAY
When both earbuds are paired to your device you can pause and play your music by using a short press on the center button with either the left or right earbud. (Please note when using BOTH earbuds, you can perform this function using EITHER earbud.)

the instructions in the section "First Time Use- For Single Earbud Use" below. Please note that when pairing the RIGHT earbud to your device (using single earbud), you will notice that "Wicked Syver BUDS" shows up a second time in your pairing name options. Please pair with the newest "Wicked Syve BUDS" option as this will be directly connected to the RIGHT earbud.

- FIRST TIME USE- FOR SINGLE EARBUD USE
1 Determine if you are using the left or the right earbud.
2 Make sure the Syver earbud is charged and your device is turned on with the Bluetooth feature enabled.
3 Turn on the Syver earbud by removing from the charging case or if it is out of the case and turned off you can turn on the earbud by holding down the center button for a couple seconds. The earbud LED will flash blue "beep". After a few seconds, once the earbud realizes it will not be pairing with the other earbud, the earbud will announce "Pairing" and the LED will then flash Red/Blue indicating it is in pairing mode.
4 Your phone or device will detect the Syver's pairing name "Wicked Syver BUDS". Select "Wicked Syver BUDS" on your device to start pairing them together.
5 Once selected and paired, the earbud will announce "Pairing Successful" indicating your device has successfully paired with the Syver. When paired successfully to your device, the earbud's LED will shut off.
6 You're ready to go!

Please note when using ONE earbud either earbud can perform all functions. (See previous sections)

FIRST TIME USE WIRELESS PORTABLE SPEAKER
1 Make sure the Syver Speaker is charged and your device

FUTURE USE AFTER INITIAL PAIRING THE SYVER TO YOUR DEVICE
(If this is the first time the Syver earbuds are being paired to your Bluetooth device, or if the Syver earbuds were "forgotten", please see "First Time Use" section on Page 3) (If you want to use a single earbud, please refer to section "Single Earbud Use" on Page 7)

- 1 The earbuds will automatically turn on after being removed from the charging case. If they are already out of the case and turned off, you can turn on the Syver earbuds by holding down the center buttons on both earbuds at the same time.
2 Both earbuds will pair together. Both earbud LEDs will flash blue while both earbuds "beep" and the left earbud announces "left" and the right earbud announces "Right" and then both earbuds will announce "Second earbud connected."
3 Your phone will recognize the pairing name "Wicked Syver BUDS" and automatically connect. (If not, please follow the instructions in the "First Time Use" section on page 3. Make sure to check that the Wicked Syver is not already pairing to another device.)
4 Once successfully paired with your phone or device, the left earbud will beep and announce "Pairing Successful". When paired successfully to your device, both earbuds' LEDs will be off.
5 You're ready to go!

TURNING ON EARBUDS
There are two ways to turn on the earbuds:
1 Remove earbuds from their charging case
OR

NEXT TRACK
Using the right earbud you are able to skip to the next track by using 2 short presses (double press) on the center button.

ANSWER/HANGUP
When both earbuds are connected, answer or hang up by using a short press on the center button on either the left or right earbud.

INCOMING CALL
When receiving an incoming call, the earbuds will detect the device's programmed ringtone (this may differ depending on your device) You can answer by using a short press on the center button on either the left or right earbud.

LOW BATTERY
When using BOTH earbuds together, the left earbud acts as the communicator to your Bluetooth device. Because of this, the left earbud will likely drain its battery quicker than the right. Please consider charging your Syver earbuds regularly when not in use to retain ample battery life in both earbuds. If you lose battery life in the left earbud while using both earbuds, the left earbud will announce "Low Charge". After a couple minutes the earbud will repeat the announcement and then shut off. At this point you can shut off the right earbud and charge both earbuds, or choose to use the right earbud for an additional time in single earbud mode. The right earbud will take over as the communicator with your device once the left earbud runs out of battery. The LED will flash Red/Blue, indicating it is in pairing mode. Please follow

- is turned on with the Bluetooth feature enabled.
2 Turn on the Syver Speaker by pressing the Center Power Button (short press). The speaker will beep and announce "Pairing" while the LEDs flash blue.
3 Your phone or device will detect the Syver's pairing name "Wicked Syver SPKR". Select "Wicked Syver SPKR" on your device to start pairing them together.
4 Once selected and paired the Speaker will announce "Pairing Successful" indicating your device has successfully paired with the Syver. When paired successfully to your device, the LEDs on the speaker will be a solid blue.

DISCONNECTED
When out of range, or if your device becomes disconnected from the Syver speaker, the speaker will announce "Disconnected" followed by "Pairing". The Syver Speaker will automatically go into pairing mode with the LEDs flashing Blue.

PAUSE/PLAY
You can pause and play your music by using a short press on the center

PREVIOUS/NEXT TRACK
You are able to play the previous track or skip to the next track by using a short press on either the -/+ buttons.

VOLUME CONTROL
You are able to control the volume of your music by using a long press on either the -/+ buttons.

TURNING OFF SYVER SPEAKER
To turn off your Syver Speaker simply hold down the center button for a few seconds until you hear the "beep".

IMPORTANT SAFETY INSTRUCTION
1 Read these instructions.
2 Follow all warnings.
3 Follow all instructions.

ATTENTION should be drawn to the environmental impact of battery disposal. Use of appropriate recycling is encouraged.

PRECAUTIONS
LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.

UTILISATION SANS RISQUE ET AVERTISSEMENTS DE DANGER
1 Lire attentivement les instructions.
2 Observez attentivement toutes les mises en garde.
3 Suivez attentivement toutes les instructions.

ADVERTENCIA
LECTURA DE LAS INSTRUCCIONES DE SEGURIDAD ES MUY IMPORTANTE PARA EVITAR DAÑOS PERMANENTES.

LIMITED ONE-YEAR WARRANTY
Warranty policy and return information service. Go to www.wickedaudio.com for more details.

GARANTEE LIMITEE D'UN AN
Politique de garantie et service de renseignements. Consultez www.wickedaudio.com pour en savoir plus.

Limitation of Liability
Any damages or modifications not expressly permitted by the party responsible for copyright clearance... This warranty is void if the product has been altered or tampered with.

REC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device... The maximum extent permitted under applicable law.

Interference
This device may cause harmful interference, and if this device does not accept any interference received, including interference that may cause undesired operation.

Min. au point au Utah
État Utah fabriqué en Chine
Developed in Utah, U.S.A.
Made in China

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.