


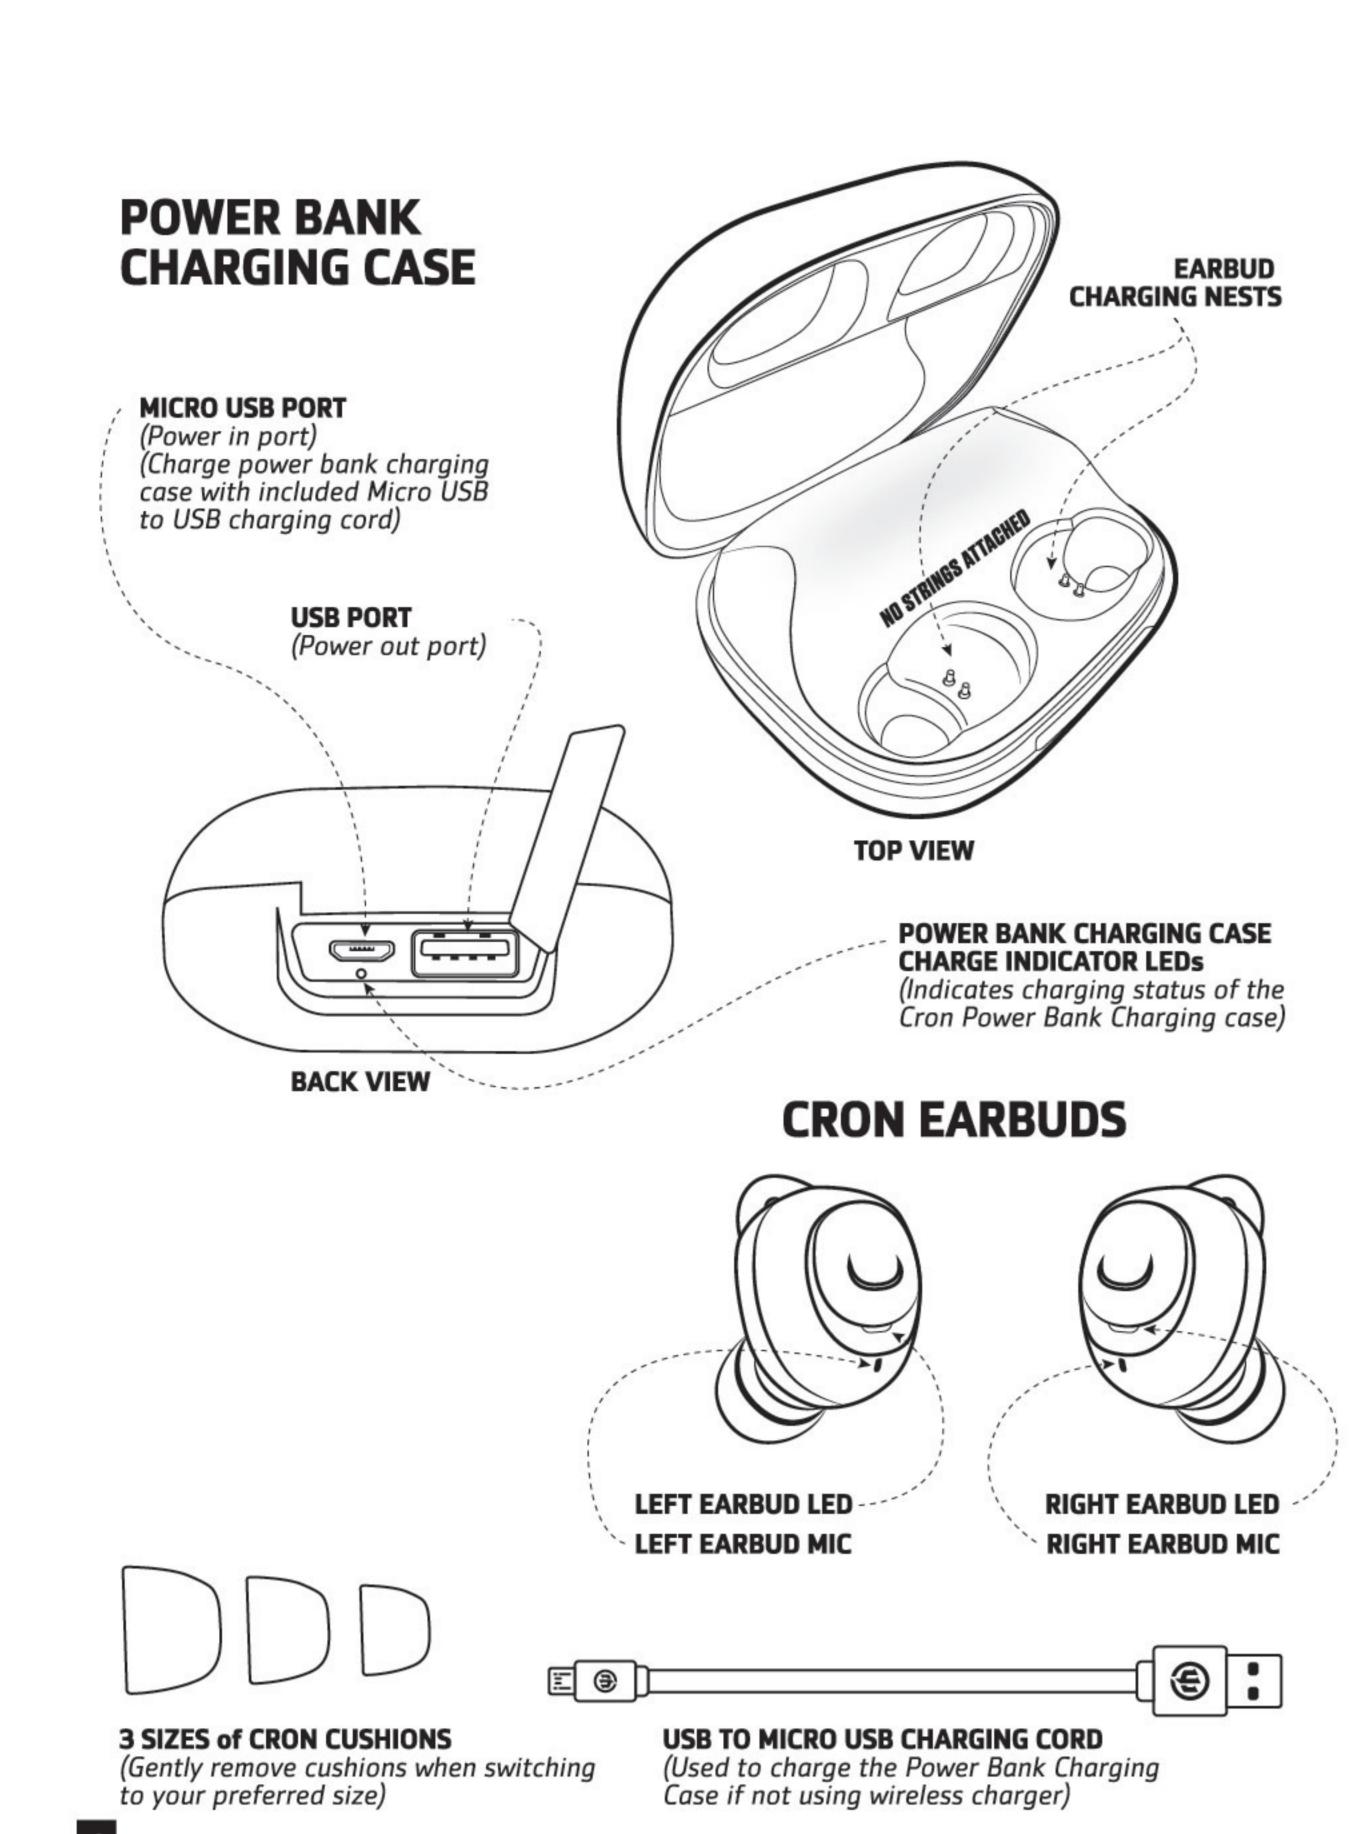





2



CHARGING THE CRON EARBUDS

Delicately place the Cron earbuds into the earbud charging nests. The cushions on the earbud will face down. A small magnetic pull will help the earbuds fall into the correct position. The Cron earbuds will show a slow flashing white LED when charging. LEDs will briefly turn solid white then turn off when Cron earbuds are fully charged.

The Cron Power Bank Charging Case will shut down automatically when the Cron earbuds both reach full charge or when both the earbuds are removed from the case.

POWER BANK CHARGING CASE External devices like phones or other small electronics

CHARGING EXTERNAL DEVICES WITH

that can charge via USB, can be plugged into the USB port (large port) of the Power Bank Charging Case. Using the device's charging cord, plug into the USB port on the charging case, followed by plugging the micro USB end into your personal device.

CHARGING CRON POWER BANK CHARGING CASE VIA QI WIRELESS CHARGER To charge your Cron Power Bank Charging Case, make sure

your Qi wireless charger is plugged in to a power source. Rest the Charging Case onto the wireless charger

NOTE: You may need to slightly adjust the position of the

Cron Power Bank Charging Case on the Qi wireless charger until the charging sensors from the charging case and the wireless charger align and charging begins.

device

1 Remove both Cron earbuds from the Cron Power Bank Charging Case (they will sync to each other automatically) 2 Earbuds will automatically pair to the last device it was paired to.

TURNING ON CRON EARBUDS There are two ways to turn on the Cron earbuds:

1 Remove earbuds from their charging case. OR 2 Hold both center buttons for 1-2 seconds. (This is when the

earbuds have shut down outside of the charging case.

TURNING OFF CRON EARBUDS There are two ways to turn off the Cron earbuds:

1 Place earbuds back into their charging case. They will automatically turn off. 2 Hold center button, on either right or left earbud, for 5

seconds. You will hear a shut-down beep. DISCONNECTED

When out of range, or if your device becomes

disconnected from the Cron earbuds, the Cron earbuds will automatically go into pairing mode with the right earbud's LED flashing white/red.

PAUSE/PLAY

When both earbuds are paired to your device you can pause and play your music by using a short press on the center button with either the left or right earbud. (Please note when using BOTH earbuds, you can perform this function using EITHER earbud.)

Please follow the instructions in the section "First Time Use-For Single Earbud Use" below. Please note that when pairing the Left earbud to your device

left earbud for an additional time in single earbud mode.

(using single earbud), you will notice that "Wicked Cron" shows up a second time in your pairing name options. Please pair with the newest "Wicked Cron" option as this will be directly connected to the LEFT earbud. Note:

"Wicked Cron" might show up in your Bluetooth device's menu twice. This happens when the earbuds go into "single earbud use," or when one earbud is removed from the charging case for several seconds before it's partner. Please follow the steps below to reset to one "Wicked Cron" for future dual earbud use: 1 Place both earbuds in the charging case to turn them off.

2 Forget both "Wicked Cron" devices from your device. 3 Take both earbuds out of the charging case at the same time (within a few seconds of each other.) 4 A new "Wicked Cron" will display on your Bluetooth menu.

Connect to the new "Wicked Cron."

FIRST TIME USE- FOR SINGLE EARBUD USE

**If you have previously connected your Cron earbuds to your device using both earbuds, unpair "Wicked Cron" from your Bluetooth settings on your device. 1 – Remove one earbud, keep other earbud off and in case. 2-- "Wicked Cron" will appear in Bluetooth menu. Pair to

"Wicked Cron." Note: To return to "Dual Earbud Mode"

1 Place both earbuds in charging case.

l Read these instructions. Keep these instructions. Heed all warnings 4 Follow all instructions. Attention should be drawn to the environmental aspects of battery disposal; The use of apparatus in moderate climates

PRECAUTIONS

IMPORTANT SAFETY INSTRUCTION

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

3 Avertissez tous les avertissements. 4 Suivez toutes les instructions Il convient d'attirer l'attention sur les problèmes d'environnement dus à la mise au dêchet des piles; Si l'appareil esl destiné à être utilisé sous un climat tempéré Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A

INSTRUCTION DE SÉCURITÉ IMPORTANTE

Lisez ces instructions.

Gardez ces instructions.

VOLUME AS POSSIBLE. Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs. SAFE USE & HAZARD WARNINGS 90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 105 dB SPL at 1 hours, 110 dB SPL at 30 min, 115 dB SPL at 15 min, 120 dB SPL: Avoid as damage may occur

PRÉCAUTIONS ÉVITEZ D'ÉCOUTER DE LA MUSIQUE À UN NIVEAU EXCESSIF, CAR CECI PEUT CAUSER DES DOMMAGES AUDITIFS PERMANENTS. Les lignes directrices suivantes ont été établies par la Occupational Safety Health Administration (OSHA). Elle souligne le temps maximal d'exposition à divers niveaux de pression sonore avant que des dommages auditifs soient causés. Veuillez utiliser ces lignes directrices afin de limiter votre exposition à des niveaux de bruit élevés, ce qui peut endommager votre capacité auditive et entraîner une perte auditive permanente.

UTILISATION SANS RISQUE ET AVERTISSEMENTS DE DANGER

90 dB SPL 8 heures, 95 dB SPL 4 heures, 100 dB SPL 2 heures, 105 dB SPLat 1 hours,

110 dB SPL 30 min., 115 dB SPL 15 min., 120 dB SPL À éviter, des dommages peuvent être causés **ADVERTENCIA** ESCUCHA DEL AUDIO NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AUDIENCIA. SE USE COMO VOLUMEN MÁS BAJO POSIBLE. Durante la exposición a niveles excesivos de ruido puede dañar los oídos resultando en ruido permanente pérdida de audición inducida (PAIR). Por favor, use las siguientes pautas establecidas por la Administración de Seguridad de Salud Ocupacional (OSHA) de tiempo máximo que los niveles de presión de sonido antes de que se produce una lesión auditiva.

90 dB SPL a 8 horas, 95 dB SPL a 4 horas 100 dB SPL a 2 horas, 105 dB SPL a 1 horas, 110 dB SPL a 30

minuto, 115 dB SPL a 15 minuto, 120 dB SPL: Evite que se puede producir daños

LIMITED ONE-YEAR WARRANTY Keep your receipt to obtain warranty service. Go to www.wickedaudio.com for more details.

Conservez votre reçu pour obtenir le service en vertu de la

garantie. Consultez www.wickedaudio.com pour en savoir plus.

GARANTIE LIMITÉE D'UN AN

USO SEGURO DE PELIGROS Y ADVERTENCIAS

Mis au point au Utah États-Unis Fabriqué en Chine Developed in Utah, U.S.A.

Made in China QRoHS X

(smaller side) into the Charging Case and connect USB side into computer or USB wall charger (not included). The Cron Power Bank Charging Case also has wireless


CHARGING the CRON POWER BANK CHARGING CASE

To charge the Cron Charging Case, use the included USB

to Micro USB charging cord. Connect the Micro USB

charging capabilities. Simply set your Cron Power Bank Charging Case onto a horizontal Qi wireless charger to charge the case.

NOTE: You may need to slightly adjust the position of the Cron Power Bank Charging Case on the Qi wireless charger until the charging sensors from the charging case and the wireless charger align and charging begins.

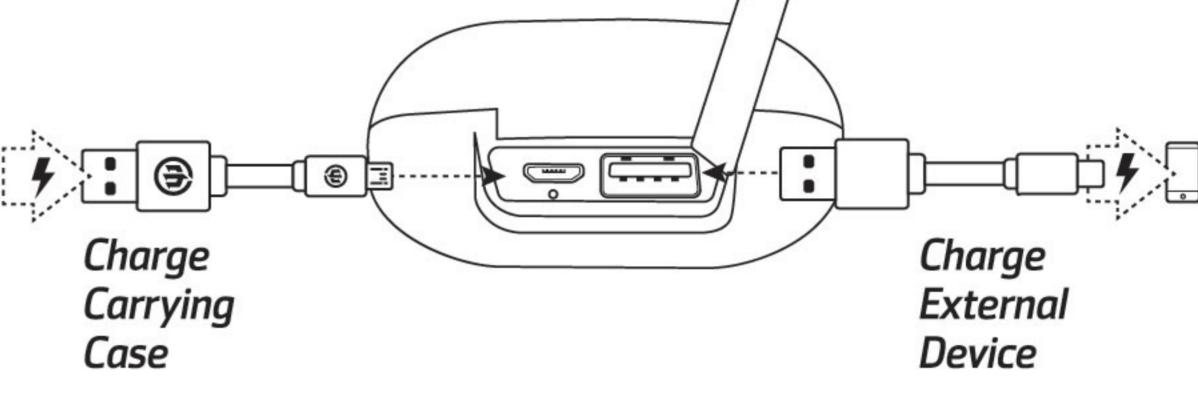

CHARGING CASE STATUS LIGHTS: Charging – Flashing Orange LEDs

Fully Charged – Solid Orange LED

EARBUD STATUS LIGHTS: Charging – Slow flashing white LEDs

briefly and then shut off.

Fully Charged – LEDs will turn solid white

FIRST TIME USE FOR DUAL EARBUD MODE

(If you want to use a single earbud, please refer to section "Single Earbud Use" on Page 7.)

1 Make sure the Cron earbuds are charged (Please refer to section "Charging the Cron Earbuds" on page 3) and Bluetooth device (phone, computer, tablet etc.) is turned on with the Bluetooth feature enabled (this is usually found in settings). 2 Remove charged earbuds from charging case. They will

turn on and sync together automatically. **3** Both earbuds will sync together; both will beep. **4** The right earbud, when in dual earbud mode is the "communicator." Once both earbuds are synced, the right

earbud will flash red and white. **5** Your device will detect the Cron's pairing name "Wicked" Cron". Select "Wicked Cron" on your device to start pairing to your device.

6 The right earbud will beep when paired with your device and then the LED will turn off. **7** You're ready to go!

FUTURE USE AFTER INITIAL PAIRING THE CRON TO YOUR DEVICE

(If this is the first time the Cron earbuds are being paired to your Bluetooth device, or if the Cron earbuds were "forgotten", please see "First Time Use" section on Page 3.) (If you want to use a single earbud, please refer to section "Single"

CONTINUED USE AFTER INITIAL PAIRING OF THE

CRON EARBUDS TO YOUR DEVICE Continued use after initial pairing the Cron earbuds to your

Earbud Use" on Page 7)

NEXT/PREVIOUS TRACK Next – Hold center button on right earbud for 2-3 seconds until the track skips to next track

Previous – Hold center button on the left earbud for 2-3 seconds until the track reverts back to previous track

ANSWER/HANGUP

When both earbuds are connected, answer or hang up by using a short press on the center button on either the left or right earbud.

INCOMING CALL

When receiving an incoming call, the Cron earbuds will ring using your chosen ringtone from your personal device. You can answer by using a short press on the center button on either the left or right earbud.

NOTE: Pressing the answer button on your device will answer the call on your phone. If you would like to take the call using your Cron earbuds, please press the center button on either the left or right earbud to answer the phone call. LOW BATTERIES

Please consider charging your Cron earbuds regularly when

available devices menu.

not in use to retain ample battery life in both earbuds. When the earbuds have approximately 10% battery life the earbuds will announce "Low Battery." After around 4 minutes the earbud will repeat the announcement and then shut off. Due to right earbud being the main communicator it might lose battery life before the left. At this point you can shut off the left earbud and charge both earbuds, or choose to use the

3 Follow steps on page 3 for "First Time Use for Dual Earbud" Mode"

2 Forget all "Wicked Cron's that appear in the Bluetooth

Limitation of Liability Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. In no event, under any cause of action of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio products, even if the Wicked Audio product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that Wicked Audio has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained in inside or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitations of liability set forth above shall apply to the maximum extent permitted under applicable law. MODEL #: WI-TW395X FCC ID: 2AFM7WI-TW395X

8

10

This device complies with part 15/part 18of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15/part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

-Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. (For wireless earbuds) This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body (For wireless charge based)

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures: