



# singing machine®

creating Joy through music

## SML605


INSTRUCTION MANUAL



[www.singingmachine.com](http://www.singingmachine.com)

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

# Warnings

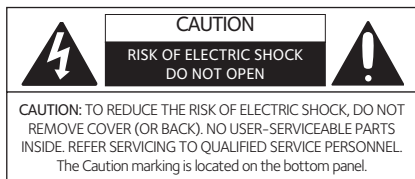

**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

**DRIPPING WARNING:** This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

**VENTILATION WARNING:** The normal ventilation of the product shall not be impeded for intended use.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

CAN ICES-3(B)/NMB-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'empêcher le fonctionnement.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.

**INDUSTRY CANADA NOTICE:**

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

## Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.

PORTABLE CART WARNING  
(symbol provided by RETAC)




14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

# Included


Please make sure the following items are included.




Main Unit

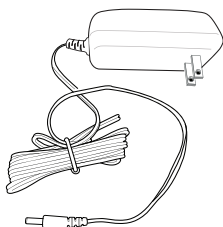


AC Adapter

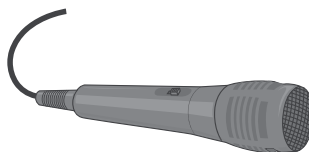

Wired Microphone

 


Manual

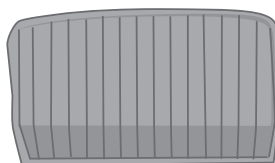

Detachable Cradle


# Location of Controls (Top/Front)

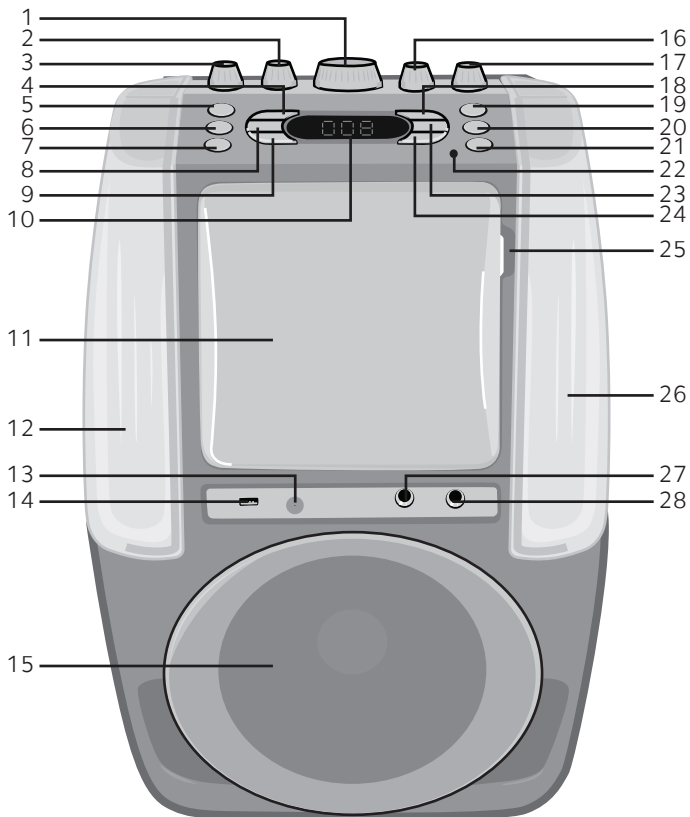

1. MASTER VOLUME Control
2. BALANCE Control
3. AVC (Auto Voice) Control
4. Play/Pause ►||| Button
5. POWER ON/OFF Button
6. FUNCTION Button
7. REPEAT/PROGRAM Button
8. Skip ◀◀ Button
9. Key -/◀ Button
10. Display
11. CD Compartment
12. Left Water Lights
13. LINE IN Jack
14. USB Jack

15. Disco Lights/Speaker
16. ECHO Control
17. MIC VOLUME Control
18. Stop ■ Button
19. DISCO LIGHT Button
20. 10+ Button
21. PAIRING Button
22. Bluetooth Indicator
23. Skip ▶▶ Button
24. Key +/▶ Button
25. Open/Close Tab
26. Right Water Lights
27. MIC 1 Jack
28. MIC 2 Jack

# Location of Controls (Rear)

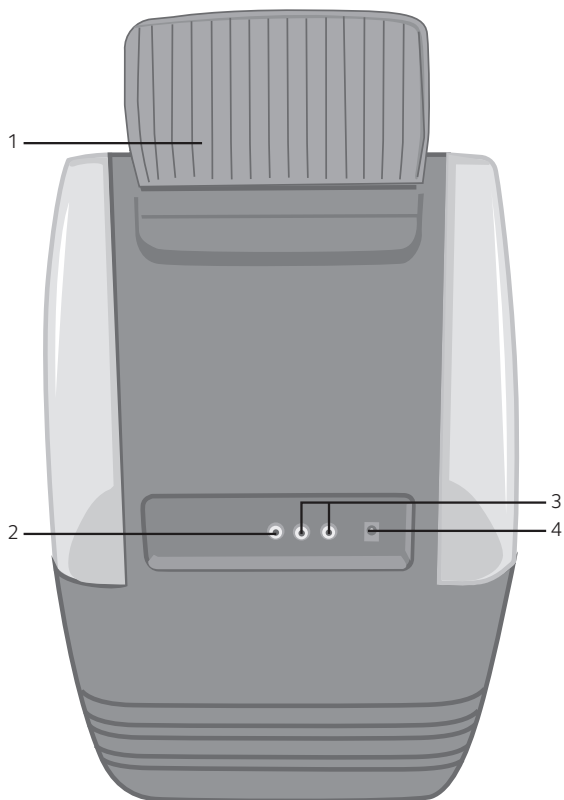

- 1. Detachable Cradle
- 2. Video Out Jack
- 3. Right/Left Audio Out Jacks
- 4. DC In Jack

# Location of Controls (Display)



- 1. CDG Indicator
- 2. Display
- 3. REPEAT Indicator
- 4. PLAY/PAUSE Indicator
- 5. PROGRAM Indicator

# Connection

## Connecting the Microphone(s)




### Microphones:

Connect a microphone into Mic jack 1 **1** as well as Mic jack 2 **2** (when desired).

**Note:** Do not drop or tap the Mic as damage to the Mic or speakers may occur. Do not twirl the microphone by cord as it will cause damage to the encased wiring.

## Connecting the Unit to a TV

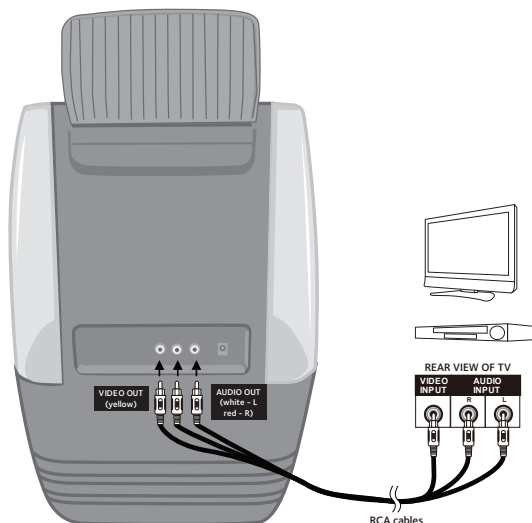

To output the video, lyrics and audio to your TV, perform the following steps:

Connect the RCA video cable (Yellow) to the VIDEO OUT jack and the audio cables (White and Red) to the AUDIO OUT jacks located on the back of the Singing Machine.


Connect the opposite end of the RCA video cable (Yellow) to the VIDEO IN jack and the audio cables (White and Red) to the AUDIO IN on your TV.

### Notes:

- This unit can be used with or without a TV, but it is highly recommended to use a TV in order to utilize all the features.
- Also refer to the TV's User Guide.
- To see the lyrics on the screen, you must use a CD+G disc or MP3+G files.

# Connection

## Connecting to AC Power

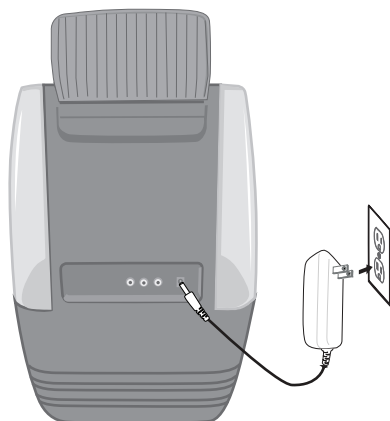

Insert the AC power cord into a conveniently located AC outlet having 120V AC, 60Hz.

**Note:**

Make all connections before connecting to AC power.

---

## Connecting to Line In Jack




Connect an external device by using an appropriate cable (3.5mm audio cable not included) as shown.

**Note:**

See page 18 to select and use the Line In function.

---

## Installing the Cradle

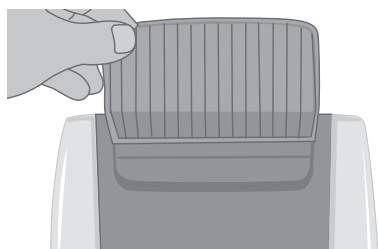

Insert the cradle as shown to utilize as a stand for your mobile device/tablet.

# Operation

## Disco Lights/Water Lights



The disco lights on the front of the unit will light up and the water lights will bounce up and light depending on the music being played or the live singing performance. The louder the music/singing, the higher the water lights will bounce.


**Note:**

If the water lights do not bounce, raise the volume to activate.


- 1 To turn the lights On, press the DISCO LIGHT button to the On (in) position. To turn them off, press the DISCO LIGHT button to the Off (Out) position.

# Operation

## Playing a CD

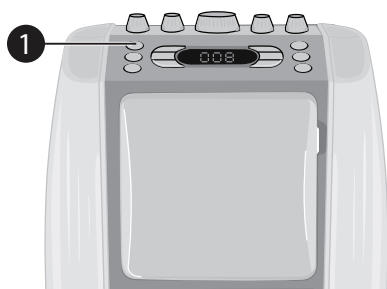

- 1 Connect the unit as described previously; it should be connected to a TV (see page 5). Press the **POWER ON/OFF** button to turn the unit on.

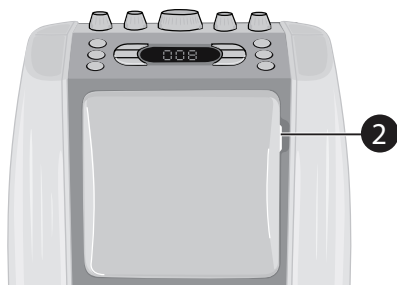


- 2 Lift open the CD door and insert a CD (with standard or MP3+G files) or a CD+G by gently pressing it on the center spindle. Then close the CD door.

### Notes:

- **What is a CD+G?**  
A CD+G (CD+Graphics) is the standard format for most karaoke discs that will display the words on the screen.
- **What is an MP3+G?**  
MP3+G is the newest format for karaoke music utilizing the MP3's small file size. It will display the words on the screen. See page 20 to order and download MP3+G files.





- 3 Repeatedly press the **FUNCTION** button to select the CDG/CD mode; “---” will appear when searching the disc and then the total number of tracks will appear. When a CDG disc is inserted, the CDG indicator will light.

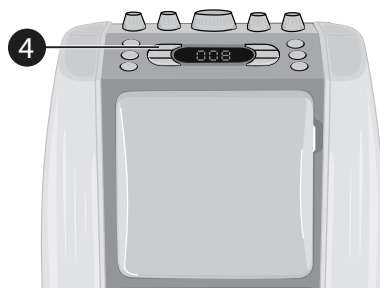

- 4 Press the **Play/Pause** button to start playback; if listening to a CD+G file, the image and lyrics will appear on the TV screen (if connected).

# Operation

## Playing a CD (Continued)

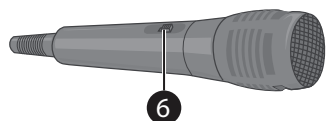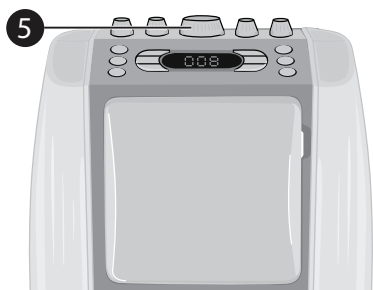

**5** Adjust the volume to a comfortable level using the **MASTER VOLUME** control.

### Notes:

- Never place anything other than a CD in the compartment, as foreign objects can damage the unit.
- If no disc is inserted, "no" will appear on the display.
- If connected to a TV or other audio source, adjust the volume of the TV using its own volume control.

**6** Connect microphone(s) as shown on page 5, and slide the **ON/OFF** switch on the microphone to the ON position.


**7** Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.

**8** Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards **MAX** to increase the echo effect.

**9** Adjust the Key using the **Key +/▶** and **Key -/◀** buttons to obtain the best key for the singer.

# Operation

## Playing a CD (Continued)

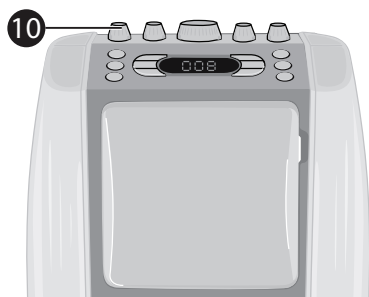

**10** **AUTO VOICE CONTROL** can be activated by rotating the **AVC** (Auto Voice Control.) The higher this control is set to, the more the vocals on the multiplex recording will be muted when the singer starts to sing through the microphone. When the singer stops singing, the vocals will resume to normal.



**11** Rotate the **BALANCE** control clockwise to hear the music and vocals or counterclockwise to hear the music only.  
**Note:** To use the **BALANCE** control, a CD+G disc must be used, otherwise it will operate as a standard Balance control.



**12** **SKIP:** Advance or go back one track by pressing the **Skip Back** ⏮/Skip Forward ⏭ buttons. You can also skip ahead 10 files/tracks using the **10+** button.



**13** **REPEAT:** During playback, press the **REPEAT/PROGRAM** button once to repeatedly play the selected song; the Repeat indicator will blink. Press the **REPEAT/PROGRAM** button a second time to repeatedly play the whole CD; the Repeat indicator will light solid. Press it again to cancel Repeat function, the **REPEAT/PROGRAM** indicator turns off.

# Operation

## Playing a CD (Continued)



**14 PROGRAM:** You can program up to 20 tracks on any disc for playback in any desired order. While in the Stop mode, press the **Repeat/Program** button; the Program indicator will blink and "01" will appear on the display indicating the first program is ready to program. Select the first track using the **Skip Back** **⏮/Skip Forward** **⏭** buttons. Press the **REPEAT/PROGRAM** button again to confirm the entry. Repeat to set up to 20 tracks into memory. When done, press the **Play/Pause** **▶||** button to start playback.

### Notes:

- Press the **Stop** button TWICE to stop and clear the program.
- If more than 20 tracks are attempted to be programmed, "FUL" will appear in the display.





**15 PAUSE:** During playback, if you wish to pause the disc momentarily, press the **Play/Pause** **▶||** button; the PLAY/PAUSE indicator will blink. Press again to resume normal playback.

**16** Press the **Stop** button to stop playback.

**17** Press the **POWER ON/OFF** button to turn the unit off.

# Operation

## Playing Songs from the USB

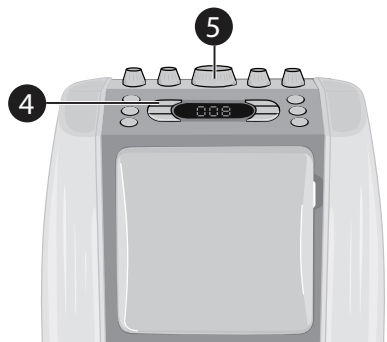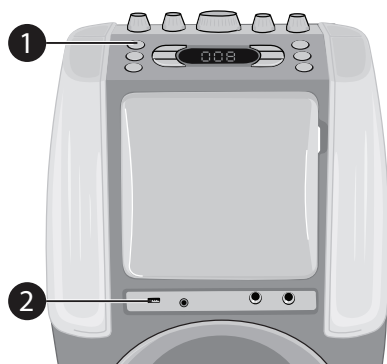

**1** Connect the unit as described previously; it should be connected to a TV (see page 5). Press the **POWER ON/OFF** button to turn the unit on.

**2** Insert a USB flash drive into the USB slot on the unit so it faces upward.

**3** Repeatedly press the **FUNCTION** button to select the USB mode; “---” will appear when searching the drive and then the total number of files will appear.

**Note:** The USB mode cannot be accessed until a flash drive is inserted.

**4** Press the **Play/Pause** ►|| button to start playback; if listening to an MP3+G file, the image and lyrics will appear on the TV screen (if connected).


**Note:** If connected to a TV you will see the selected song and folders on the TV screen.

**5** Adjust the volume to a comfortable level using the **MASTER VOLUME** control.

**Note:** If connected to a TV or other audio source, adjust the volume of the TV using its own volume control.

# Operation

## Playing Songs from the USB (Continued)

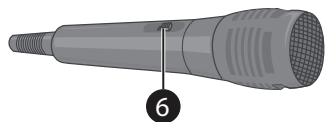

- 6 Connect microphone(s) as shown on page 5, and slide the **ON/OFF** switch on the microphone to the ON position.




- 7 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.

- 8 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards **MAX** to increase the echo effect.



- 9 Adjust the Key for the song using the **Key +/▶** and **Key -/◀** buttons to obtain the best key for the singer.

- 10 **AUTO VOICE CONTROL** can be activated by rotating the **AVC** (Auto Voice Control.) The higher this control is set to, the more the vocals on the multiplex recording will be muted when the singer starts to sing through the microphone. When the singer stops singing, the vocals will resume to normal.

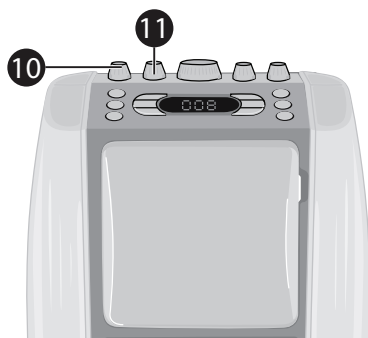

**Note:** This is only for files recorded with this multiplex feature.

- 11 Adjust the balance between the speakers using the **BALANCE** control.

# Operation

## Playing Songs from the USB (Continued)



**12 SKIP:** Advance or go back one track by pressing the **Skip Back** ◀◀/Skip Forward ▶▶ buttons. You can also skip ahead 10 files/tracks using the **10+** button.

**13 REPEAT:** During playback, press the **Repeat/Program** button once to repeatedly play the selected song; the Repeat indicator will blink rapidly. Press the **REPEAT/PROGRAM** button a second time to repeatedly play the selected folder; the Repeat indicator will blink slowly. Press a third time to repeatedly play the USB; the Repeat indicator will light solid. Press it again to cancel Repeat function; the indicator will turn off.

**14 PROGRAM:** You can program up to 20 tracks for playback in any desired order. While in the Stop mode, press the **REPEAT/PROGRAM** button; the Program indicator will blink and "01" will appear on the display indicating the first program is ready to program. Select the first track using the **Skip Back** ◀◀/Skip Forward ▶▶ buttons. Press the **REPEAT/PROGRAM** button again to confirm the entry. Repeat to set up to 20 tracks into memory. When done, press the **Play/Pause** ▶|| button to start playback.

### Notes:

- Press the **Stop** button TWICE to stop and clear the program.
- If more than 20 tracks are attempted to be programmed, "FUL" will appear in the display.

# Operation

## Playing Songs from the USB (Continued)



**15 PAUSE:** During playback, if you wish to pause the music momentarily, press the **Play/Pause ►||** button; the PLAY/PAUSE indicator will blink. Press again to resume normal playback.



**16** Press the **Stop** button to stop playback.



**17** Press the **POWER ON/OFF** button to turn the unit off.

# Operation


## Using a Bluetooth Device



**1** Connect the unit as described previously. Press the **POWER ON/OFF** button to turn the unit on.

**2** Repeatedly press the **FUNCTION** button to select the Bluetooth; “bt” will appear in the display. The Bluetooth indicator will blink as the unit automatically searches for and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

**Note:** You can also press the **PAIRING** button to disconnect any paired devices in order to pair another device.

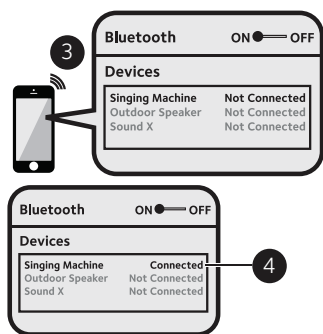

**3** Turn on your device’s Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select “**Singing Machine**” from the device results on the Bluetooth menu.

**Note:** Also refer to the user manual of your Bluetooth device for detailed instructions.


**4** The Bluetooth indicator will light solid.

### Notes:


- If your Bluetooth prompts you for a passcode during the pairing process, please enter “0000” to connect.
- On some Bluetooth devices, once pairing is complete, select your Bluetooth device as “Use as Audio Device” or similar.
- If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 feet/10 meters.
- Nothing will appear on the connected TV when using the Bluetooth mode.

# Operation


## Using a Bluetooth Device (Continued)

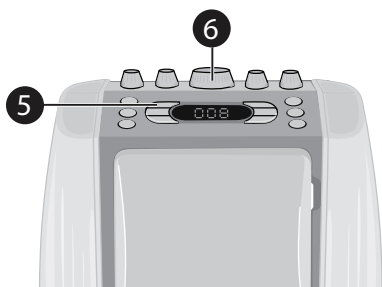

5 To control your Bluetooth device from this unit, press the **Play/Pause** ►|| button to start playback. Press the **Play/Pause** ►|| button during playback to pause the song.

 


6 Adjust the volume to a comfortable level using the **MASTER VOLUME** control on this unit as well as the volume on your Bluetooth device.

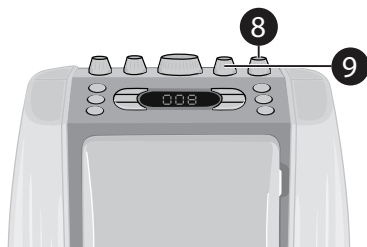

7 Connect microphone(s) as shown on page 5, and slide the **ON/OFF** switch on the microphone to the ON position.


8 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.

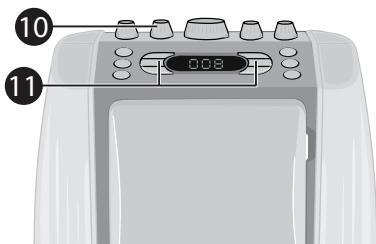

9 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards MAX to increase the echo effect.

10 Adjust the balance between the speakers using the **BALANCE** control.

11 **SKIP:** Advance or go back one track by pressing the **Skip Back** ◀/Skip Forward ▶▶ buttons.

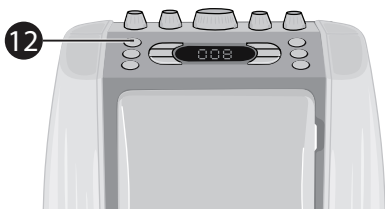


12 Press the **POWER ON/OFF** button to turn the unit off.

### Note:

Use the cradle to hold your Bluetooth device while using the Singing Machine. To install the cradle, see the instructions on page 6.

# Operation

## Using the LINE IN Jack

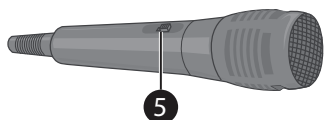

1 Connect the unit as described previously (see page 6). Press the **POWER ON/OFF** button to turn the unit on.

2 Connect the external unit to the LINE IN Jack on the front of this unit. Connecting an external unit will allow the audio to be played through your Singing Machine.

### Notes:

- It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible in this unit when using an external device.

3 Repeatedly press the **FUNCTION** button to select the LINE IN mode; "AU" will appear in the display.

4 Adjust the volume using the **MASTER VOLUME** control on this unit or your external device's volume control.

5 Connect microphone(s) as shown on page 5, and slide the **ON/OFF** switch on the microphone to the ON position.

# Operation

## Using the LINE IN Jack (Continued)



6 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.



7 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards **MAX** to increase the echo effect.

8 Adjust the balance between the speakers using the **BALANCE** control.



9 Press the **ON/OFF** button to turn the unit off.

### **Note:**

Use the cradle to hold your external device while using the Singing Machine. To install the cradle, see the instructions on page 6.

# Operation

## Where to Download MP3+G Files

### Helpful Hints:

The .mp3 and .cdg files are delivered for download in a single, compressed MP3+G.zip file. The MP3+G file cannot be played as a .zip file on a USB flash drive. To play karaoke songs using a USB flash drive, the MP3+G .zip file must be unzipped as follows:

- Connect a USB flash drive to your computer.
- Download the MP3+G file from your Digital Locker and save the .zip file to a folder on your computer.
- Double click the .zip file to open the .zip (you will see the .mp3 and .cdg files).
- Drag and drop the .mp3 and .cdg files to the USB flash drive.
- Remove (eject) the USB flash drive from your computer.

Turn on the Singing Machine and connect the USB flash drive.

To purchase and download karaoke music, please visit <http://store.singingmachine.com> to access over 12,000 of your favorite karaoke songs. You will need a USB flash drive (not included) to transfer the downloads to this unit. Follow these easy steps:

- 1 Go to <http://store.singingmachine.com> using your internet browser, and then register.
- 2 Select and purchase your favorite karaoke music from the Singing Machine Download Store.
- 3 Download your selected purchase(s) from the Singing Machine Digital Locker to your USB flash drive.
- 4 Insert the USB flash drive as shown on page 12 and enjoy!

**Note:** Your downloaded songs can also be burned to a blank CDR/CDRW.

### FAQ

- Where can I get additional help with the file formats?

While on the Singing Machine Store's web page, simply click **FILE FORMATS** at the lower left.

The screenshot shows the Singing Machine Karaoke Channel website. The header includes the Singing Machine logo and 'The KARAOKE Channel'. A navigation bar at the top right contains 'HOME', 'ABOUT US', 'CONTACT US', and 'DIGITAL LOCKER'. The main content area features a search bar, a 'Karaoke Downloads' banner with a 'CDG' icon, and a list of popular songs. The list includes titles like 'I Love Rock 'n Roll', 'Sweet Home Alabama', and 'Hotel California'. A sidebar on the left contains navigation links for 'GENRES', 'COUNTRY', 'POP', etc. A 'CART' section on the right shows a total of \$0.00. At the bottom, there is a 'survey' section and a 'PLEASE GIVE US YOUR FEEDBACK' button.

# Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

## No Power

- Power is not on; press the **POWER ON/OFF** button to turn power on.
- Confirm the AC adapter is connected securely to the back of the unit.
- Connect the unit to a different outlet.

## No Sound – General

- Master Volume is set to minimum; raise volume.
- Correct Function was not selected; select using the **FUNCTION** button.
- If using an external device, raise the volume.

## No Sound – If connected to a TV

- Volume on the TV is muted or too low.
- Correct source (usually AV) was not selected on the TV's menu.

## Lyrics do not appear on the TV screen

- If connected to a TV, Video plug is not connected properly; see page 5.
- If connected to a TV, select the correct source on the TV (usually AV).
- The file/track being played is not a track recording with lyrics. These are the only files that allow you to view the lyrics on the TV screen.
- Nothing will appear on the TV screen when using Line In or Bluetooth.

## No sound from the microphone

- Make sure the microphone is firmly connected to the MIC 1 or MIC 2 jack.
- Make sure the **Mic's ON/OFF** switch on the Mic is set to the ON position.
- Make sure the **MIC VOLUME** setting is not set too low.
- **MASTER VOLUME** is set to minimum; raise volume.

## File(s) on USB jack not playing

- The file is corrupted; replace the file.
- The file is not in a format this unit will play.
- The connected USB device is not supported by the product.

## The Bluetooth device cannot be paired or connected with the unit

- You have not activated the Bluetooth function of your device; see page 16 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press the **PAIRING** button to restart pairing.

## The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise as desired.

# Specifications

## AUDIO

Output Power.....	5 Watts (RMS)
Output Impedance.....	4 Ohms

## CD SECTION

Frequency Response.....	100Hz - 20kHz
Signal-to-Noise Ratio.....	50dB (A-WTD)
Number of Programs.....	20 Step Random Access Programming
Sampling System.....	8 Times Over Sampling

## BLUETOOTH

Bluetooth Version.....	V2.1 + EDR
Working Distance.....	Up to 30 feet/10 meters measured in open space

## USB

Format.....	FAT32
Maximum Capacity.....	32GB

## GENERAL

Power.....	DC12V 1.5A Positive Center
Dimensions - Main Unit.....	14.5 x 11 x 7.4 inches (36.8 x 27.9 x 18.7cm)
Weight - Main Unit.....	6.28Lbs (2.85kgs)
Microphone.....	-74 dB 600 Ohms impedance with 6.3 mm Dynamic Microphone
Aux In.....	3.5mm Stereo Jack

Specifications are subject to change without notice.

Visit Our Website: [www.singingmachine.com](http://www.singingmachine.com)

The Singing Machine Company, Inc.  
4060 E Jurupa Street, Unit B  
Ontario, CA 91761-1413 USA