









▲ When the speaker battery runs low, it will emit an alert tone. ▲ Use the included charging cable to charge the speaker. Make sure it is fully charged before first use. ▲ Disconnect your speaker from your charger when fully charged. Do not charge your speaker for extended periods.

#### Wireless Hands Free Speakerphone

Hands-free speakerphone feature works over Bluetooth with Bluetooth enabled smartphones only.

- 1. Short press the power button to answer an incoming call or to end
- 2. Long press the power button for 2 seconds to reject an incoming



- ▲ Please keep the speaker close in front of your so you may be heard clearly by the listener.
  - ▲ You can use your smartphone to switch between using Hands-free speakerphone and your phone.

## Lighting Control

①Light Button ②Volume Up / Next Track

The Starry UFO Bluetooth speaker features 6 lighting settings. Turn the speaker on and the RGB light will flash red, green, and blue slowly.

③Volume Down / Last Track ④Power Button ⑤Charging Port

 flash red, green, and blue slowly Steady red Steady green 3

Steady blue • • • flash red, green, blue, and colorful quickly flash blue, green, red, and colorful quickly

- ) RGB light off

**№** Button Control

1	Long press	Power on/off
1	Double press	Disconnect device
①	Short press	Pause/Play
_	Short press	Volume down
+	Short press	Volume up
_	Long press	Lasttrack
+	Long press	Next track
-0-	Short press	Changing light mode
	•	
1	Short press	Answer / End a call
①	Long press	Reject a call

### **ATTENTION**

▲ Close the waterproof rubber cover completely before putting the

A Have a connection problem? Remove "Starry UFO" from your device's Bluetooth Devices list, and ensure it's less than 1 meter away. Then try pairing again

- ▲ To preserve battery lifespan, fully charge it at least once every
- month.

   Avoid extreme temperatures (such as high heat fire and direct sunlight). Excessive heat or extreme cold temperatures may damage
- ▲ Do not charge near the water source or in the rain to avoid electric
- snock.

  A Keep the speaker away from heat sources (including all equipment that generates heat), such as stoves, engines.

  A Do not use any corrosive cleaner/oil to clean.

  A voiding dropping.

  Do not disassemble

### ■ RESET THE SPEAKER ■

If the speaker is stuck, press and hold the power button for 10 seconds, then release the button, the speaker now has been reset

#### ■ONE YEAR WARRANTY■

Our products are covered by a 12-month limited warranty, starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser.

# FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not Installed and used in accordance with the instructions, may cause harmful Interference to radio communications.  $\boldsymbol{H}$  owever, there is no guarantee that Interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from
- Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful Interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.