

Note:

- 1) When multiple speakers are successfully synchronized, the first connected Bluetooth speaker will become the primary speaker, other connected speakers are secondary speakers. The Bluetooth indicator of the primary speaker will be solid cyan (3), while that of secondary speakers will flash green (3).
- 2) After synchronizing, you can adjust volume, control music playback, change light modes, and enjoy hands-free phone calls via the primary speaker. When you power off the primary speaker, all connected speakers will power off. For your convenience, it is highly recommended to label the primary speaker.
- 3) Short press (3) on a secondary speaker to disconnect it from the primary speaker. The Bluetooth indicator will change from flashing green (3) to flashing blue (3).
- 4) To switch the primary speaker, you will need to unpair (remove/forget) all previously paired Dazzling Boom speakers from your Bluetooth device and repeat Step 1 to Step 4.

9. HANDS-FREE CALLING FUNCTION

Hands-free calling is only available for Bluetooth-enabled smartphones.

- Answer/End a call: Short press ► to answer an incoming call. Short press ► again to end the call
- Reject a call: Long press ► to reject a call.

Note: In multi-sync mode, the call will only be transmitted to the primary speaker.

10. CONNECTING VIA THE 3.5MM AUX-IN JACK



Make sure your speaker has sufficient power.

1. Turn on the Bluetooth speaker.
2. Connect to an external audio device through a 3.5mm audio cable. Plug one end of the AUX cable into your device's 3.5mm audio jack, then plug the other end into the 3.5mm AUX-IN jack of the Dazzling Boom.

Note:

- 1 When the audio cable is plugged into the speaker, the Bluetooth function will not be available.
- 2 Adjust the audio volume using the portable audio device or audio unit.

SAFETY PRECAUTIONS

Please follow the instructions for all operations and use

1. Do not charge near a water source or in the rain to prevent electric shock.
2. Do not damage the cable, especially the connectors.
3. Unplug the Type-C charging cable when it is not in use or during a thunderstorm.
4. Please keep the speaker away from heat sources (including all equipment that generates heat), such as stoves.
5. Do not expose the speaker to extreme temperatures for a long time. Excessive heat or extreme cold temperatures may damage the battery.
6. Do not attempt to disassemble the speaker.

ONE YEAR WARRANTY

1. Our products are covered by a 12-month warranty, starting from the date of purchase.
2. For quality-related issues, we will, at its sole option, either repair or replace the defective product or part. We are not liable to the buyer for any operational loss or other indirect or consequential losses whatsoever.

Not Covered Under Warranty:

- Damage from outside sources
- Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
- Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
- Items that have expired their warranty period
- Non quality-related issues (after 30 days of purchase)
- Repairs through 3rd parties

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help
 This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


QUICK START GUIDE

DAZZLING BOOM


F29

WHAT'S IN THE BOX

- Bluetooth Speaker x 1
- Type-C Charging Cable x 1
- AUX Cable x 1

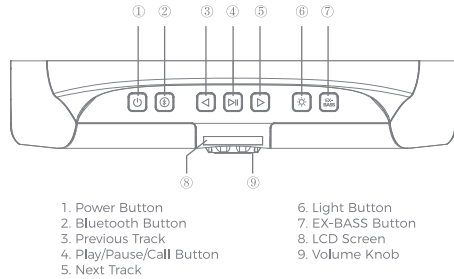

- 1. Power Button
- 2. Bluetooth Button
- 3. Previous Track
- 4. Play/Pause/Call Button
- 5. Next Track
- 6. Light Button
- 7. EX-BASS Button
- 8. LCD Screen
- 9. Volume Knob

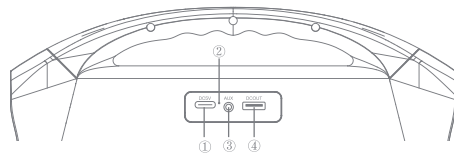

- 1. Type-C Charging Port (for charging the speaker)
- 2. Charging Indicator
- 3. 3.5mm AUX-IN Jack
- 4. USB Charging Port (for charging phones/tablets)

SPECIFICATIONS

Product Name	Dazzling Boom	SNR	85dB
Bluetooth Version	Bluetooth 5.0	Lighting	Mode 1/Mode 2/Mode 3/Mode 4/Mode 5/Light Off
Working Range	100ft (Up to 66ft in Multi-sync mode)	Charging Input	DC 5V/2A
Output Power	60W	Battery	12000mAh Battery

CONTROL BUTTONS

	Long press	Power on/off		Long press	Long press to disconnect a Bluetooth device; long press again to reconnect to the Bluetooth device
	Short press	Check the battery level		Short press	Enter multi-sync mode and pair more speakers
	Short press	Play/Pause		Short press	Answer/End a call
	Turn right	Increase volume		Long press	Reject a call
	Turn Left	Decrease volume			
	Short press	Previous track		Short press	Mode 1/Mode 2/Mode 3/Mode 4/Mode 5/Light Off
	Short press	Next track			Others
	Short press	Enable/Disable Enhanced Bass		Press twice in quick succession	Enable/Disable prompts of power on and power off

LED INDICATORS

Bluetooth Indicator

Mode	LED Status	Description
Bluetooth	Flash blue quickly	Bluetooth pairing
Bluetooth	Solid blue ①	One Bluetooth speaker connected
Multi-sync	Flash green ②	Enters multi-sync mode
Multi-sync	Solid cyan ③ or Flash green ④	When two or more speakers are connected and synced, the Bluetooth indicator of the primary speaker will be solid cyan ③, and that of other speakers will flash green ④


Other Indicators

LED Indicator	LED Status	Description
EX-BASS	Solid white	Enhanced Bass enabled
EX-BASS	Off	Enhanced Bass disabled
	Solid white	Mode 1/Mode 2/Mode 3/Mode 4/Mode 5
	Off	Light Off

GETTING STARTED

1. CHARGING YOUR SPEAKER

- 1 Fully charge the built-in battery via the Type-C port before using it for the first time, which will prolong the battery lifespan.
- 2 When charging, the speaker shows the battery level on the LCD screen, in 10% increments, and the BAT icon will flash.
- 3 The charging indicator will glow solid red when charging and go off when fully charged.
- 4 Please recharge the speaker at least once every 3 months.

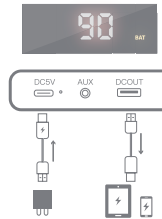

2. CHECKING THE BATTERY LEVEL

- Short press and the LCD screen will show the battery percentage.
- 1 When the remaining battery charge is below 20%, there will be a battery status notification. To protect the battery, it is recommended to charge it when the battery level goes down to 10%.




3. POWERING ON/OFF

- To power on, long press for 2 seconds until the power indicator turns solid white. You will hear a prompt tone and the Bluetooth indicator will flash blue indicating the speaker is in pairing mode.
- To power off, long press for 2 seconds until all indicators turn off.

4. ADJUSTING VOLUME

- Turn the volume knob and the LCD screen will show the volume level (31 levels).
- To increase the volume, turn the volume knob clockwise.
- To decrease the volume, turn the volume knob anticlockwise.

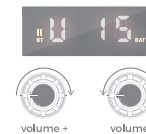

volume + volume -

5. CONTROLLING LIGHT

Press to toggle between five different light modes or turn the lights on or off.

6. CONNECTING A BLUETOOTH DEVICE

Please make sure your Dazzling Boom has sufficient battery power. Otherwise, it may fail to be connected when the battery is too low.

- 1 Long press for 2 seconds to power on the speaker and enter pairing mode.
- 2 On your Bluetooth device, turn on Bluetooth, tap "Dazzling Boom" and pair. Once successfully paired, the Bluetooth indicator will be solid blue ① and you will hear a prompt tone.



To reconnect the Bluetooth-enabled device:

- When you turn on this speaker next time, it tries to reconnect the last connected device automatically.
- If not, manually select "Dazzling Boom" on your Bluetooth device to connect.
- 1 If you want to connect to a new Bluetooth device, please disconnect the existing Bluetooth device.

7. DISCONNECTING BLUETOOTH CONNECTION

Long press on the speaker to disconnect a Bluetooth device. The Bluetooth indicator will flash blue and you will hear a prompt tone. Long press again to reconnect to the Bluetooth device.

8. PAIRING MULTIPLE BLUETOOTH SPEAKERS (MULTI-SYNC MODE)

You can get more immersive surround stereo sound and sync the same music throughout your space by connecting two or more Dazzling Boom Bluetooth speakers as follows:

IMPORTANT:

1. Before synchronizing your speakers, ensure all speakers are powered off. (Use your Bluetooth device's Bluetooth settings to remove/unpair all previously paired Dazzling Boom Bluetooth speakers if you have paired them.)
2. Turn on and operate your speakers in the following order. When connecting the first speaker ("Primary Speaker"), please ensure other speakers ("Secondary Speaker") are powered off.

Step 1 Turn on Primary Speaker

On Primary Speaker, long press for 2 seconds to power on the speaker and enter pairing mode. The Bluetooth indicator will flash blue.

Step 2 Pair Primary Speaker with your Bluetooth device

On your Bluetooth device, turn on Bluetooth, tap "Dazzling Boom" and pair. Once successfully paired, the Bluetooth indicator will be solid blue ① and you will hear a prompt tone.

Step 3 Put Primary Speaker in the multi-sync mode

On Primary Speaker, short press to enter the multi-sync mode. The Bluetooth indicator will turn cyan ② and you will hear a prompt tone.

Step 4 Put Secondary Speaker in the multi-sync mode

On Secondary Speaker, long press for 2 seconds to power on and short press to enter the multi-sync mode. Secondary Speaker will emit a prompt tone and its Bluetooth indicator will flash green ③. Wait for 3-5 seconds until you hear another prompt tone. Then Secondary Speaker is successfully connected to Primary Speaker.

- 1 Repeat Step 4 for each Dazzling Boom speaker you want to connect.