

USER (EN) MANUAL

TORCH LIGHT BLUETOOTH SPEAKER

Please read carefully before use

INTRODUCTION

Thank you for purchasing the AOMAIS Torch Light Bluetooth Speaker. This upgraded Bluetooth speaker can be used as a portable speaker and atmosphere lamp that allows you to enjoy music wirelessly in a campfire atmosphere, and relax your mood. Fantastic for placing at room, patio, yard, garden, party and camping ...

WHAT YOU GET

 
- AOMAIS Torch Light Bluetooth Speaker x 1
- Stick Pole x1
- Wall Mount x1
- Hook x1
- Type C Charge Cable x1
- User Manual x1

TECHNICAL PARAMETERS

Model	L12	Bluetooth	V5.0(CSB)	Working Range	≥20M
Output Power	10W	SNR	>75db	Flame Light	3 Modes
Waterproof	IP65	Battery	3.7V2000mAh	Charging Time	2.5H

BLUETOOTH PARING

Press and hold




1. Press and hold the Power Button for 3-4 seconds to power on your speaker.



Pairing Mode Blue Flashing LED Light

 2. All buttons emit blue light and flash rapidly to indicate that it's searching for Bluetooth devices.




3. Go to the Bluetooth settings menu on your phone or other devices. Make sure that Bluetooth is turned on. Connect to the device listed as "TORCH LIGHT."



Paired Blue LED

 
4. The blue LED light on buttons flashes about every 2 seconds to indicate that your speaker is paired with your device. Automatically power off in 5 minutes when Bluetooth is not connected.




Multi-Connect

5. You can pair 2 or more AOMAIS Torch Light Speakers at one time for stereo mode. After your device is connected to one speaker (the main speaker), tap the Bluetooth button twice on the main speaker, then turn on other speakers and tap the Bluetooth button twice on each other speakers, now all the speakers are connected for stereo effect.

 
USING YOUR SPEAKER



 
1. Flame Light:
Press the Light On/Off button to turn the light on or off. Short press to adjust the mode of the light: Flicking/Candle/Always On



 
2. Play Music/Answer a Call:
Short press the Play/Pause button to play a track or to answer an incoming call. Press it again to pause a track or end a call. Press and hold the Play/Pause button to reject an incoming call.



 3. Button "+":
Tap once to increase the volume. Press and hold to advance to the next track in a playlist.



 4. Button "-":
Tap once to turn down the volume. Press and hold to return to the previous in a playlist.



5. Bluetooth:
Press and hold the Bluetooth button to disconnect/reconnect Bluetooth. Tap twice to CSB Mode which supports multi-connect function.

CHARGING YOUR SPEAKER



While charging, red LED light flashes and will go out once charging is complete.

MAINTENANCE & CARE

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on the USB charging cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

AOMAI'S ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.
This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.
What Is Not Covered by Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Email support@aomais.com
or visit our website at
<https://www.aomais.com>

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.