

T730D

CLoud NEST


USER MANUAL

Enjoy Time With Music


Customer Service

After-sales Contact: +1 (815) 348-9968
E-mail: support@forteclear.net
Website: www.forteclear.net

 
Packing List




Earbuds * 2



Charging Case * 1




Ear Caps * 3

 

Type-C Charging Cable * 1

 Product Overview

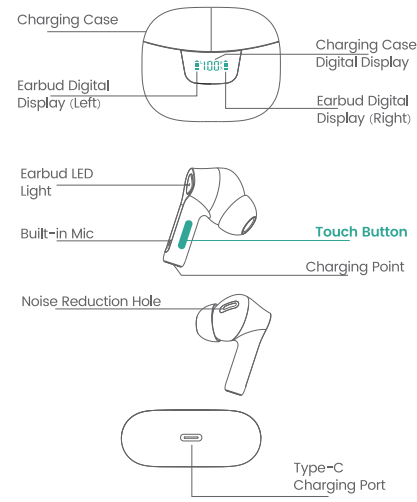


Note: the touch button is on the side of the earbuds

Pairing

Bluetooth Pairing

- Take out the earbuds from the charging case, and they will automatically pair with the TWS and turn on.
- Turn on your bluetooth of your smart device. Choose the bluetooth which named "Cloud Nest". The earbuds will pair your smart phone successfully. When you hear the prompt sound "connected".

 Note: If there is a pairing record. You need to disconnect from the record device. Otherwise the earbuds will automatically connect the device you connected before.

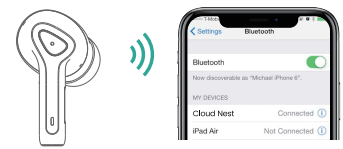

Clear Bluetooth Pairing Record

Continuous click the left/right earbud's "Touch Button" 8 times to clear the Bluetooth pairing record.

Power ON / OFF

Power ON

Put the earbuds in the charging case first then take out them from the charging case, they will be power on automatically.

Power OFF

- Put the earbuds on the charging case, the earbuds automatically shuts off.
- If the earbuds are not being connected to other devices. Press and hold the "Touch Button" for 15 seconds to shut off the earbuds.

Note: The earbuds can't be turned off when they're connected to devices.

Calling

When you are receiving call. How to control with the "Touch Button":

Reject Call

Press the left or right "Touch Button" for 2 seconds when call is coming.

Receiving / End Call

Click the left or right "Touch Button" once when call is coming. Double click the left or right "Touch Button" when need to end a call.

Play Music

Play / Pause

Twice-Tap (L/R)

In the music playing state, double click the left or right "Touch Button" to play music. Double click the left or right "Touch Button" again when the music is playing to pause the music.

Previous Track

Triple-Tap (L)

In the music playing state, continuous click the left "Touch Button" 3 times to play the previous song.

Next Track

Triple-Tap (R)

In the music playing state, continuous click the right "Touch Button" 3 times to play the next song.

Volume Up / Down

When playing music. Long press the Left/Right earbud's "Touch Button" 3 seconds and hold on to Lower/Raise the volume.

A. Lower the volume

Long press (Left)

B. Raise the volume

Long press (Right)

Voice Assistant

Continuous click the Left/Right earbud's "Touch Button" 5 times to activate the Siri voice assistant. Click the Left/Right earbud's "Touch Button" 5 times again to exit the Siri voice assistant.

Specifications

Model Name: Cloud Nest
Bluetooth Version: V5.3
Support: HSP/HFP/A2DP/AVRCP
Transmission Range: 100 feet (without obstacle)
Case Battery Capacity: 300mAh
Music Time (Earbuds): About 5H
Earphone Charging Time: 1-1.5H
Charging Case Time: 1-2H
Input: 5V/0.5A
Frequency Range: 2.40 GHz-2.48 GHz
RF Sensitivity: -94 ~ -90dBm

Note: When the charging case is fully charged. It can provide about a total of four charging times for the earbuds.

Warnings

- Support only IOS system equipment and part of Android equipment.
- When the Battery is low, there will be an alarm sound of "Battery Low".
- Has been connected to the device, the earbuds will be automatically connected again when it is power on.
- Low Battery Warning:
 - When the earbud is in low battery. The earbud's white light flashes once every 5 seconds until power off.
 - Earbuds will automatically shut down when the low battery and the connection time (10 minutes) is exceeded.
- Charging Indicator:
 - Earbud Charging: The earbud's white light pulse 3 second per once and the charging case's blue light solid, the indicators turn off after full charge.
 - Charging Case Charging: The charging case red light flashes for 1s once, solid when full charge, turn off after pull out the cable.

Questions

Q: When my headset can be connected to the mobile phone normally, but it cannot be connected to the computer or another mobile phone.

A: Please turn off the bluetooth of the mobile phone that can be connected normally, and then take out the headset to connect with other devices. (Note: The headset has an automatic pairing function, it will automatically connect to the previously connected device, so the second device cannot be connected.)

Q: Is this headset waterproof?

A: The earphones have a nano-coating, which can be applied to daily waterproofing, such as sweat and rain. But it is not suitable for swimming.

If you have any problems with your headset, you can contact our after-sales email: support@forteclear.net. We'd be more than happy to fix your problem, and if we can't, we'd love to send you a new headset.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

120*90MM
105G 铜版纸彩色正反面印刷
6折页