

File name: D05BW\_1601G402\_Soundsurf\_WMHP571BKCA\_IM\_R.ai

Job #: C1601G4_HOD	Country of origin: n/a
Supplier: HoMedics Group Canada	Printer name: n/a
Packaging type: IM	Printer phone: n/a
Package dimensions: H: 11 in W: 8.5 in	Printer email: n/a
Brand/Buyer: Black Web/Lisa Pinto	Print material/stock: n/a
Department #/ Category: D05	Translation resource: n/a
Walmart VSN: WMHP571BKCA	Additional notes: n/a
UPC: n/a	

IMPORTANT DATES

Due to printer: n/a	Pack-out: n/a	Shipping: n/a	In-store: n/a
---------------------	---------------	---------------	---------------

Process colors: **K**

PMS colors:

Total Coating: **K**

Note: this color represents dieline and does not print

Fonts: Myriad Pro Bold, Myriad Pro, Gotham-Medium, Myriad Pro Semibold, Myriad Pro Bold Condensed, Myriad Pro Condensed, Myriad Pro Semibold Condensed

**BENCHMARK**  
DESIGN • PHOTO • PRINT


BENCHMARK // No. 11, Jinxia Road, ChangAn Town, Dongguan City, Guangdong Province, China 523852  
contact: Chris C  
US Tel: +1 888-415-5551  
China Tel: +86 (0)769-8176-0350

Revision log  
01/22/16 HL first draft

SKU Number: **402** Walmart Packaging Contact:

Walmart or approved Art Adaptation Resources cannot distribute fonts to printers or suppliers. Fonts can be purchased at: myfonts.com

# Bluetooth Speaker Model:F2

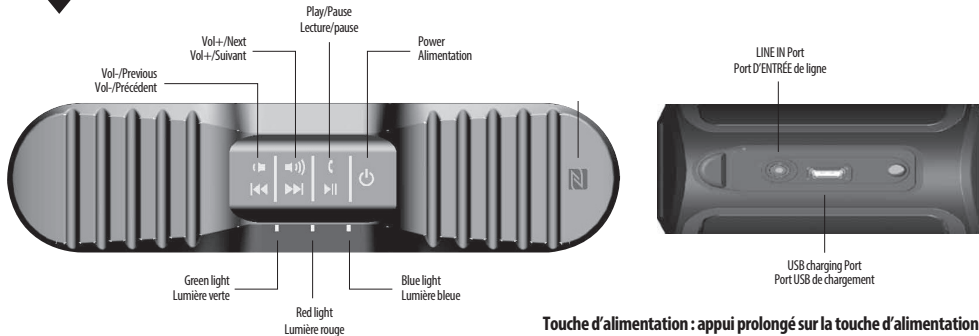

11 in  
279.4 mm

**Power button Long press power on and off**

**Pause/play:**  
When playing music, use a short press to play/pause button. When a call is coming in, use a short press of the Play/Pause button to answer an incoming call.  
Long press will reject the call. During the phone call, use a short press of play/pause button to end the call, Long press to move call from Speaker to device.

**Volume Buttons**  
Use a short press of the "►" button to adjust volume up. Long press of the "►" button to go to the next track. Use a short press of the "◄" button to adjust volume down. Long press of the "◄" button to go to the previous track.

**Light Indicator**  
Power Indicator: When the power is on, there is a solid green light  
Bluetooth indicator: When Bluetooth is ready to pair, the blue light will flash quickly; once paired the blue light will flash slowly.  
Charging indicator: When battery is low, a red light will start to flash, please charge the speaker. When charging is completed, a green light will turn on.

**BLUETOOTH® CONNECTION**  
Enable Bluetooth on your device and choose BW SOUNDSURF from the list.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:  
(1) l'appareil ne doit pas produire de brouillage, et  
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**FCC Warning**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning:**  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

8.5 in  
215.9 mm

**Touche d'alimentation : appui prolongé sur la touche d'alimentation « marche/arrêt »**

**Pause/lecture :**  
Pendant la lecture musicale, faire un court appui sur la touche lecture/pause. Lors d'un appel entrant, faire un court appui sur la touche lecture/pause pour répondre à l'appel.  
Long press will reject the call. During the phone call, use a short press of play/pause button to end the call, Long press to move call from Speaker to device.

**Touches de volume**  
Faire une courte pression sur la touche « ► » pour augmenter le volume. Une pression longue sur la touche « ► » fait avancer à la piste suivante. Faire une courte pression sur la touche « ◄ » pour diminuer le volume. Une pression longue sur la touche « ◄ » fait reculer à la piste précédente.

**Voyant lumineux**  
Voyant d'alimentation : une lumière verte continue s'allume lorsque l'alimentation est en mode « marche »  
Voyant Bluetooth : une lumière bleue clignote rapidement lorsque la fonction Bluetooth est prête à être jumelée, puis une fois jumelée, la lumière bleue clignotera lentement.  
Voyant de chargement : une lumière rouge commence à clignoter lorsque la charge de la pile devient insuffisante; recharger alors le haut-parleur. Une lumière verte s'allumera lorsque la charge sera complète,