User manual Model: F3

Brand: AOMAIS

Specification:

Model:AOMAIS OUTDOOR	Power(W):5W
Size:3.74"*3.74"*1.57"	Loudspeakers:Φ67mm
Weight:	SPL(mV):200mV
BT Version:V3.0	THD:1% Volume max
Waterproof Level:IPX7	Load Impedance(Ω):4 Ω
Charge Time:3 hours	S/N(dB):≥70dB
Playtime:	Max Noise(mV):≤3mV
Power Supply:3.7V Lithium battery	Charge Voltage:5V/1A
1500 mAh	

Package Components

1*AOMAIS OUTDOOR

1*USB Cable

1*Aux-in Cable

1*Quick Start Guide

Operations

1.Long press the button of Power,the blue indicator flashes quickly with voice prompt. The speaker will built in BT mode automatically without Aux-in cable.

2. The speaker will be switched in Aux-in mode automatically once with

Aux-in cable being inserted.

A:Bluetooth mode operation:

1. Speaker will be paired with last device automatically in 30s. The blue

indicator flashes quickly when the speaker is searching for Bluetooth

could be paired.(The pairing time will be different depending on different

devices)

2. Turn on the Bluetooth in your devices setting and select AOMAIS

OUTDOOR until voice announced. The blue indicator flashes slowly

once paired successfully.

3.Play music after the Bluetooth is well paired.

4. When there is a phone call coming, answer and hanging it up via press

the button of Pause once.Long press the button of Pause to reject the call

if necessary.

B:Aux-in mode operation:

1. The speaker will be switched in Aux-in mode once the Aux-in cord in

inserted.

2. The speaker can be connected with computer, Mp3 player by Aux-in

cord.

Functions

Button

1.Power:Long press the button to turn the speaker on and off.

2.Pause/Play/Hands-free:In playing mode, short press the button to pause

or play music. When there is a call coming, short press the button to

answer it and then press once to hang it up,long press it for about 2

seconds to reject answer it.

3.Language setting

Press the previous(Volume+) and next(Volume-) tone button together, then

will change the language

4. Volume/Track

Short press the button to select volume up or down

Long press the button to select previous track or next track

Short press both of them to change default language,4 language could be

selected.

Long press both of them about 5 seconds to cut the BT off

Charge:Please use DC5V/1A adapter

Line in cable:Please use 3.5mm cable line in the input port,BT will cut off

automatic change to line in mode

Indicator:

Power on: The left green light in solid bright once the speaker is turned

on.

BT indicator (Blue): The blue light flashes quickly means it haven't connect the BT and flashes slowly once pairing is succeeded

Line in indicator: The blue light flashes slowly when connected

Charge indicator:The red light will flashed if the battery run low(3.6V) and will keep in red when charging.Once the speaker was fully charged,the red light turns off and green light turns on

Notice:

The speaker will be powered off automatically after 2 minutes if there is neither connecting nor working speaker will be powered off automatically after 15 minutes if it is not working even enough connected with bluetooth

Warm note:Please be attention the USB cover is keep tightly before you put it to test under water,otherwise it will damage the device

FAQ

1.Poor sound quality

Please make sure the speaker and device is in effective transmission distance(32 feet) and there is no barrier between them.

2.BT can not be paired

Please ensure the both of the cell phone and speaker are in pairing

mode. If the blue indicator is not flashes quickly, please restart the speaker till it is.

Please ensure that there is no Aux-in cord is insert.Bluetooth is disconnected once with the Aux-in cord in.One speaker could be paired with one device once.That means that when you are going to pair the speaker with the second different device, you may have to turn BT of the previous one off or remove the speaker from the BT record.

3.Can not charge the speaker

Please change the other charging cord or use an AC adapter to have a try again.

4. Speaker shuts off automatically

Please ensure the power is full. The speaker will be powered off automatically 2 minutes if there is neither connecting nor working and will be powered off automatically 15 minutes if it is not working even though Bluetooth connected. Please restart the speaker if there is any occurrence happens above.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between thee quipment and receiver.

- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

* RF warning:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.