

90mm

125mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

10

9

8

7

1

2

90mm

125mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

90mm

1

2

3

4

5

6


Do You Have Questions? Find Answers at
<http://www.popchose.net>

Find Help with:

- Technical Problems
- Product Updates
- And More

Live Chat Support Available

You can also contact us at:
Phone: 1-281-939-9971
Email: support@popchose.net



NOTICE

Other specifications adapter is strictly prohibited to access this product.

Non-professionals do not dismantle the soundbar. Products and switching power supply are with voltage.

Please unplug the switching power supply when you don't use or go out for a long time.

Q&A

Q:What to do when the soundbar is in the line in mode but no sound?
A:There is a green light on the led when it's in the line in mode. Then, make sure that no other Bluetooth device is connected to this product. If there is, stop Bluetooth playing or disconnecting.

Q:What should we do if the remote doesn't work?
A:Make sure the battery insulation film is removed. If the first step is OK and the remote still doesn't work, you should replace the remote batteries with new ones(CR2025).

10

Five Star Warranty

Our company provides customers with 6 MONTHS warranty from the date of purchase. (You will receive extra 6 months warranty if you register on our website.)

Contact us

For any inquiries or comments concerning our products, please email to support@popchose.net. We will get you back within 24 hours. If there are any quality-related issues with this product, you may request a REPLACEMENT OR REFUND by contacting us.

Website: <http://www.popchose.net>

 
STATEMENT

We're only able to provide after-sales service for purchases made directly from POPCHOSE. If you purchase through a different retailer, please contact them for any exchange or refund requests.

9

Mounting the unit on a wall

Insert the green wall anchors into the wall, and insert the metal screws into them. Then, mount the unit on the wall.

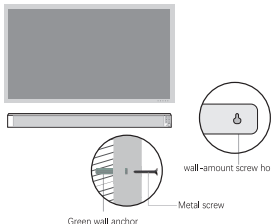

Green wall anchor Metal screw wall-mount screw holes

 
8

Installation

The unit can be installed on a TV stand or mounted on a wall.

Installing the unit on a TV stand etc.


Position the unit with the two Silicone stand facing down.

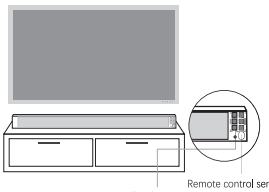

Soundbar button Remote control sensor

7

POPCHOSE



User Manual
Model:POPCHOSE-S1
POPCHOSE SURROUND SOUNDBAR

1

Packing list

- 1x POPCHOSE Soundbar
- 1x Power Cable
- 1x 3.5mm Audio Cable
- 1x Remote Control
- 1x User Manual
- 2x Wall Anchors
- 2x Wall Mount Screws

Specification

- Watt: 15W*2
- Channels: 2.0
- Speaker quantity: 2.25 inches*4
- Bluetooth operating range in open area: Up to 33 feet.
- Remote control operating range: Up to 16 feet.
- Signal to Noise Ratio: >92dB
- Frequency Response Range: 60-20000Hz
- Distortion: <0.2%
- Peak Sound Pressure: >102dB
- Power Input: AC 100-240V~ 30/60Hz
- Dimensions: W810 x H66 x D62mm
- Item Weight: 1670g / 3.68 pounds

Product Introduction

1.Power - Press to turn soundbar on or off. (The blue light means powering on.)

1

2.Mode - Press to change the mode (Bluetooth mode, Line in mode, USB mode).

 
3,4. VOL +/- - Press to change the song. Long Press to adjust the volume.

5. D/P/PAUSE - Press to play or pause.


6. MUTE- Mute audio output.

7. Remote control sensor.

8. Indicator - Show the operation and setting status.

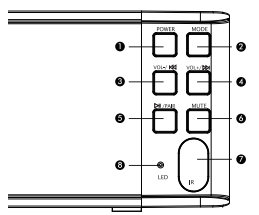

2

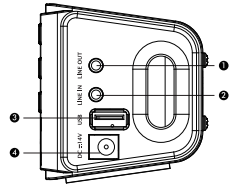 


1. LINE OUT jack - Through the output of audio signal line, the sound signal that the product is playing can be output to other active sound, such as connecting to an external active subwoofer to expand the low frequency without affecting the work of the product.
2. LINE IN jack - You can play other kinds of equipment sound, such as computer, mp3, television and so on.
3. USB IN jack.
4. Power Port.

3

USING THE REMOTE

1	Power - Press to turn on or off.
2	Mute - Press to mute/unmute.
3	Volume + - Press to increase volume.
4	Volume - - Press to decrease volume.
5	Previous - Press to return to previous.
6	Play/Pause - Press to play or pause.
7	Next - Press to skip to the next track.
8	Volume ++ - Press to increase volume.
9	BT - Press to enter Bluetooth mode.
10	LINE IN - Press to enter line in mode.
11	USB - Press to enter USB mode.



The music selection function and Play/Pause function only can be used in USB and Bluetooth mode.

4

LED Indicators

Light Mode	Status
Flash White Light	Standby
Flash Blue Light	Power on/ Bluetooth Mode
Solid Blue Light	Pair successfully
Solid Green Light	LINE IN Mode
Solid Red Light	Not reading the USB
Flash Red Light	Reading the USB

Using Bluetooth Mode

Press the Power button until the indicator turns from white light to blue light.

To pair the Soundbar with a Bluetooth device:

- 1.Press 3 times the MODE button on the soundbar or the BT button on the remote until the LED indicator flashes blue light.
- 2.You can now search for the Soundbar(POPCHOSE-S1) using your Bluetooth device. Once the device is paired, the LED Indicators will stop flashing.
- 3.Play audio from your Bluetooth device. Volume can be controlled on your source device and the Soundbar.

5

Your Soundbar is not equipped with a microphone, so it can't operate as a hands-free device for a smartphone. The Bluetooth signal has a range of up to 33 feet.

Using LINE IN Mode

1. Plug the audio cable into the line in jack of the soundbar and plug the other end into the line out jack of the resource device.
2. Press the Power button until the indicator turns from white light to blue light.
3. Press 2 times the MODE button on the soundbar or the LINE IN button on the remote until the LED indicator shows green light.

In either mode state of LINE IN or USB, as long as there is a Bluetooth signal to the product, the original mode signal will be interrupted to play Bluetooth signal. When the Bluetooth signal stops or disconnects, the product will replay the original signal.

Using USB Mode

1. Plug the U Disk into the USB in jack.
2. Press the Power button until the indicator turns from white light to blue light.
3. Press 1 time the MODE button on the soundbar or the USB button on the remote until the LED indicator shows red light.

6

125mm

FCC WARNING:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

11

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

13