

## RL78/G1D

R01AN2919EU0100\_RL78G1D  
Rev. 1.00

### RL78/G1D Solution Kit – PMOD Module Hardware Manual

Sept. 15, 2015

#### Introduction

This document represents RL78/G1D Solution Kit's PMOD module. The document describes hardware platform information such as PMOD™ peripheral connection, RL78/G1D-SK Bluetooth® module interface and its Bluetooth® connectivity, bill of materials, and schematics.

#### Target Device

##### RL78/G1D, G13 Group (R5F11AGJ)

This Solution Kit's PMOD module includes Renesas' Intelligent Bluetooth® Smart device with part number starting with R5F11A (256 KB program flash memory, 20 KB RAM and 8 KB data flash memory).

---

**Contents**

<b>1. Overview .....</b>	<b>3</b>
<b>1.1 Specification Outline .....</b>	<b>3</b>
<b>2. RL78/G1D-SK PMOD module interface .....</b>	<b>4</b>
<b>3. RL78/G1D-SK Bluetooth module Pin Configuration .....</b>	<b>5</b>
<b>4. RL78/G1D-SK PMOD Module Design Bill of Material .....</b>	<b>6</b>
<b>5. Circuit Diagrams.....</b>	<b>7</b>
<b>Appendix A - References .....</b>	<b>8</b>
<b>Appendix B - Conformity Assessment.....</b>	<b>9</b>

## 1. Overview

RL78/G1D-SK PMOD module has two sections: Bluetooth® module (RL78/G1D-SK) and PMOD™ connector (PMOD) with power consumption measurement.

This module allows you to measure current consumption for RF section and microcontroller (MCU) section using R1 and R4 respectively. To measure current, remove the resistor and attach current probe to the resistor pads. Read the current value from the meter.

The PMOD and RL78/G1D-SK sections are divided by breakaway groove at bottom side. Figure 1 shows top and bottom view of the module including breakaway groove marking. After breaking the board, you get small Bluetooth® Smart module (RL78/G1D-SK) which has 30 solder pads at bottom side for power supply, debug/program interface, and I/O interface. Once broken into two pieces, the PMOD™ section is of no use.

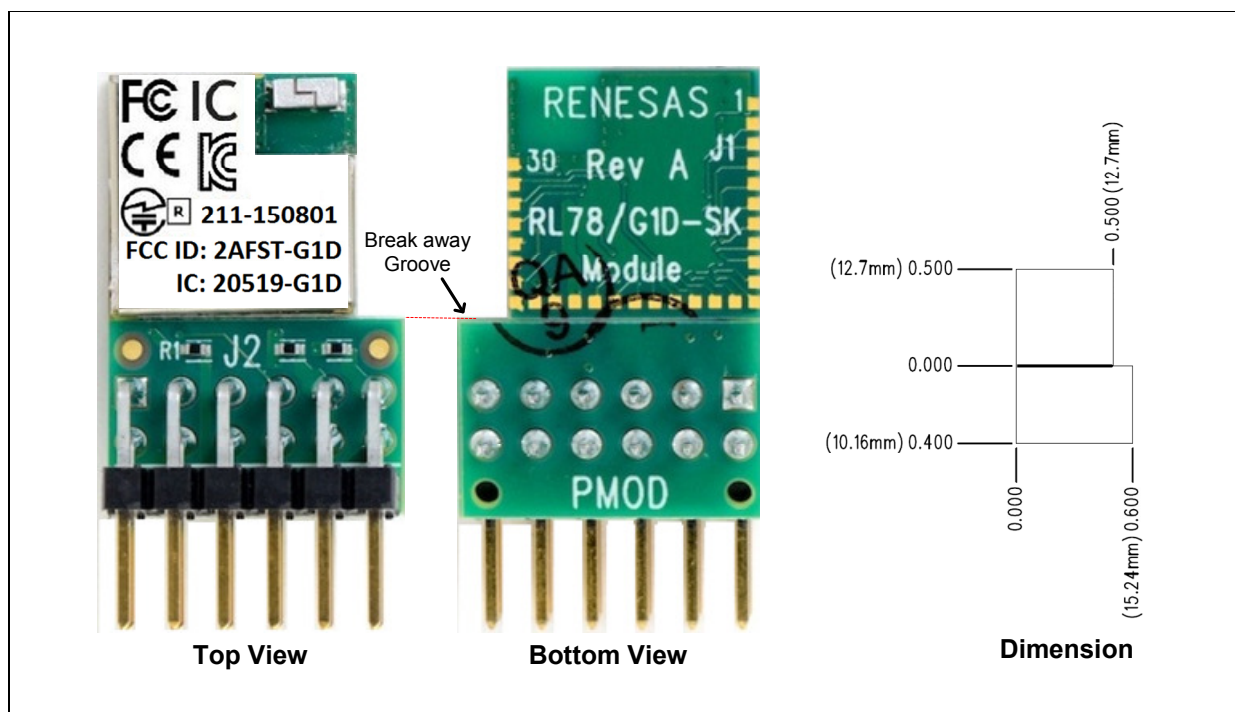


Figure 1 RL78/G1D-SK PMOD module

### 1.1 Specification Outline

The specification of RL78/G1D-SK PMOD module is described as below Table 1.

Table 1 RL78/G1D-SK PMOD module Specification


Item	Content
Dimension	22.86 mm x 15.24 mm ( 0.9 inch x 0.6 inch)
Operation Power Supply Voltage	3.0 V
Maximum Power Supply Voltage	3.6 V
Average Operation Current	10 $\mu$ A <sup>Note1</sup>
Maximum Total Output Current	150 mA <sup>Note2</sup>
Operating Ambient Temperature/Humidity	0°C to +60°C, 10% to 80% RH (non condensing)
Storage Temperature	-15°C to +60°C, 10% to 80% RH (non condensing)

Note 1: One-second interval with keeping Bluetooth® connection

Note 2: Refer Electrical Specifications of RL78/G1D User's Manual: Hardware, R01UH0515EJ0100 [1]

## 2. RL78/G1D-SK PMOD module interface

For interface connection, the RL78/G1D-SK PMOD module has 2x6 pin, standard 0.1-inch pitch right angle male connector. Using this connector, you can program or debug RL78/G1D-SK Bluetooth® module. If you program firmware in Modem configuration, the module can be used for Bluetooth® communication by plugging into one of the PMOD connectors on the Renesas RDK board like YRDKRL78-G14. The PMOD connector pin number and pin orientation are shown in Figure 2, and Table 2 shows the pin configuration.

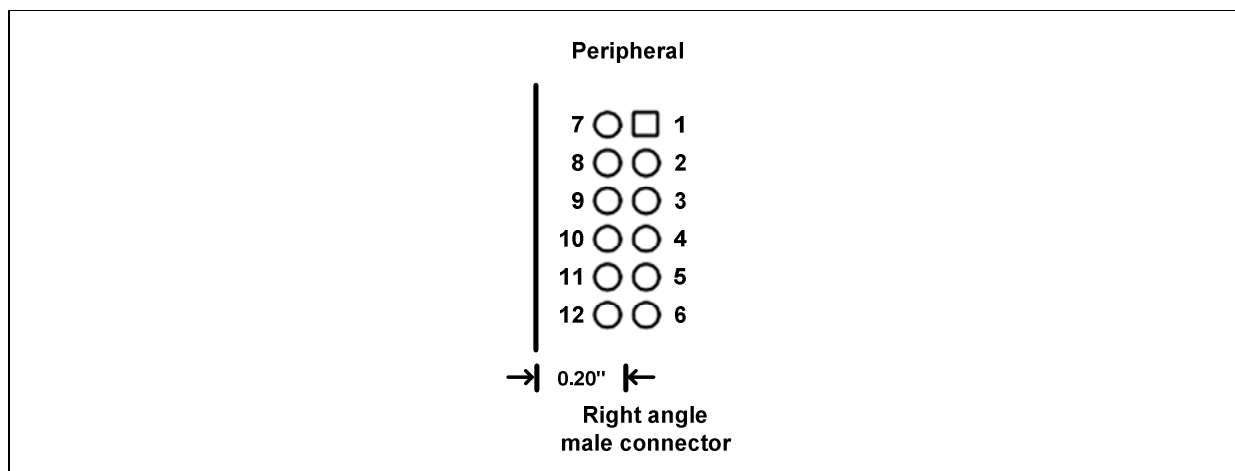

**Figure 2 PMOD connector pin assignment for RL78/G1D-SK PMOD module**

**Table 2 Interface between Host and Peripheral PMOD**

PMOD Pin Number	Solution Kit (Host)	RL78/G1D-SK PMOD (Peripheral)	PMOD Signal
1	PMOD-WAKEUP	P30	PMOD_CS
2	PMOD-TxD	P11 (RxD0/SI00)	PMOD_MOSI
3	PMOD-RxD	P12 (TxD0/SO00)	PMOD_MISO
4	PMOD-SCK	P10 (SCK00)	PMOD-SCK
5	GND	GND	GND
6	VDD (3.3 V)	VDD (via R1 and R4)	VDD
7	PMOD-SDIR (INTP)	P21	PMOD_PIN7
8	PMOD-GPIO	nRESET	PMOD_PIN8
9	PMOD-GPIO	P16	PMOD_PIN9
10	PMOD-GPIO	TOOL0	PMOD_PIN10
11	GND	GND	GND
12	VDD (3.3 V)	VDD (via R1 and R4)	VDD

The PMOD connector has flexible interface to communicate either UART or CSI mode. The RL78/G1D-SK PMOD module can support five communication modes based on programmed firmware as below. Refer document R01UW0095EJ0117 [2] for detail.

- ❖ 2-Wire UART
- ❖ 3-Wire UART
- ❖ 2-Wire UART with branch
- ❖ 4-Wire CSI
- ❖ 5-Wire CSI

### 3. RL78/G1D-SK Bluetooth module Pin Configuration

After breaking away the PMOD connector of the PMOD module, you get Bluetooth® module, with dimensions 12.7x12.7 mm (½ inch square). The module has 30 gold plated pads at bottom layer and their respective functions are described in Table 3 . Refer MCU device detail in RL78/G1D User’s Manual: Hardware, R01UH0515EJ0100 [1].

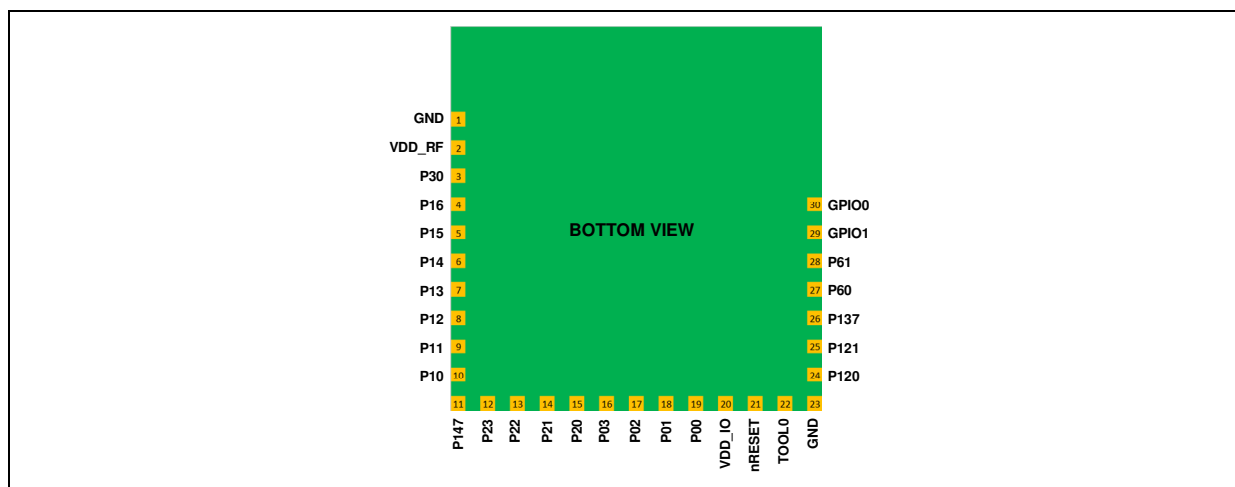


Figure 3 RL78/G1D-SK module pin configuration

Table 3 RL78/G1D-SK module Pin Function

Pin Number	Designator	Description	Remark
1	GND	Ground	
2	VDD_RF	RF +3.0 volt power supply	
3	P30	GPIO/External Interrupt Input 3 / Real-time clock (1 Hz) Output	
4	P16	GPIO/ Timer01 Input, Output / External Interrupt Input 5	
5	P15	GPIO/ CSI20 clock/ I <sup>2</sup> C 20 clock Output/ Timer02 Input, Output	I <sup>2</sup> C 20: Simplified I <sup>2</sup> C
6	P14	GPIO/ CSI20 Input/ I <sup>2</sup> C 20 Data/IIC0A clock Output/ Timer03 Input, Output	I <sup>2</sup> C 20: Simplified I <sup>2</sup> C
7	P13	GPIO/ CSI20 Output/ I <sup>2</sup> C 0A Data/ Timer04 Input, Output	
8	P12	GPIO/ CSI00 Output / UART 0 Transmit Output / Timer05 Input, Output	
9	P11	GPIO/ CSI00 Input/ UART 0 Receive Input/ I <sup>2</sup> C00 Data/ Timer06 Input, Output	
10	P10	GPIO/ CSI00 clock / I <sup>2</sup> C00 clock Output / Timer07 Input, Output	
11	P147	GPIO/ Analog Input 18	
12	P23	GPIO/ Analog Input 3	
13	P22	GPIO/ Analog Input 2	
14	P21	GPIO/ Analog Input 1/ Analog Reference Minus	
15	P20	GPIO/ Analog Input 0/ Analog Reference Plus	
16	P03	GPIO/ Analog Input 16/ UART 1 Receive Input	
17	P02	GPIO/ Analog Input 17/ UART 1 Transmit Output	
18	P01	GPIO/ Timer00 Input	
19	P00	GPIO/ Timer00 Output	
20	VDD_IO	MCU +3.0 volt power supply	
21	nRESET	Reset Input	
22	TOOL0	General purpose Input/ Debug, Programming	
23	GND	Ground	
24	P120	GPIO/ Analog Input 19	
25	P121	General purpose Input	Input only
26	P137	GPIO/ External Interrupt Input 0	
27	P60	GPIO/ I <sup>2</sup> C 0A clock Output	
28	P61	GPIO/ I <sup>2</sup> C 0A Data	
29	PGPIO1	RF transmission output for external power amplifier control	Active High
30	PGPIO0	RF transmission output for external power amplifier control	Active Low

Note: General Purpose Input Output (GPIO)

#### 4. RL78/G1D-SK PMOD Module Design Bill of Material

Table 4 shows the bill of material for RL78/G1D-SK PMOD module.

**Table 4 Bill of material for RL78/G1D-SK PMOD module**

Item	Qty	Reference	Part	Footprint	Description	Manufacturer	Mfg PN
1	3	C1,C2,C10	0.1uF	402	CAP CER 0.1UF 16V 10% X5R 0402	Murata	GRM155R61A104KA01D
2	1	C3	0.47uF	402	CAP CER 0.47UF 6.3V 10% X5R 0402	Taiyo Yuden	JMK105BJ474KV-F
3	1	C11	10uF	603	CAP CER 10UF 6.3V 20% X5R 0603	Murata	GRM188R60J106ME47J
4	1	C9	2.2uF	402	CAP CER 2.2UF 6.3V 10% X6S 0402	Murata	GRM155C80J225KE95D
5	2	C5,C6	8pF	402	CAP CER 8PF 50V NP0 0402	Murata	GRM1555C1H8R0DA01D
6	2	C7,C8	9pF	402	CAP CER 9PF 50V NP0 0402	Murata	GRM1555C1H9R0DA01D
7	0	C4	NLC	402	No load capacitor		
8	1	E1	W3008		ANTENNA BT/WLAN/WIFI CER	Pulse	W3008
9	1	J2	CON12B		CONN HEADER .100" DUAL R/A 12POS	Sullins	PRPC006DBAN-M71RC
10	1	L1	10uH	603	FIXED IND 10UH 50MA 900 MOHM SMD	Murata	LQM18FN100M00D
11	6	R1,R4,R5, R6,R7,R10	0	402	RES 0.0 OHM 1/16W 0402 SMD	Stackpole	RMCF0402ZT0R00
12	3	R2,R8,R9	10K	402	RES 10.0K OHM 1/16W 5% 0402 SMD	Yageo	RC0402JR-0710KL
13	1	R3	1K	402	RES 1.00K OHM 1/16W 5% 0402 SMD	Stackpole	RMCF0402JT1K00
14	1	R11	6.8 M	402	RES 6.8 M OHM 1/16W 5% 0402 SMD	Yageo	RC0402JR-076M8L
15	1	SH1	SHIELD		Shield, metal can	Custom	N/A
16	1	U1	R5F11AGJ	QFN-48, 6x6 mm	CPU,BLE,256K,RL78 /G1D	Renesas	R5F11AGJANA
17	1	Y1	32MHz	1.2x1.6	Crystal,32MHz (8pF,20ppm,1.2x1.6)	Abracon	ABM12-32.000MHZ-B2X-T3
18	1	Y2	32.768kHz	1.0x1.6	Crystal,32.768kHz (9pf,20ppm,1.0x1.6)	Abracon	ABS05-32.768KHZ-9-T

**Appendix A - References**

[1] RL78/G1D User's Manual: Hardware, R01UH0515EJ0100 Rev.1.00, April 24, 2015

[2] Bluetooth® Low Energy Protocol Stack User's Manual, R01UW0095EJ0117 Rev.1.17, Apr 17, 2015

## Appendix B - Conformity Assessment

### FCC/IC Regulatory

Since this module is not sold to general end users directly, there is no user manual of module.

For the details about this module, please refer to the specification sheet of module.

This module should be installed in the host device according to the interface specification (installation procedure).

The following information must be indicated on the host device of this module;

Contains FCC ID: 2AFST-G1D

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Contains IC: 20519-G1D

The following statements must be described on the user manual of the host device of this module;

[for FCC]

#### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.

[for IC]

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : 1) l'appareil ne doit pas produire de brouillage; 2)

l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée. Cependant, il est souhaitable qu'il devrait être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.



**R&TTE Directive**

We hereby declare that this product is in compliance with the essential requirements and other EC relevant provisions of Directive 1999/5/EC.



Declaration of Conformity (DoC) can be available upon request. Contact to local Renesas Sale office.

**Korea Radio Regulations**

MSIP-CRM-R5E-G1D

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.

**Website and Support**

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/contact/>

All trademarks and registered trademarks are the property of their respective owners.

## Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Sept. 15, 2015	—	First edition issued

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.  
In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise.  
When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
  3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.  
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
  6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
  11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K  
Tel: +44-1628-585-100, Fax: +44-1628-585-900

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141