



Power On
Power off

# Control

Power On	Auto: Open the charging case	
	Manually: Press and hold the multifunctional button for	
	1.5s	
Power off	Auto: Place the earbuds back into the	
	charging case and close the case lid	
	Manually: Press and hold the multifunctional button for 10s	
Play/Pause	Double-tap on the multifunctional button	
Volume-	Single-tap on the left multifunctional button	
Volume+	Single-tap on the right multifunctional button	
Next Track	Press and hold the right multifunctional button for 1.5s	
Answer/Hang Up a Phone	Double-tap on the multifunctional button	
Call		
Reject a Phone Call	Press and hold the multifunctional button for 1.5s	
Switch Between Two	Press and hold the multifunctional button for 1.5s	
Active Calls		
Manual Pairing	Take out the two earphones from the charging case while	
	they are connected to your device, and then press and	
	hold the multifunctional buttons for 6s.	
Activate the Voice	Press the multifunctional button for three times	
Assistant		
ANC/Transparency mode	Press and hold the left multifunctional button for 1.5s	

## Q&A

#### Q1: What does the indicator of the charging case display?

, , , , ,	1) The battery life of the charging case:	
-----------	---	--

100%—50%	Green
49%-10%	Yellow
<10%	Red

### 2) Charging status of the charging case:

<10%	Stay on Red
11%-49%	Stay on Yellow
50%-99%	Stay on Green
100%	Off

# .

### Q2: How to charge the charging case?

1. Connect the charging case to a Type-C charger. (The current does not exceed 1A). 2. If the earphones stay idle for an extended period of time, charge them at least every three months to prevent the battery from being damaged.



### Q3: Why are the earphones still connected to the phone when they are put back to the charging case and the case lid is closed?

 Check whether the charging case has battery power. If it has run out of battery, closing it will not disconnect the earphones from the device. 2. Make sure the headphones are properly placed in the charging case and the charging metal sheet and PIN are both clean. And wiping clean the contact points on the earphones and the charging case should fix this issue.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.