





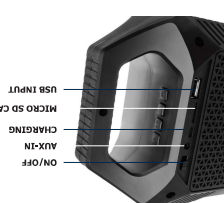



250mm

 <p><b>Coca-Cola</b> <b>MINI PARTY SPEAKER</b> <b>CC-MTLG-CC1</b></p> <p>Please read the manual before operating this product.</p> <p>M&amp;S Accessory Network declares that radio equipment CC-MTLG-CC1 is in compliance with Directive 2014/53/EU.</p> <p>The EU Declaration of conformity is available at: <a href="https://gabagoods.com/pages/compliance-documents">https://gabagoods.com/pages/compliance-documents</a></p>	<p><b>Contents</b></p> <ol style="list-style-type: none"> <li>1. Introduction</li> <li>2. Package Contents.</li> <li>3. Turning Speaker on / off</li> <li>4. Speaker Functions</li> <li>5. Charging the speaker</li> <li>8. Product Diagram</li> <li>9. Product Support</li> </ol> <p>Compatible with all Bluetooth® enabled devices</p> <p>The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.</p>  <p>COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved. Produced by M&amp;S Accessory Network Corp. under a trademark license from The Coca-Cola Company.</p>	<p><b>1. Introduction</b></p> <p>Congratulations, and thank you for purchasing this Coca-Cola mini party speaker!</p> <p>In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speaker's features and functions!</p> <p><b>Safety Rules</b></p> <ol style="list-style-type: none"> <li>1 Please follow the rules depicted in this manual closely to ensure your safety. We strongly encourage you to read through this user manual.</li> <li>2 Be wary of any edges, uneven surfaces, metal parts, accessories and the speaker to prevent any possible injury or damage.</li> <li>3 Do not modify, repair or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.</li> <li>4 Do not use any flammable or volatile liquid to clean the product.</li> <li>5 Do not use the product in a hazardous location.</li> </ol>	<p><b>2. Package Contents</b></p>  <p>1x Coca-Cola Speaker</p>  <p>1x USB charging cable</p>  <p>1x Instruction Manual</p>	<p><b>3. Turning Speaker on / Off</b></p> <p>Turn on: Slide the Power Switch to the on position in order to power the speaker and enter the pairing mode.</p> <p>Turn off: Slide the power switch to the off position to turn off the speaker.</p> <p>Pairing to a Bluetooth® Enabled Mobile Phone</p> <ol style="list-style-type: none"> <li>1. On your smartphone / device, be sure that the Bluetooth® is powered on / activated.</li> <li>2. Power on the speaker and you will hear the following voice prompt "Bluetooth Pairing mode".</li> <li>3. Open the Bluetooth® connection settings on your device and make sure that the Bluetooth is turned on, and your device will start to search for the speaker. You will find "Coca-Cola Speaker" in your device list, click on it to connect.</li> <li>4. Once connected successfully you will hear a voice prompt "The Bluetooth device is connected successfully."</li> </ol> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment</p>																		
<p><b>Speaker Functions</b></p> <p><b>Play / Pause</b></p> <ol style="list-style-type: none"> <li>1. When the music playing under the Bluetooth mode, press the "PAUSE" button to pause the song, press again to play the song continually.</li> </ol> <p><b>Next/Previous Track &amp; Volume Control:</b></p> <p>Press and hold the + Button to increase the volume.</p> <p>Short press the + button to skip to the next track.</p> <p>Press and hold the - button to lower the volume.</p> <p>Short press the - button to go back to the previous track.</p> <p><b>FM Radio Mode</b></p> <p>Press the Mode button to enter the radio mode. For optimal performance and signal plug the Micro USB cable into the speaker which functions as an antenna. Press the play button one time to search and lock all possible FM channels automatically. Press "-" or "-" button one time to select a channel. Press and hold "-" or "-" button to adjust the volume.</p>	<p><b>Speaker Functions</b></p> <p><b>Micro SD / USB Flash Drive / Aux Port</b></p> <p>Insert your Micro SD card, be sure that it contains MP3 music files only. The speaker will prompt "USB Flash Drive", and will begin automatically. If you power on the speaker with a Micro SD card already inserted, which to that mode automatically.</p> <p><b>USB Flash Drive</b></p> <p>Insert your USB Flash Drive, be sure that it contains MP3 music files only. The speaker will prompt "USB Flash Drive", and will begin automatically. If you power on the speaker with a USB Flash Drive already inserted, it will switch to that mode automatically.</p> <p><b>AUX port</b></p> <p>Insert the AUX cable to play music from non-Bluetooth device including laptop, P.C. and Tablet.</p> <p><b>LED LIGHT MODE:</b></p> <p>Long press the Mode button to turn on the LED lights, Long press the Mode button to turn off the LED lights. Note: The LED Lights do not dance to the music.</p>	<p><b>Charging the Speaker</b></p> <p>The Coca-Cola Speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.</p> <p>Connect the included Micro USB Cable to the charging port of the Speaker, and the USB light will illuminate while the Speaker is charging. Please charge the battery fully the first time for 3 hours.</p> <p>When the battery is fully charged, the LED light will turn off.</p> <p>Once Fully Charged disconnect the charging cable, and your Speaker is now ready for use. When the battery is low, the LED will flash red and emit three tones every 20 seconds or prompt you "battery is low". When this occurs, please recharge the Speaker.</p> <p>*Make sure to charge the speaker for a minimum of 3 hours before initial use.</p> 	<p><b>Product Diagram</b></p>  <p>Labels: USB INPUT, MICRO SD CARD SLOT, CHARGING, AUX-IN, ON/OFF</p> <table border="1"> <tr> <td>Bluetooth Version:</td> <td>5.3</td> </tr> <tr> <td>Output Power:</td> <td>5 Watts</td> </tr> <tr> <td>Battery Capacity:</td> <td>1200mAh</td> </tr> <tr> <td>LED Lights:</td> <td>RGB LED Lights</td> </tr> <tr> <td>Sensitivity:</td> <td>85db (r-3)</td> </tr> <tr> <td>Frequency:</td> <td>100HZ-20KHZ</td> </tr> <tr> <td>Driver Size:</td> <td>ø102mm</td> </tr> <tr> <td>Ohms:</td> <td>2 Ohm</td> </tr> <tr> <td>Charging Cable:</td> <td>Micro USB Cable</td> </tr> </table>	Bluetooth Version:	5.3	Output Power:	5 Watts	Battery Capacity:	1200mAh	LED Lights:	RGB LED Lights	Sensitivity:	85db (r-3)	Frequency:	100HZ-20KHZ	Driver Size:	ø102mm	Ohms:	2 Ohm	Charging Cable:	Micro USB Cable	<p><b>Support</b></p> <p>If you have problems with your device, please consult the instructions in this manual.</p> <p><b>Manufacturer Warranty</b></p> <p>We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at: (877)995-8505 or email us at: info@mnsbrands.com</p> <p><b>CC-MTLG-CC1</b></p> <p>Designed in the U.S.A.   Made in China</p> <p>Manufactured, marketed, and distributed under license by M&amp;S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001</p> <p>Designed in the U.S.A.   Made in China.</p> <p>For support call: (877) 995-8505 or Email: info@mnsbrands.com</p>  <p><a href="http://www.mnsbrands.com">www.mnsbrands.com</a></p> <p>CE</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment</p>
Bluetooth Version:	5.3																					
Output Power:	5 Watts																					
Battery Capacity:	1200mAh																					
LED Lights:	RGB LED Lights																					
Sensitivity:	85db (r-3)																					
Frequency:	100HZ-20KHZ																					
Driver Size:	ø102mm																					
Ohms:	2 Ohm																					
Charging Cable:	Micro USB Cable																					