
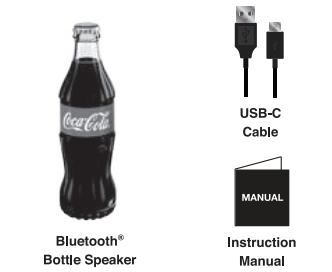
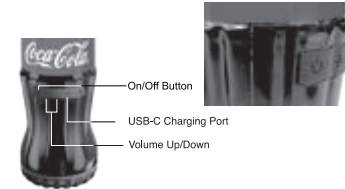
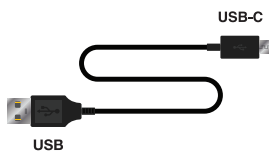




 <p>CC-BBS-CC1 Operation Manual Please read the manual before operating this product</p> <p>M&S Accessory Network declares that radio equipment CC-BBS-CC1 is in compliance with Directive 2014/53/EU. The EU Declaration of conformity is available at https://gabbagoods.com/pages/compliance-documents</p>	<p>Contents</p> <ul style="list-style-type: none"> 1 Introduction 1 2 Package Contents 2 3 Product Diagram - Bottle Speaker 2 <ul style="list-style-type: none"> 3.1 How to Use the Bottle Speaker 3 3.2 Pairing to a Bluetooth® Enabled Mobile Phone 4 3.3 Charging the Bottle Speaker 5 4 Frequently Asked Questions 6 5 Product Specifications 7 6 Support 8 <p>Compatible with all devices, Bluetooth® & Non-Bluetooth with included AUX cable The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.</p>  <p>COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved.</p>	<p>1. Introduction</p> <p>Thank you for purchasing the Coca-Cola Bluetooth Bottle Speaker! In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!</p> <p>Safety Rules</p> <ol style="list-style-type: none"> 1 Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual. 2 Be wary of any edges, uneven surfaces, metal parts, accessories, and its packaging to prevent any possible injury or damage. 3 Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty. 4 Do not use any diluent or volatile liquid to clean the product. 5 Do not use the product in a hazardous location. 	<p>2. Package Contents</p>  <p>Bluetooth® Bottle Speaker</p> <p>USB-C Cable</p> <p>Instruction Manual</p> <p>3. Product Diagram - Bottle Speaker</p> 	<p>3.1 How to Use the Bottle Speaker</p> <table border="1"> <thead> <tr> <th>DESIRED RESULT</th> <th>REQUIRED ACTION</th> </tr> </thead> <tbody> <tr> <td>Turn On / Off Enter pairing mode</td> <td>Long-press the Power button for 2-3 seconds.</td> </tr> <tr> <td>Pairing</td> <td>Use a Bluetooth® enabled mobile phone or other Bluetooth® enabled device to perform necessary pairing actions.</td> </tr> <tr> <td>Charging</td> <td>Plug in the included Micro USB cable into the Micro USB charging port.</td> </tr> <tr> <td>Redial</td> <td>Double-press the Power button to redial the last number you called.</td> </tr> <tr> <td>Answering a call</td> <td>Short-press the Power button to answer phone calls. Short-press the button again to end the call.</td> </tr> <tr> <td>M (Mode) Button</td> <td>Press the M button to switch to FM radio, and press again to switch back to Bluetooth® mode.</td> </tr> <tr> <td>FM Radio</td> <td>Press the M button to switch to FM radio mode. Short-press the Power button to scan through available radio stations. Please allow the speaker to complete the scan, and then double-press the Power button to choose your desired station.</td> </tr> <tr> <td>Play / Pause</td> <td>While in Bluetooth® mode playing music, press the Power button to pause the music and press again to play.</td> </tr> <tr> <td>Track Selection</td> <td>Press the + button to skip to the next track, and press the - button to go to the previous track.</td> </tr> <tr> <td>Volume Control</td> <td>Long-press the + button to increase the volume and the - button to decrease the volume.</td> </tr> </tbody> </table>	DESIRED RESULT	REQUIRED ACTION	Turn On / Off Enter pairing mode	Long-press the Power button for 2-3 seconds.	Pairing	Use a Bluetooth® enabled mobile phone or other Bluetooth® enabled device to perform necessary pairing actions.	Charging	Plug in the included Micro USB cable into the Micro USB charging port.	Redial	Double-press the Power button to redial the last number you called.	Answering a call	Short-press the Power button to answer phone calls. Short-press the button again to end the call.	M (Mode) Button	Press the M button to switch to FM radio, and press again to switch back to Bluetooth® mode.	FM Radio	Press the M button to switch to FM radio mode. Short-press the Power button to scan through available radio stations. Please allow the speaker to complete the scan, and then double-press the Power button to choose your desired station.	Play / Pause	While in Bluetooth® mode playing music, press the Power button to pause the music and press again to play.	Track Selection	Press the + button to skip to the next track, and press the - button to go to the previous track.	Volume Control	Long-press the + button to increase the volume and the - button to decrease the volume.	<p>3.2 Pairing to a Bluetooth® Enabled Mobile Phone</p> <ol style="list-style-type: none"> 1. On your smartphone / device, be sure that the Bluetooth® is powered on / activated. 2. Turn on the bottle speaker by long-pressing the Power button for 2-3 seconds. The LED lights will start to flash blue, and you are now in Bluetooth pairing mode. 3. Open the Bluetooth® connection settings on your device. Search for "Coca-Cola Bottle Speaker" in your device list, and click on the listed device to connect. 4. The LED light will turn blue once both your device and the bottle speaker are connected successfully. <p>Once your Bluetooth speaker is paired to a smart device, they will remain paired and automatically recognize each other whenever they are both turned on and in range.</p>
DESIRED RESULT	REQUIRED ACTION																										
Turn On / Off Enter pairing mode	Long-press the Power button for 2-3 seconds.																										
Pairing	Use a Bluetooth® enabled mobile phone or other Bluetooth® enabled device to perform necessary pairing actions.																										
Charging	Plug in the included Micro USB cable into the Micro USB charging port.																										
Redial	Double-press the Power button to redial the last number you called.																										
Answering a call	Short-press the Power button to answer phone calls. Short-press the button again to end the call.																										
M (Mode) Button	Press the M button to switch to FM radio, and press again to switch back to Bluetooth® mode.																										
FM Radio	Press the M button to switch to FM radio mode. Short-press the Power button to scan through available radio stations. Please allow the speaker to complete the scan, and then double-press the Power button to choose your desired station.																										
Play / Pause	While in Bluetooth® mode playing music, press the Power button to pause the music and press again to play.																										
Track Selection	Press the + button to skip to the next track, and press the - button to go to the previous track.																										
Volume Control	Long-press the + button to increase the volume and the - button to decrease the volume.																										
<p>3.3 Charging the Bottle Speaker</p> <p>Use the USB cable provided with your Bluetooth bottle speaker Connect the USB-C end to the USB-C charging port on the speaker and the USB end into a powered USB port or wall adapter</p> <ul style="list-style-type: none"> • Make sure to charge the speaker for 3-4 hours before initial use. Make sure to always disconnect the cable once the bottle speaker is finished charging. 	<p>4. Frequently Asked Questions</p> <ol style="list-style-type: none"> 1. Where is there no power when I try turning on the bottle speaker? Ensure the battery has been charged up to 3 hours for initial use. 2. Why is there no sound during playback? Check the connection between the speaker and the smartphone / device. If the connection is not established, please try the pairing mode again and make sure the bottle speaker is paired with your Bluetooth® enabled device. 	<p>5. Product Specifications</p> <table border="1"> <tr> <td>Driver Diameter:</td> <td>40mm</td> </tr> <tr> <td>Frequency Range:</td> <td>130Hz - 15kHz</td> </tr> <tr> <td>Sensitivity:</td> <td>105dB</td> </tr> <tr> <td>Impedance:</td> <td>4Ω</td> </tr> <tr> <td>Bluetooth® Version:</td> <td>5.3</td> </tr> <tr> <td>Bluetooth PCB Brand:</td> <td>JL6928B</td> </tr> <tr> <td>Battery Capacity:</td> <td>300mAh</td> </tr> <tr> <td>Receiver Distance:</td> <td>10m</td> </tr> <tr> <td>Charging Time:</td> <td>1.5 - 2 hours</td> </tr> <tr> <td>Playing Time:</td> <td>2 hours at 50% volume</td> </tr> </table>	Driver Diameter:	40mm	Frequency Range:	130Hz - 15kHz	Sensitivity:	105dB	Impedance:	4Ω	Bluetooth® Version:	5.3	Bluetooth PCB Brand:	JL6928B	Battery Capacity:	300mAh	Receiver Distance:	10m	Charging Time:	1.5 - 2 hours	Playing Time:	2 hours at 50% volume	<p>FCC STATEMENT</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.</p>	<p>Support</p> <p>If you have problems with your device, please consult the instructions in this manual.</p> <p>Manufacturer Warranty We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com</p>  <p>CC-BBS-CC1 Manufactured, marketed, and distributed by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001 Designed in the U.S.A Made in China. For support call: (877) 995-8505 or Email: info@mnsbrands.com FCC ID: 2AFXGG-BBS</p>	 <p>www.mnsbrands.com</p>  <p>Technical Support Keep All Relevant Information for Future Reference.</p>		
Driver Diameter:	40mm																										
Frequency Range:	130Hz - 15kHz																										
Sensitivity:	105dB																										
Impedance:	4Ω																										
Bluetooth® Version:	5.3																										
Bluetooth PCB Brand:	JL6928B																										
Battery Capacity:	300mAh																										
Receiver Distance:	10m																										
Charging Time:	1.5 - 2 hours																										
Playing Time:	2 hours at 50% volume																										