


86mm



**CC-JBS-LRG**  
Operation Manual

Please read the manual before operating this product.

M&S Accessory Network declares that radio equipment CC-JBS-LRG is in compliance with Directive 2014/53/EU.

The EU Declaration of conformity is available at <https://gabagoods.com/pages/compliance-documents>

**Contents**

Safety Rules

1. Introduction
2. Specifications
3. Package Contents
4. Product Diagram
5. Turning Speaker ON/OFF
6. Listening to the Radio
7. Bluetooth Operation
8. Using LED Lights
9. Charging and Low Battery
10. Support

**Safety Rules**

1. Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
2. Be wary of any edges, uneven surfaces, metal parts, accessories, and its packaging to prevent any possible injury or damage.
3. Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
4. Do not use any flammable or volatile liquid to clean the product.
5. Do not use the product in a hazardous location.

**Caution:** Please use the charger with the rated input voltage required for this product to charge (Note that it should not exceed 4.8V 2A).

**1. Introduction**

Congratulations, and thank you for purchasing this Coca-Cola® Jukebox Speaker.

Please use this manual to familiarize yourself with the functionality of your other devices before using this product.


**2. Specifications**

Support functions:	Bluetooth/Radio
Bluetooth name:	Jukebox Speaker
FM-Frequency Range:	87.5 to 108 MHz
Weight:	1.50 Kg (approx)
Charging voltage:	4.2±0.05V 1 A
Battery capacity:	3.7V 1800mAh
Charging time:	2-3H (approx)
Playback time:	Min ≥ 3H, Max ≤ 4H
Bluetooth distance:	10m (Based on environment)
Loud speaker:	5" 4 OHMS 3 W (Use 2 speakers)
Output:	6 W
Unit dimension (W*H*D):	270mm X 380mm X165mm (approx)

**3. Package Contents**

- 1. Instruction Manual
- 2. USB-C Charger Cable
- 3. Jukebox Speaker

**4. Product Diagram**

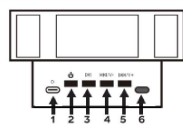

- 1. CHARGE:** TYPE-C charging power hole.
- 2. POWER BUTTON:** Lightly click to power on, Long press to power off. After boot, press to change the mode of playback.
- 3. PLAY/PAUSE:** Press to play or pause a track.
- 4. PREVIOUS:** Lightly click back to select a song. Long press and hold to reduce volume.
- 5. NEXT:** Lightly click forward to select a song, Long press and hold to increase volume.
- 6. LIGHTS:** LED power switch

**5. Turning Speaker ON/OFF**

- 1. Power ON/OFF and Mode:** Click the key to turn on. Click and hold again to power off. Switch the modes by lightly clicking this button after starting the device, each light click continue to switch between the Radio and Bluetooth modes.
- 2. Pause/Play:** Press the key to pause, touch the key again to resume play back.
- 3. Previous/Next Song:** Press the key to play the previous song, key to play the next song, key to increase volume.
- 4. Radio Mode:** Lightly click the key to enter the system search mode, and then the system will automatically save the found radio stations after the search is finished.
5. Press the key to select the next radio station.
6. Press the key to select the previous radio station (If you cannot receive the radio signal, you need to adjust the position or direction of the product).

**6. Listening to the Radio**

1. Press "" this button to choose "FM" mode.
2. Press "" it would search for stations automatically and also search memory stations.
3. Press "" or "" to select your desired station.

---

**7. Bluetooth Operation**

1. Press the mode "" switch function switch to Bluetooth.
2. Go to the Bluetooth settings menu on your smartphone / device. Make sure the Bluetooth is turned on. Connect to the device listed as "Jukebox Speaker".
3. Once device is connected, you will be able to play music from your device via this speaker.
4. Once speaker is paired it will remain paired and automatically recognize whenever they are both turned on and in range.

NOTE: Bluetooth transmission is best within 10 meters without barrier from device to speaker.

**8. Using LED Lights**

**Light On/Off Button** "light"

Long press: turn on/off the light  
Short press: color changing or static color

**Note:** The LED lighting cycle changes. If it appears abnormal, this is an indication that the speaker battery is low.

When the battery is low, this speaker will emit a "drip, drip" sound, that is the indication that the speaker needs to be charged.

If you notice the battery to be low when listening to the speaker, it is recommended to turn off the lights to reserve the battery.

**9. Charging and Low Battery:**

1. This product is shipped with battery charge of about 80%.
2. It is recommended that speaker be charged before first use. Plug the USB-C side of the supplied cable into the speaker. Plug the other side of the USB cable into any USB port or power source.
3. When power is low, speaker will voice prompt low battery. You should then promptly plug in the charging cable, connect using the charger included until the speaker is fully charged.

\*Compatible with all Bluetooth® enabled devices  
\*\*The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

**10. FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


**11. Support**

If you have problems with your device, please consult the instructions in this manual.


**Manufacturer Warranty**

We stand by our products!

That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at [info@mnsbrands.com](mailto:info@mnsbrands.com)



**FCC ID: 2AFXGG-JBS**



COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved. Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.


**CC-JBS-LRG**

Designed in the U.S.A. | Made in China

Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001

Designed in the U.S.A. | Made in China.

For support call: (877) 995-8505 or Email: [info@mnsbrands.com](mailto:info@mnsbrands.com)



[www.mnsbrands.com](http://www.mnsbrands.com)

