

Sunpak Bluetooth SelfieStick

Owner's Manual

Please spend a few moments reviewing these instructions, so that you can take full advantage of your SelfieStick's features and capabilities



Adjustable Smartphone Mount can support practically any smartphone or phablet. Strong and sturdy enough for any smartphone. Expands up to 3.5" wide.

Lock Knob allows the smartphone holder to be adjusted to allow for 180° movement and settings. Loosen the lock knob to position your head and tighten it once you have achieved your desired position. Folds inward for compact storage. You can also remove the smartphone holder and mount a GoPro directly to the SelfieStick, or mount a point & shoot camera via the included 1/4"-20 mount.

SelfieStick has five **Twist and Lock Sections**. To deploy the sections, grasp the foam grip in one hand and the smartphone holder in the other hand.

Rotate the foam grip counter-clockwise. You will feel each section unlock with each slight rotation. Once all of the sections are unlocked, extend the SelfieStick to your desired length. Then rotate clockwise to lock the sections in place.

Bluetooth Shutter Release with buttons for Apple and Android. The remote fits securely into the supplied holder and clips on to the SelfieStick. You can control the functions on your smartphone or phablet up to 30 feet away from the SelfieStick.

The SelfieStick comes with a **Foam Grip** on the bottom section so you can comfortably and securely grip your SelfieStick.

How to use:

1. Loosen the Lock Knob and rotate the smartphone mount upwards to allow it to accept a smartphone or phablet. To lock the smartphone holder in place, tighten the Lock Knob.
2. Attach your smartphone or phablet in the adjustable holder.
3. Attach the Bluetooth Shutter Release by clipping it onto the SelfieStick section. Pair the Shutter Release with your smartphone or phablet.
4. To attach a GoPro to your SelfieStick, loosen and remove the Lock Knob and remove the smartphone holder from the SelfieStick. Then attach a GoPro directly into the forks on the SelfieStick. Replace the Lock Knob and re-tighten to secure.
5. To attach a camera, camcorder or any other unit that has a standard 1/4"-20 mount, remove the Lock Knob and install the Point & Shoot adapter.

Note: For additional information and pairing or mounting instructions, please see the reverse page.

Specifications:

Compatibility:	Apple, Android
Load capacity:	1.1 lbs.
Weight:	6 oz.
Maximum length:	35 in.
Minimum length:	9.25 in.
Leg sections:	5
Leg material:	aluminum
Maximum working distance:	30 feet
Battery:	CR2032
Warranty:	1 year

Product design and specifications subject to change without notice.

ToCAD America Inc.
53 Green Pond Road
Rockaway, NJ 07866, USA
sunpak.com



FCC ID:2AFZXSP-RBTSW-BK
Model:SP-RBTSW-BK

1. Remove the Bluetooth Remote Shutter Release from the holder by sliding it forward. Remove the green battery insulator that extends from the battery door by pulling gently until it is free of the remote.
2. Slide the Bluetooth Remote back into the holder (as shown). Attach the holder to your SelfieStick via its clip.
3. Turn the On/Off Switch to “On”.
4. Turn on your smartphone’s Bluetooth function. When you see **Sunpak** in your list of Bluetooth devices, pair your phone to that device.
5. Once paired, open up the camera feature of your smartphone.
6. Attach your phone to the mount and extend the sections to the desired length by rotating the foam grip counterclockwise to unlock the sections. When you reach the desired length, rotate the grip clockwise to lock the sections.
7. To take a picture, press the Shutter Release button. For Apple, press the iOS button. For Android, press the Android button.

PRECAUTIONS:

- This product is not a toy and is not intended for use by children. It contains small parts, which may cause a choking hazard.
- Use only with units weighing 1.1lb or less.
- Not intended for use with tablets, heavy cameras or camcorders or any unit with long lenses which will be unstable if mounted on this product.
- Maximum load capacity is 1.1lb and determined by how the SelfieStick is used.
- Confirm that your unit is securely attached to the SelfieStick before releasing to ensure stability.
- Do not grease any part of the SelfieStick or use any solvents or thinners to clean your tripod. Wipe with a soft, lint-free cloth.
- Do not store or expose your SelfieStick to excessive heat, cold or moisture, or use close to any fire or flame.
- Be careful of your surroundings when using the SelfieStick. Do not use in prohibited areas or in any way that may harm yourself or others near you.

BATTERY CARE AND WARNINGS:

- The remote contains a CR2032 “Coin Cell” battery, which can be harmful or fatal if swallowed. Please keep this and other small objects out of the reach of children.
- The CPSC recommends the following step to prevent battery-ingestion injuries:
 - Discard coin cell batteries carefully.
 - Do not allow children to play with batteries, and keep the batteries out of your child's reach.
 - Never put button batteries in your mouth for any reason as they are easily swallowed accidentally.
 - Keep the remote and other electronics out of your child's reach.
 - If the battery is ingested, immediately seek medical attention. The National Battery Ingestion Hotline is available anytime at (202) 625-3333 (call collect if necessary), or call your poison center at (800) 222-1222.
- When the battery life has been depleted, do not throw away in the trash. The battery must be recycled properly. Check your local ordinances to determine if they have any guidelines for disposing of old batteries.
- You may also take your old batteries to local businesses who accept batteries for recycling, or take them to your local battery recycling facility. You can find a list of places in your area who accept batteries for recycling by visiting <http://www.call2recycle.org/locator/>

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.