 
 


802.11b CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

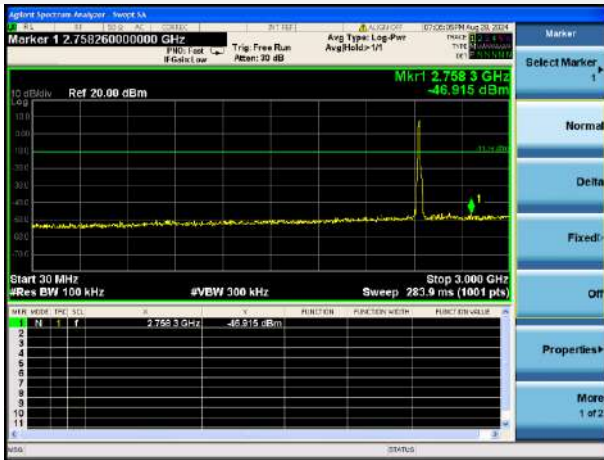

 
802.11b CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

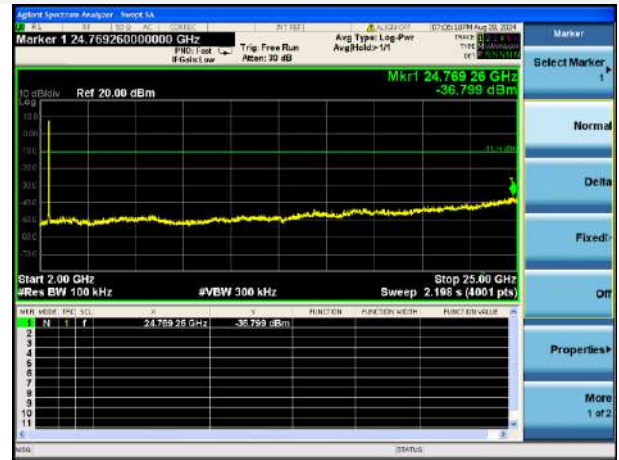


802.11b CHANNEL 11 CARRIER LEVEL



802.11b CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

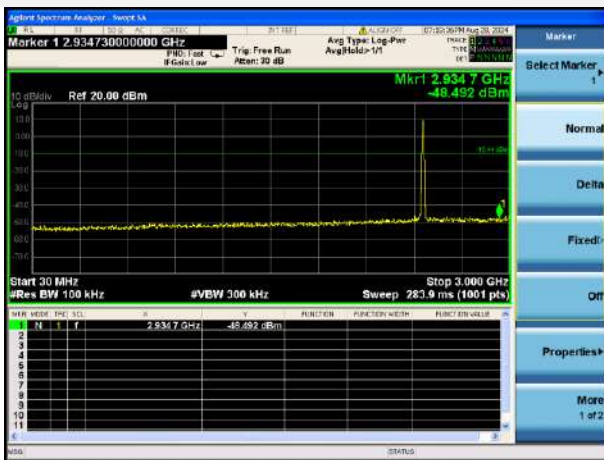

 
802.11b HIGH CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

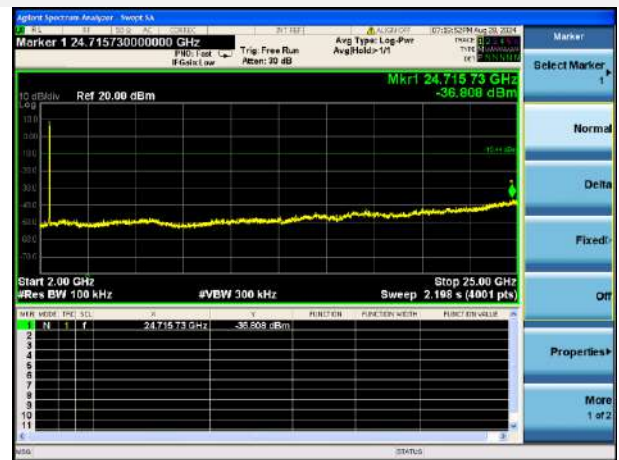


802.11g CHANNEL 1 CARRIER LEVEL



 802.11g CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

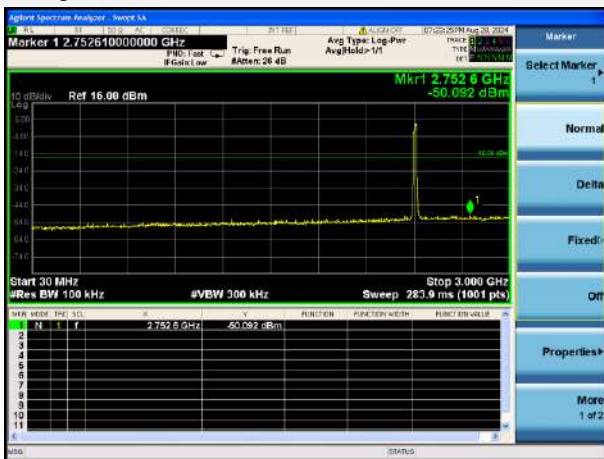

 
802.11g CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

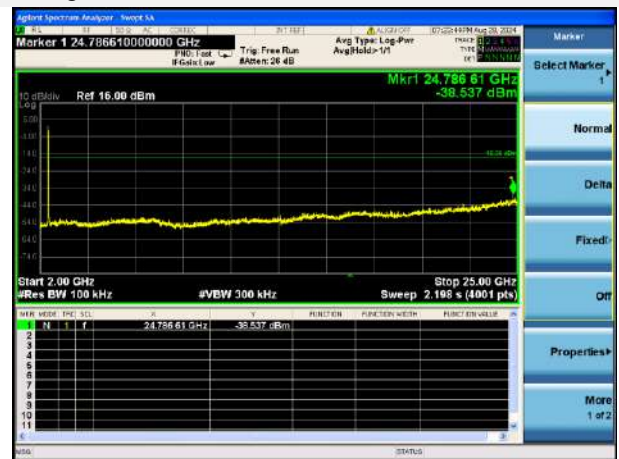


802.11g CHANNEL 2 CARRIER LEVEL



 802.11g CHANNEL 2, SPURIOUS
30 MHz ~ 3 GHz

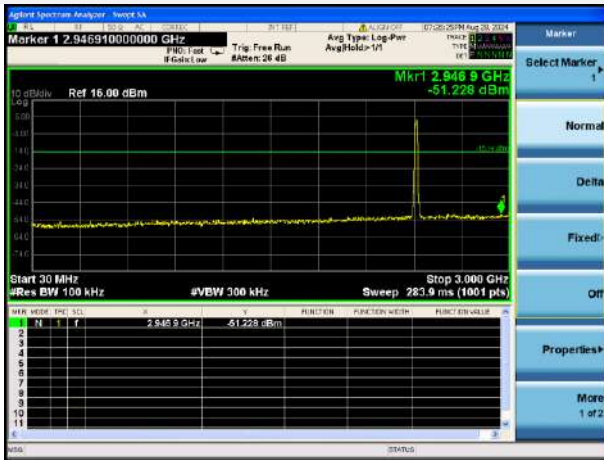

 
802.11g CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz

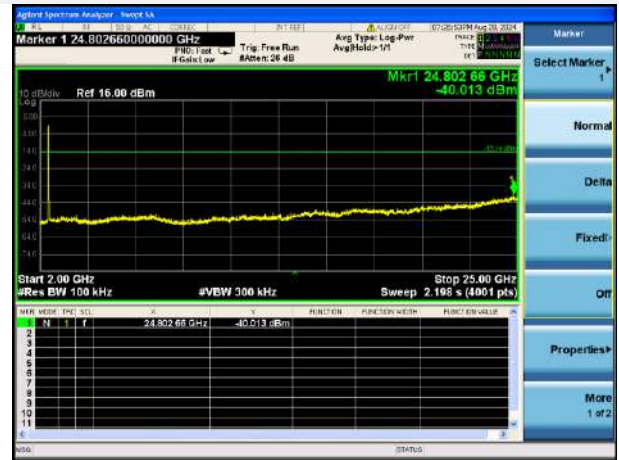


802.11g CHANNEL 3 CARRIER LEVEL



 
802.11g CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

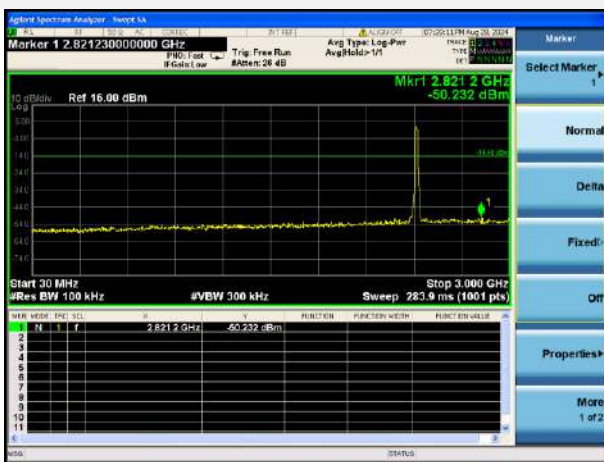

 
802.11g CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

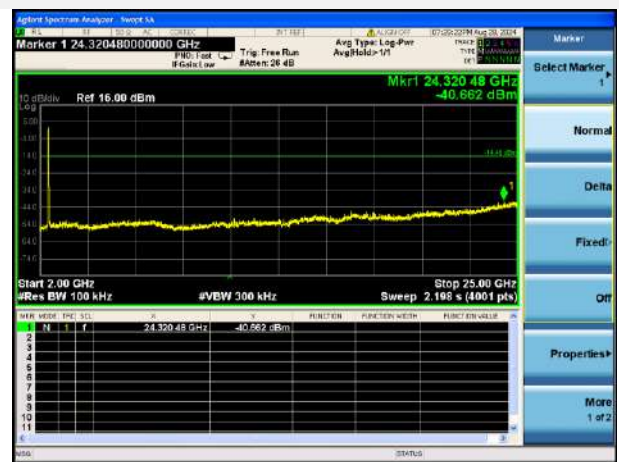

 
802.11g CHANNEL 4 CARRIER LEVEL

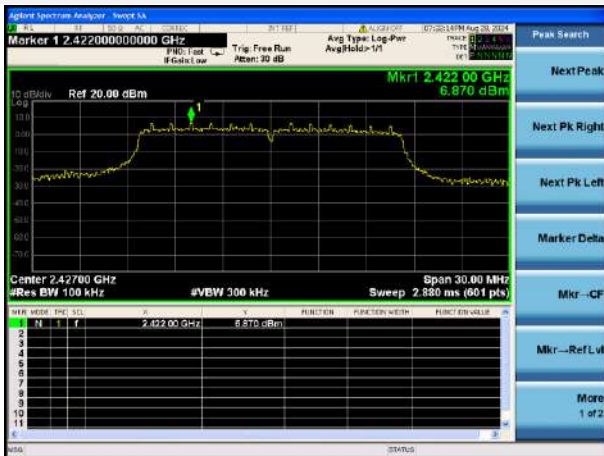

 
802.11g CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

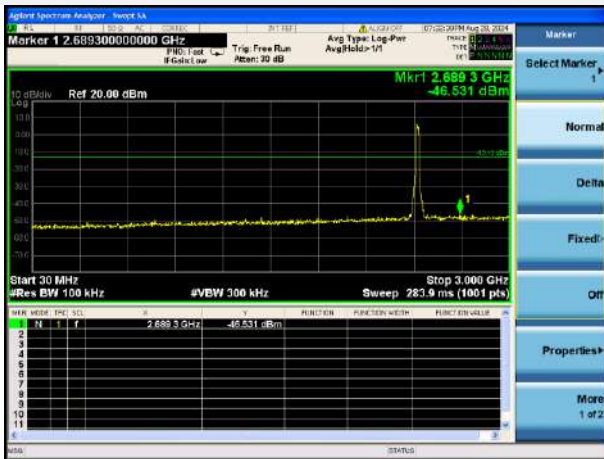

 
802.11g CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

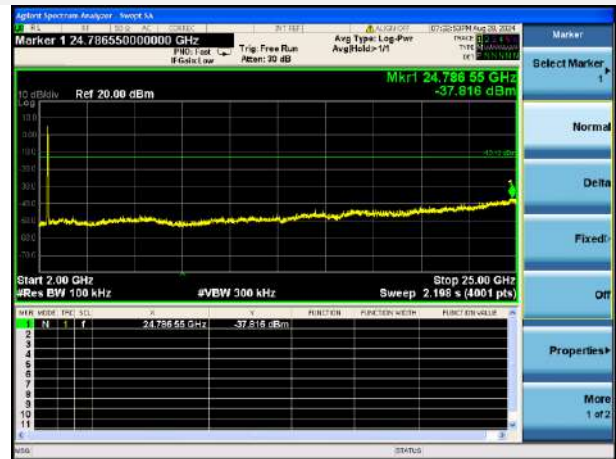

 
802.11g CHANNEL 6 CARRIER LEVEL

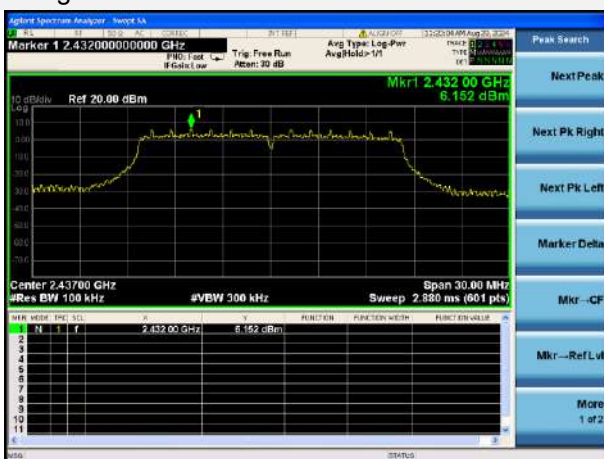

 802.11g CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

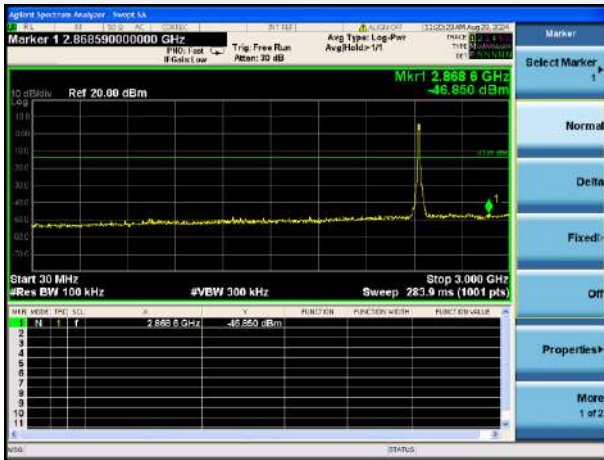

 
802.11g CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

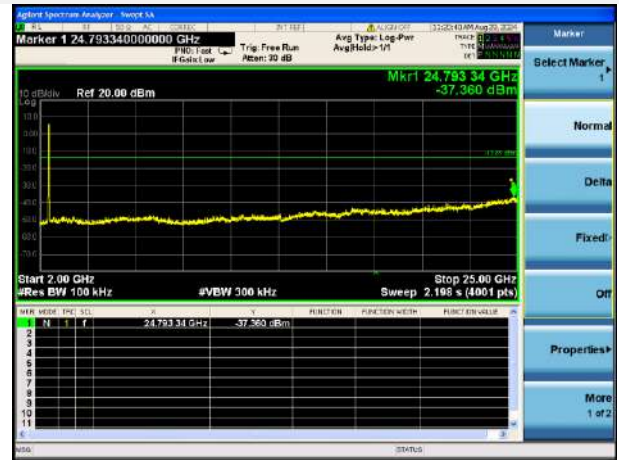


802.11g CHANNEL 9 CARRIER LEVEL



 
802.11g CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

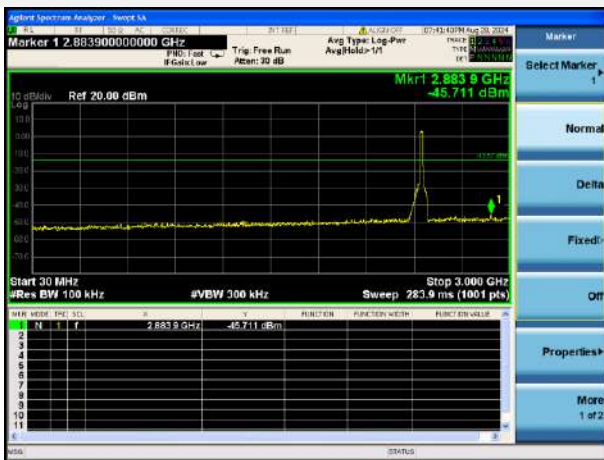

 
802.11g CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

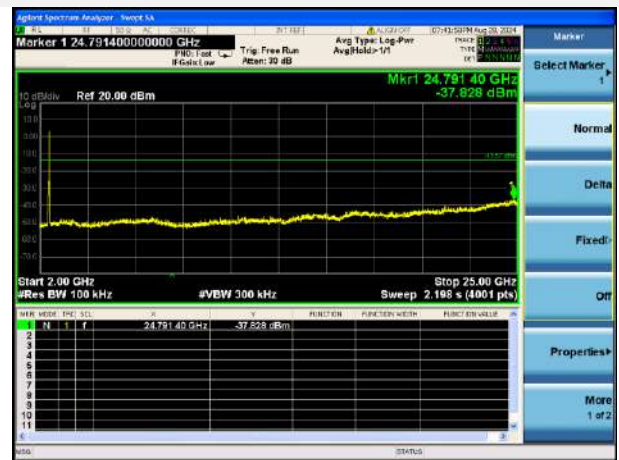

 
802.11g CHANNEL 10 CARRIER LEVEL

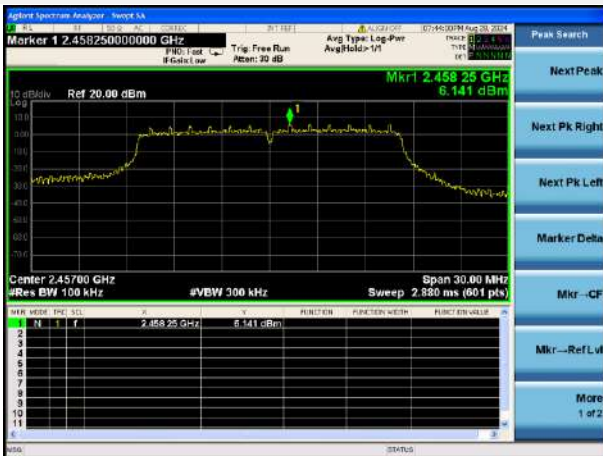

 802.11g CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

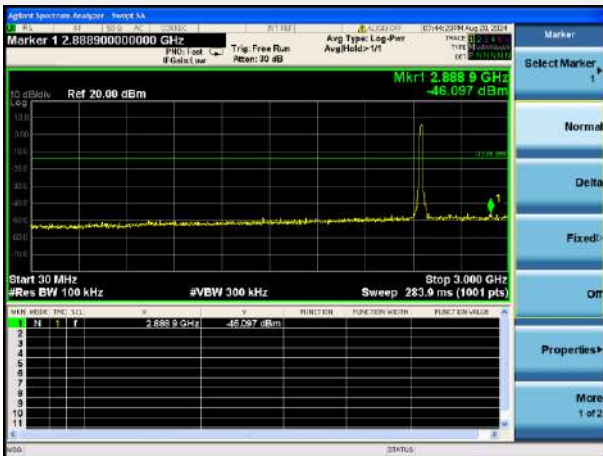

 
802.11g CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz

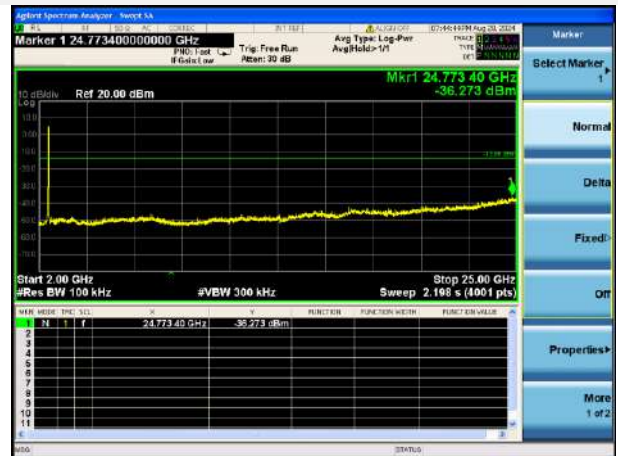

802.11g CHANNEL 11 CARRIER LEVEL



 
802.11g CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

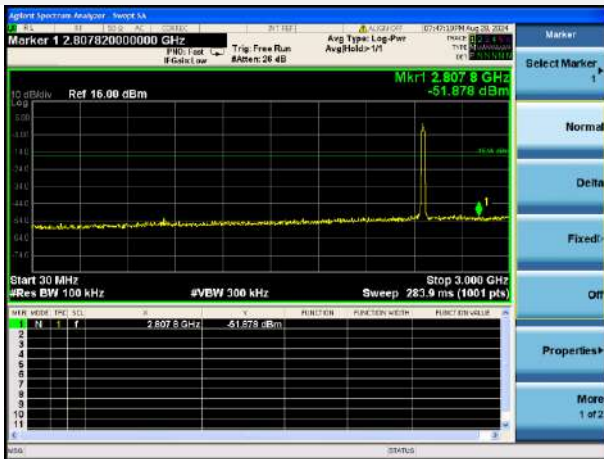


802.11g CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz



 
802.11n-20 MHz CHANNEL 1 CARRIER LEVEL

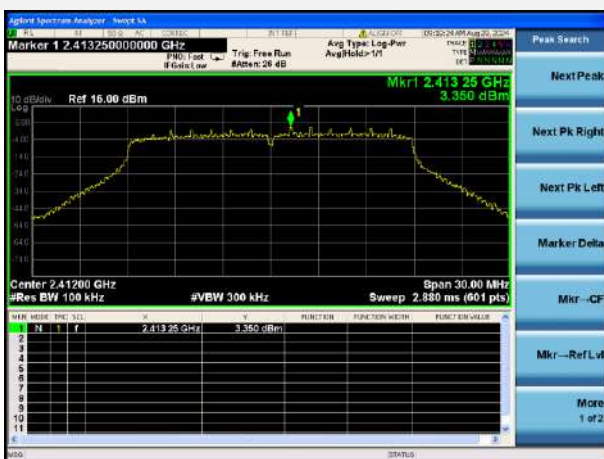

 
802.11n-20 MHz CHANNEL 1, SPURIOUS
30 MHz ~ 3 GHz

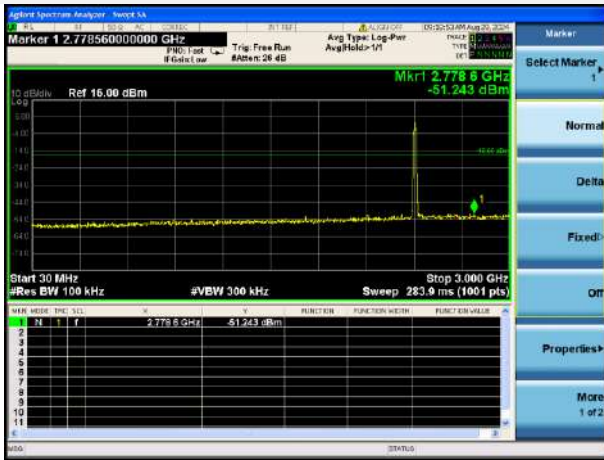

 
802.11n-20 MHz CHANNEL 1, SPURIOUS
2 GHz ~ 25 GHz

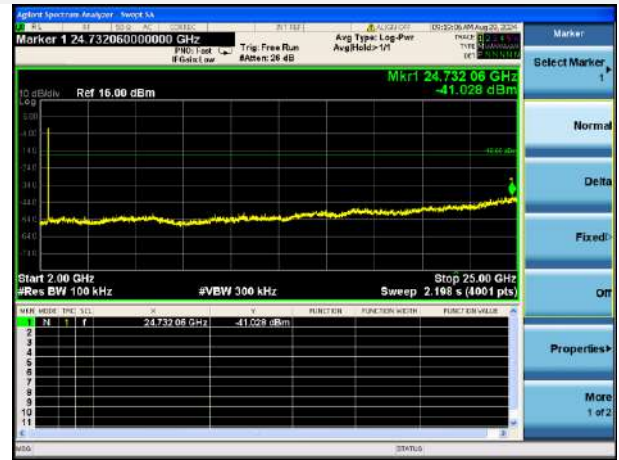

 
802.11n-20 MHz CHANNEL 2 CARRIER LEVEL

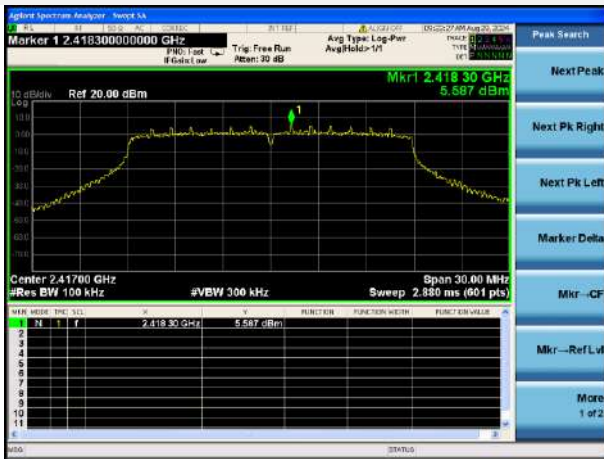

 
802.11n-20 MHz CHANNEL 2, SPURIOUS
30 MHz ~ 3 GHz

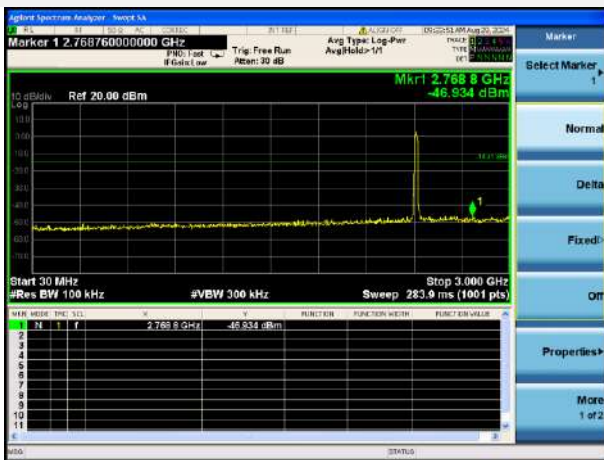

 
802.11n-20 MHz CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz

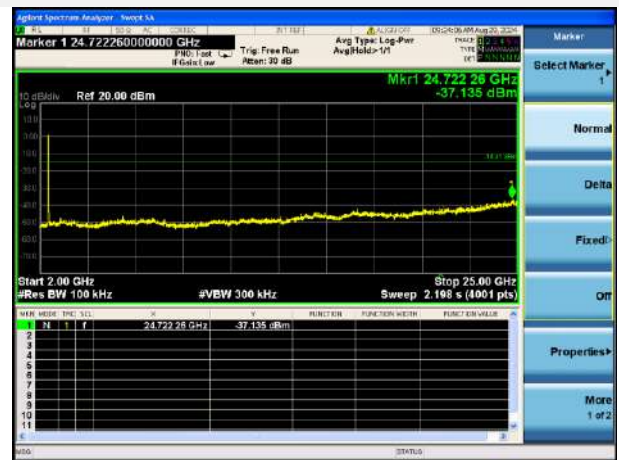

 802.11n-20 MHz CHANNEL 3 CARRIER LEVEL

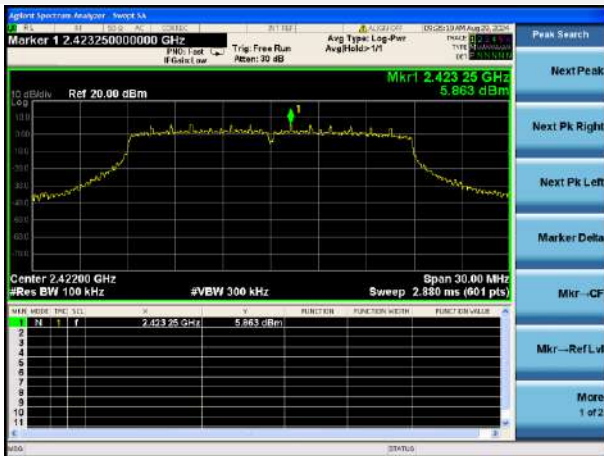

 
802.11n-20 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

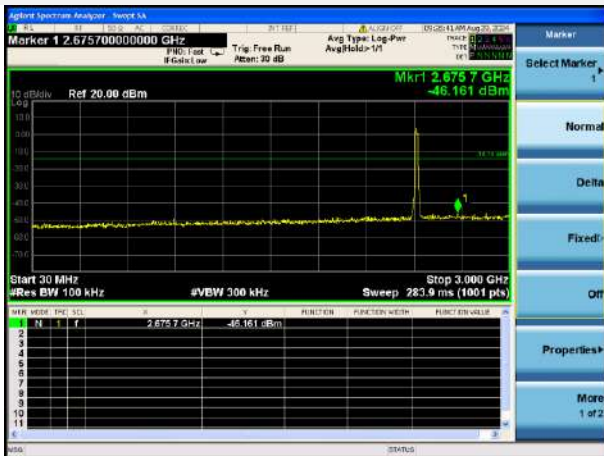


802.11n-20 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz



 
802.11n-20 MHz CHANNEL 4 CARRIER LEVEL

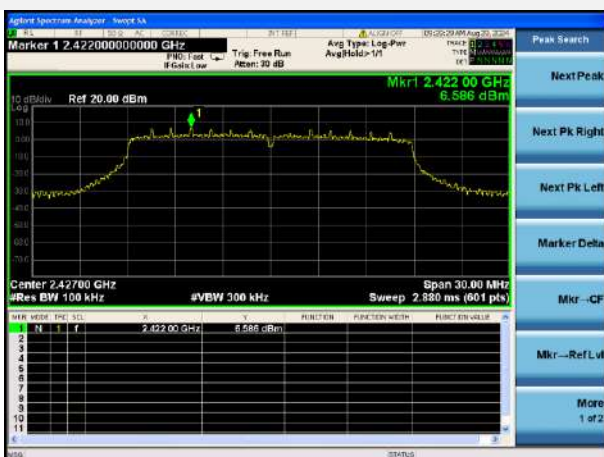

 
802.11n-20 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

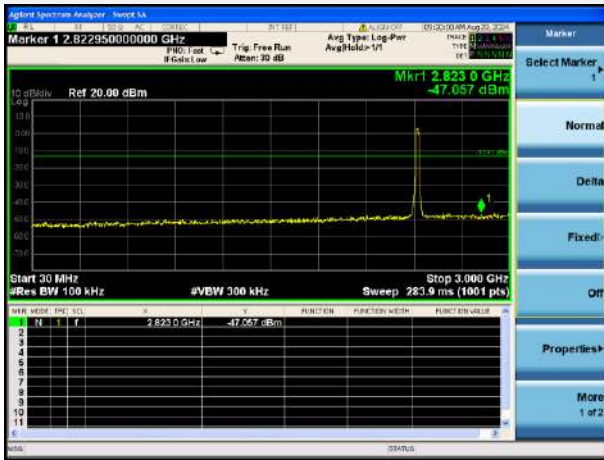

 
802.11n-20 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

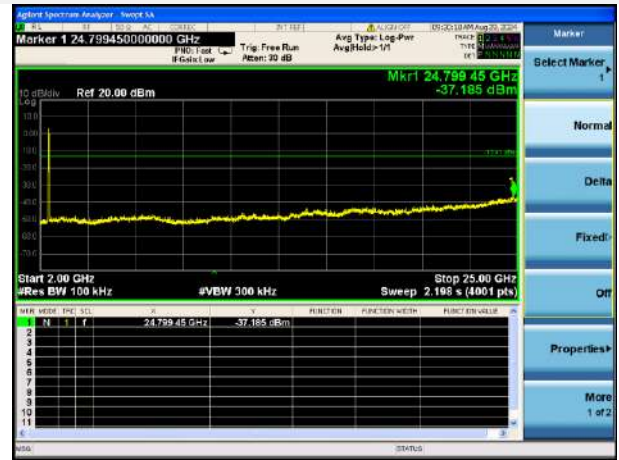

 
802.11n-20 MHz CHANNEL 6 CARRIER LEVEL

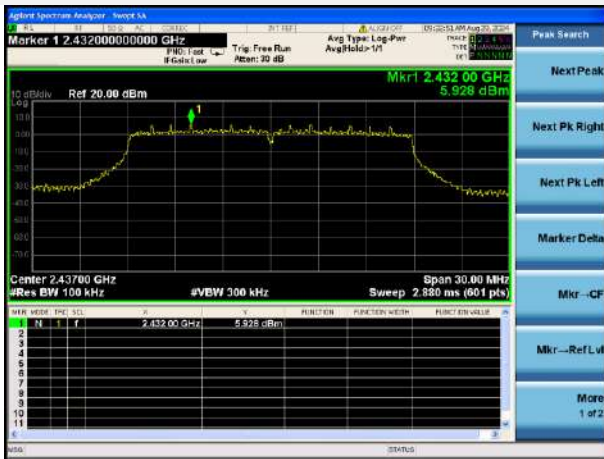

 
802.11n-20 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

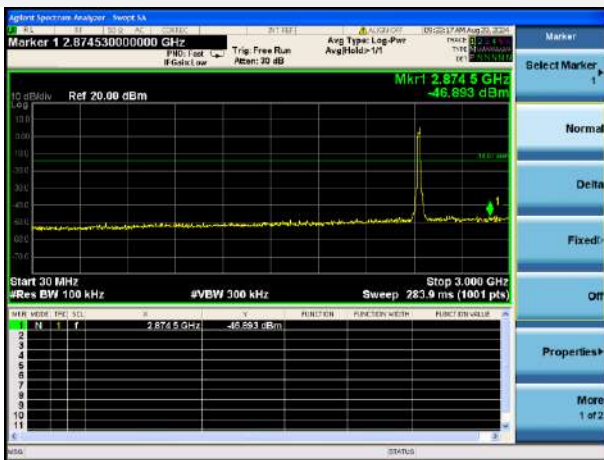

 
802.11n-20 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

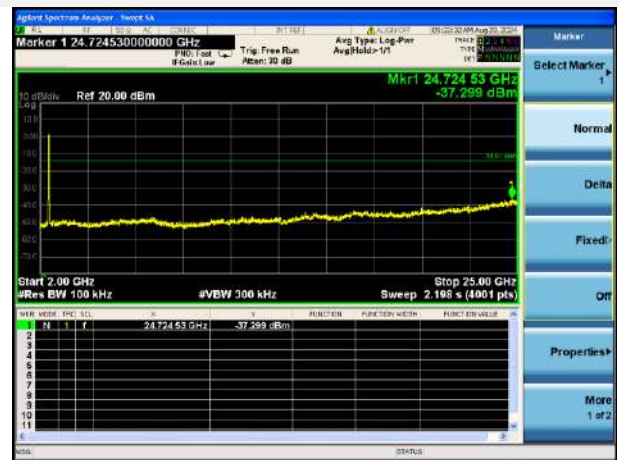

 
802.11n-20 MHz CHANNEL 9 CARRIER LEVEL

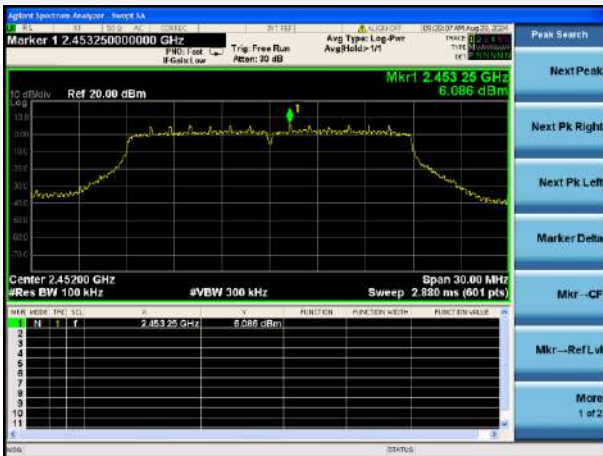

 
802.11n-20 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

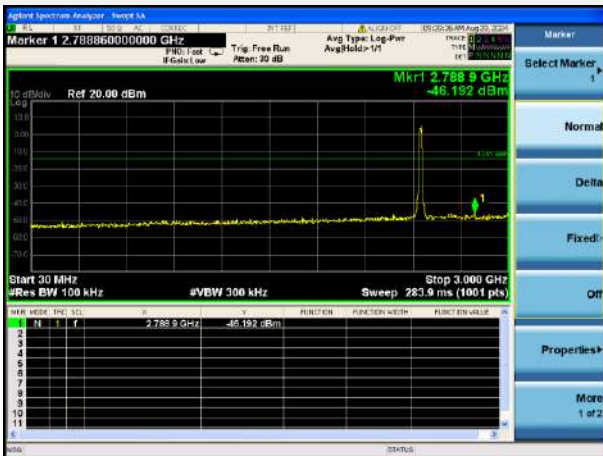

 
802.11n-20 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

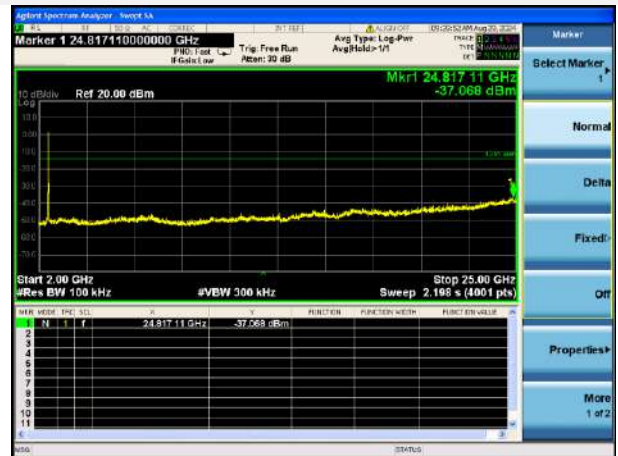

 
802.11n-20 MHz CHANNEL 10 CARRIER LEVEL

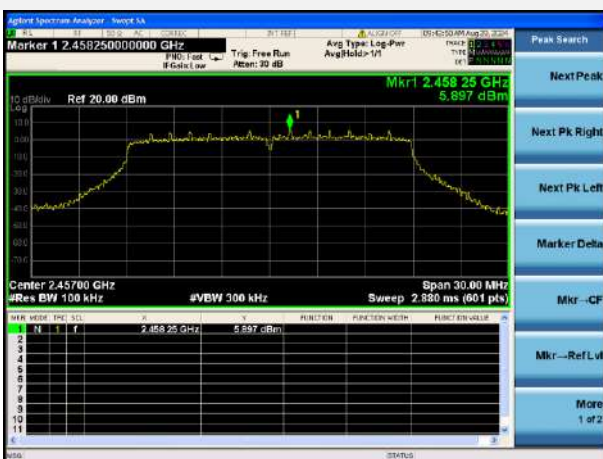

 
802.11n-20 MHz CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

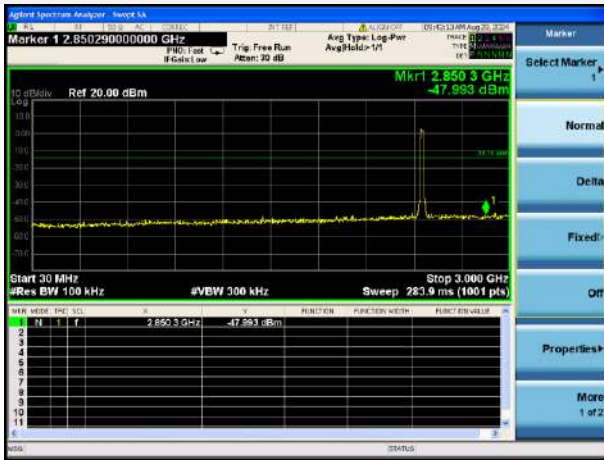

 
802.11n-20 MHz CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz

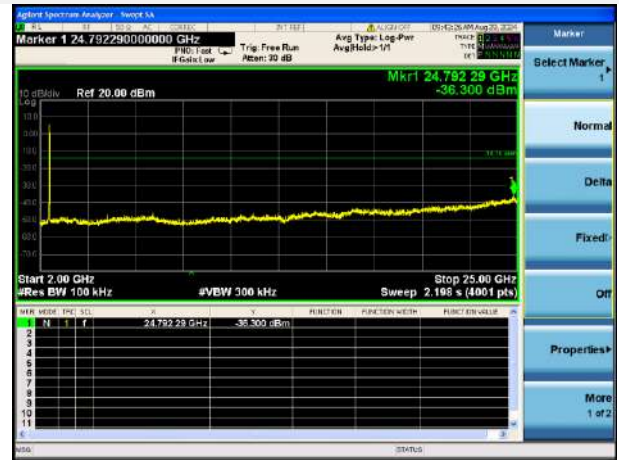

 
802.11n-20 MHz 11 CHANNEL CARRIER LEVEL

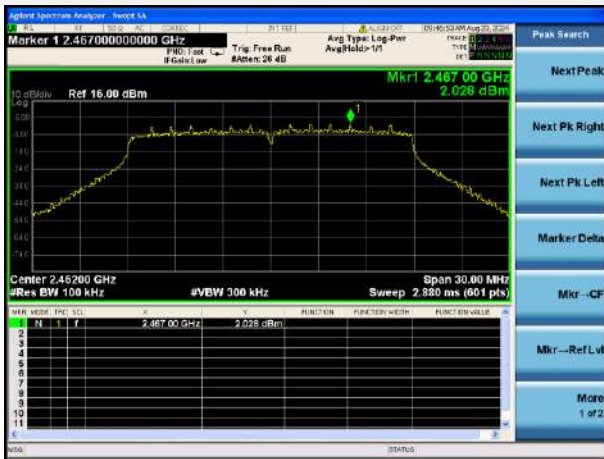

 
802.11n-20 MHz CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

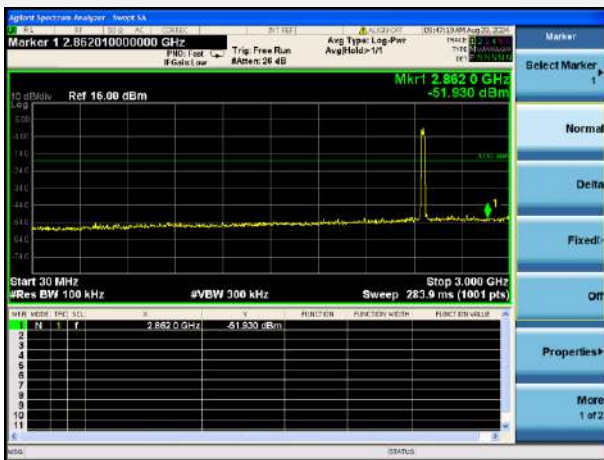

 
802.11n-20 MHz CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

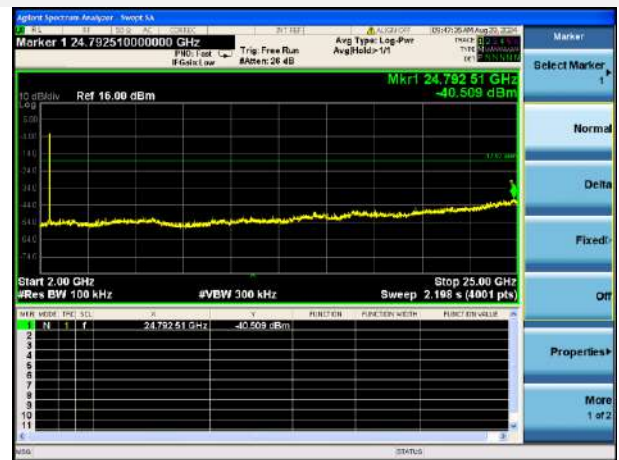

 802.11n-40 MHz CHANNEL 3 CARRIER LEVEL

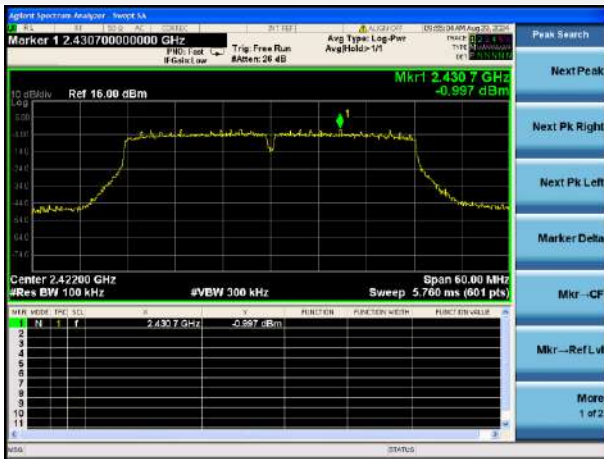

 
802.11n-40 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

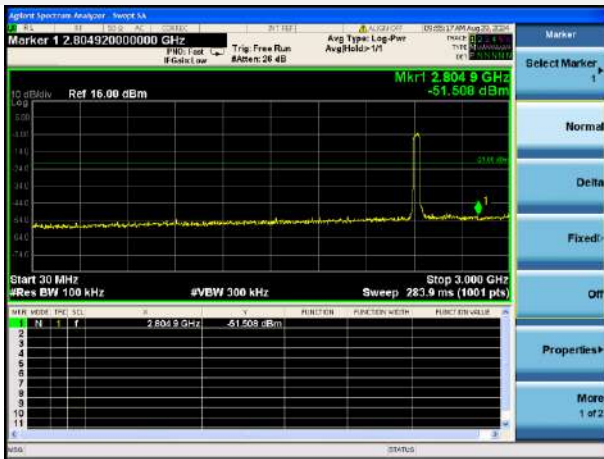


802.11n-40 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz



 802.11n-40 MHz CHANNEL 4 CARRIER LEVEL

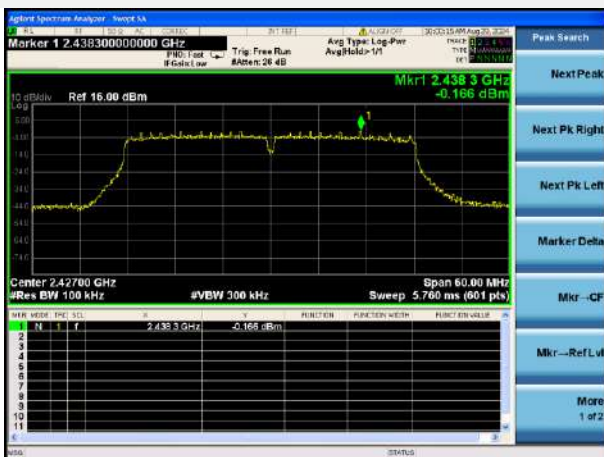

 802.11n-40 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

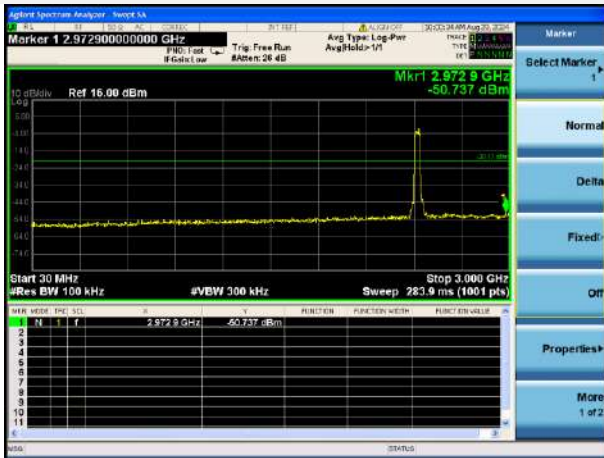


802.11n-40 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz




802.11n-40 MHz CHANNEL 5 CARRIER LEVEL



 
802.11n-40 MHz CHANNEL 5, SPURIOUS
30 MHz ~ 3 GHz

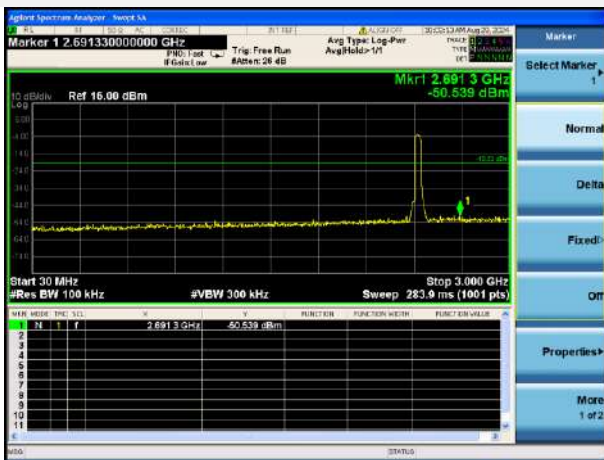

 
802.11n-40 MHz CHANNEL 5, SPURIOUS
2 GHz ~ 25 GHz

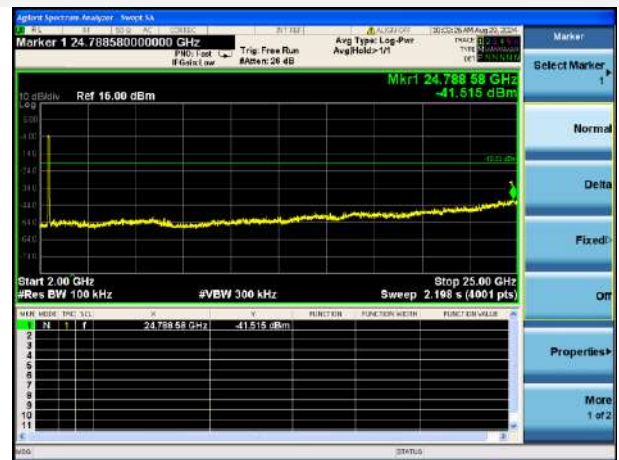

 
802.11n-40 MHz CHANNEL 6 CARRIER LEVEL

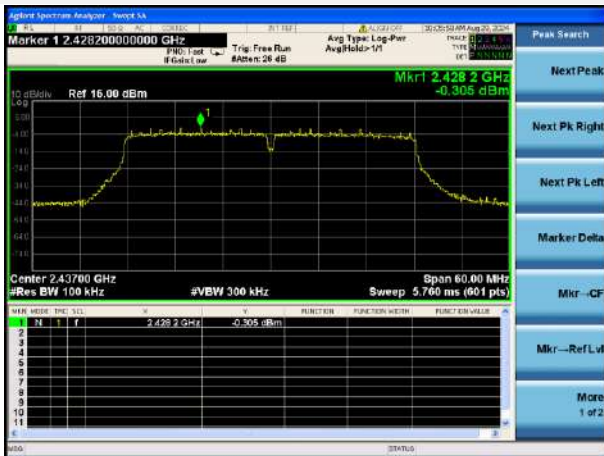

 
802.11n-40 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

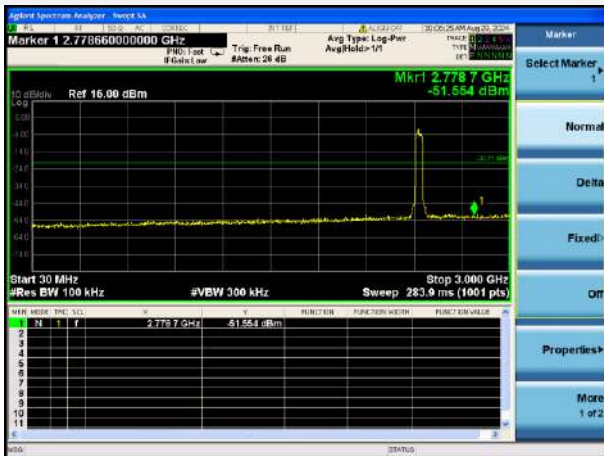

 
802.11n-40 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

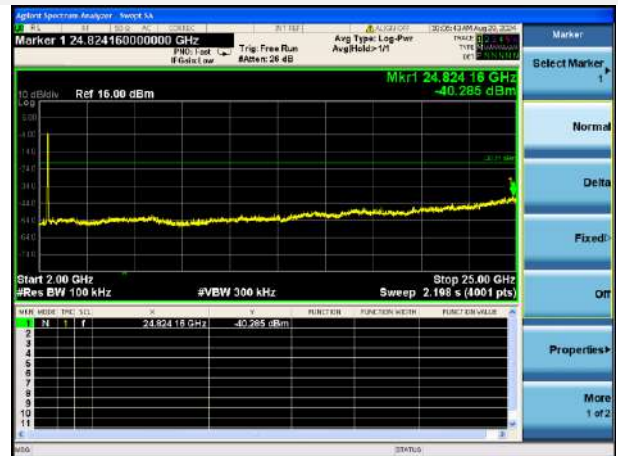

 
802.11n-40 MHz CHANNEL 7 CARRIER LEVEL

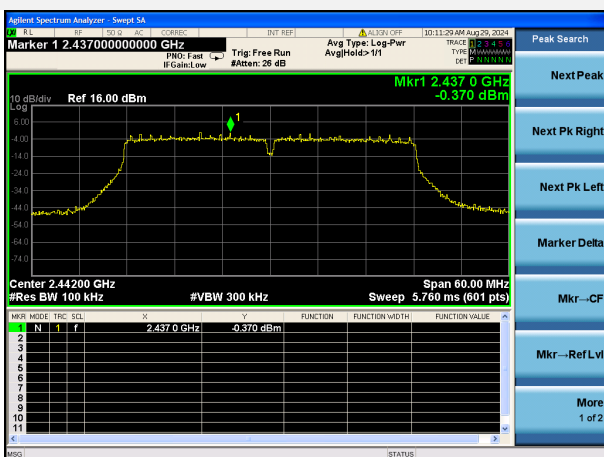

 
802.11n-40 MHz CHANNEL 7, SPURIOUS
30 MHz ~ 3 GHz

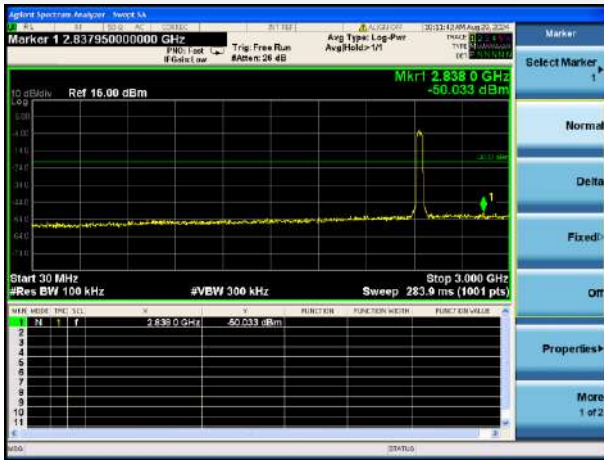

 
802.11n-40 MHz CHANNEL 7, SPURIOUS
2 GHz ~ 25 GHz

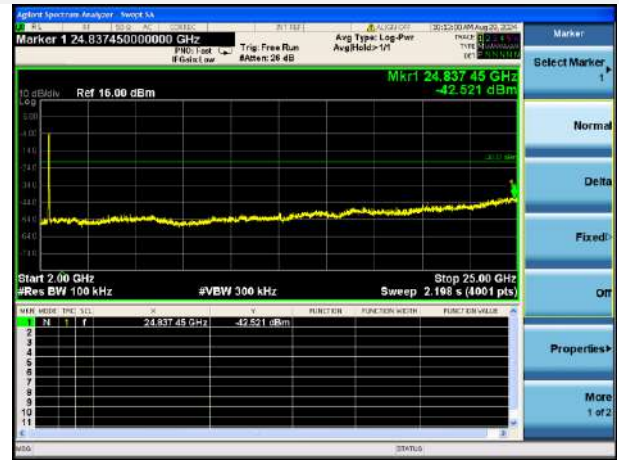

 
802.11n-40 MHz CHANNEL 8 CARRIER LEVEL

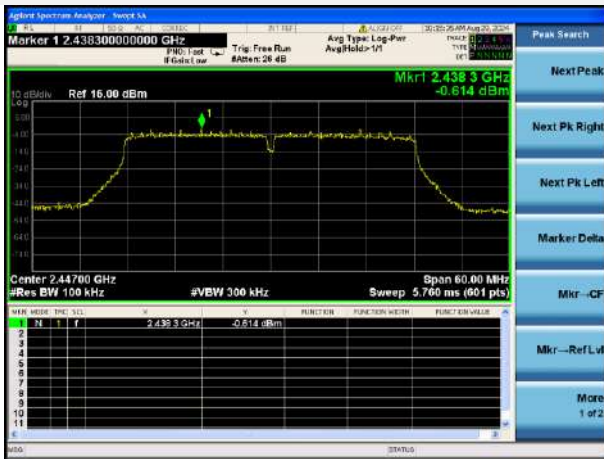

 802.11n-40 MHz CHANNEL 8, SPURIOUS
30 MHz ~ 3 GHz

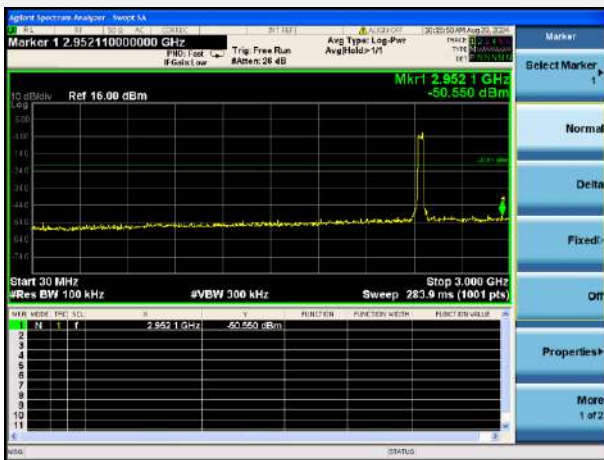

 
802.11n-40 MHz CHANNEL 8, SPURIOUS
2 GHz ~ 25 GHz

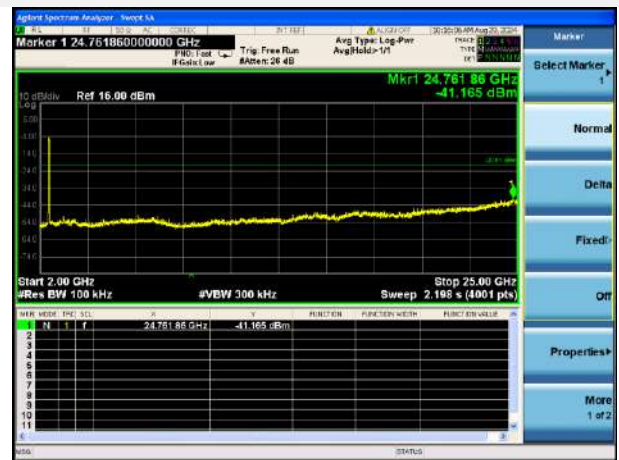


802.11n-40 MHz CHANNEL 9 CARRIER LEVEL



 
802.11n-40 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

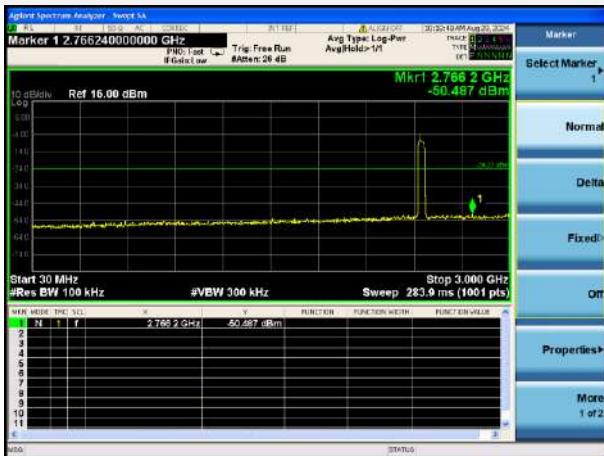

 
802.11n-40 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

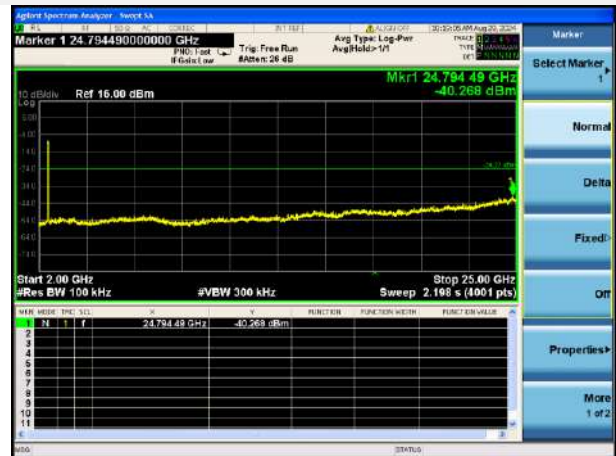

 802.11ax-20 MHz CHANNEL 1 CARRIER LEVEL

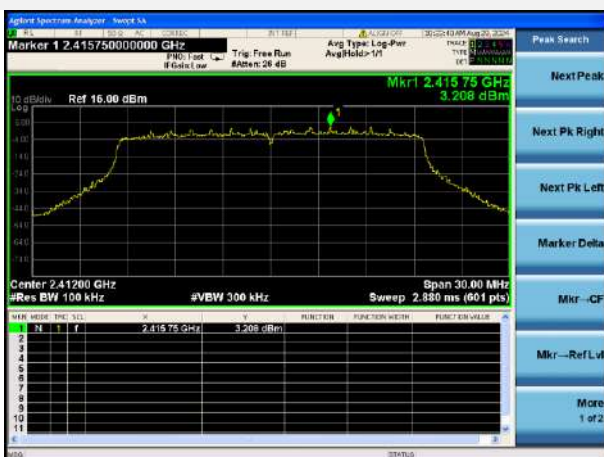

 
802.11ax-20 MHz CHANNEL 1, SPURIOUS
30 MHz ~ 3 GHz

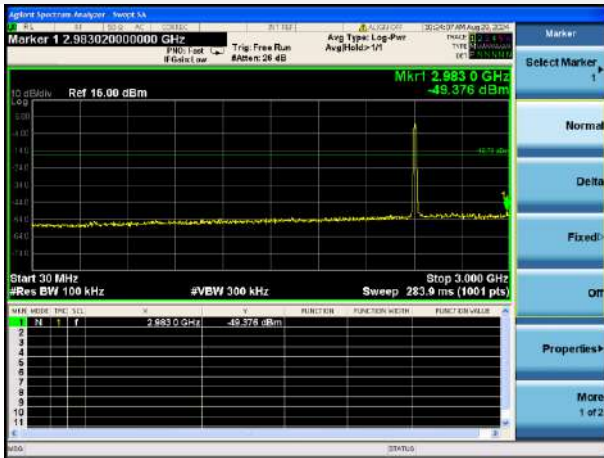


802.11ax-20 MHz CHANNEL 1, SPURIOUS
2 GHz ~ 25 GHz



 
802.11ax-20 MHz CHANNEL 2 CARRIER LEVEL

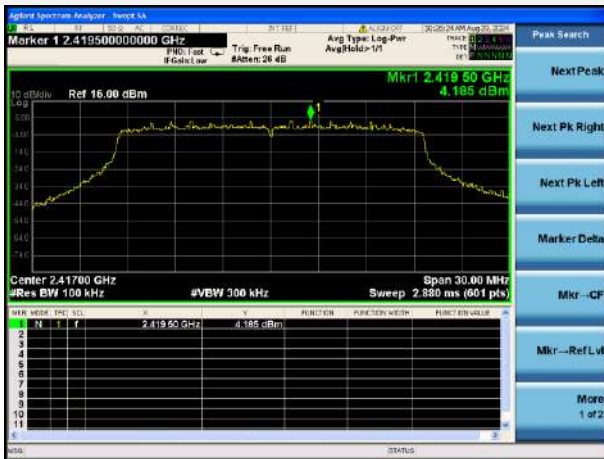

 
802.11ax-20 MHz CHANNEL 2, SPURIOUS
30 MHz ~ 3 GHz

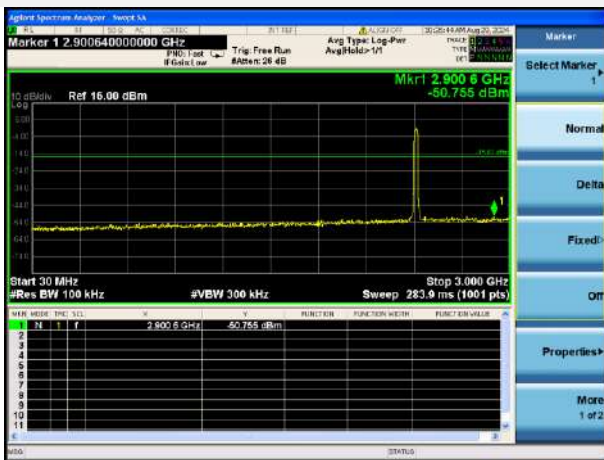

 
802.11ax-20 MHz CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz

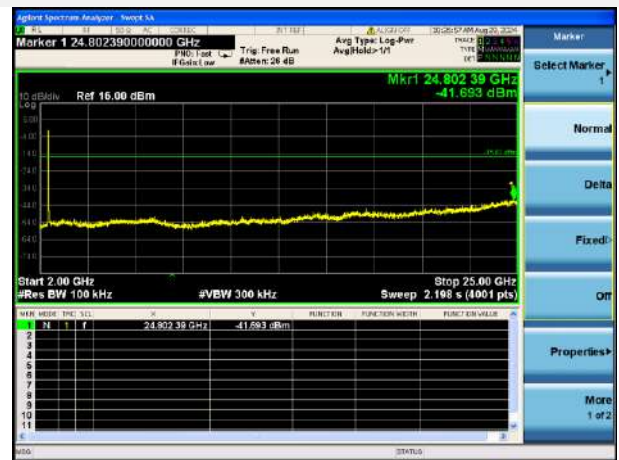

 
802.11ax-20 MHz CHANNEL 3 CARRIER LEVEL

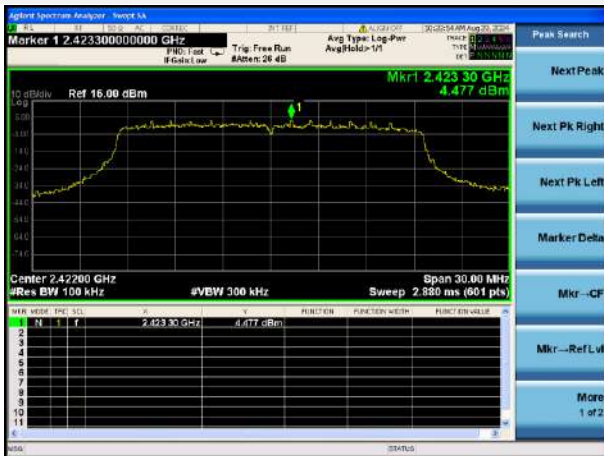

 
802.11ax-20 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

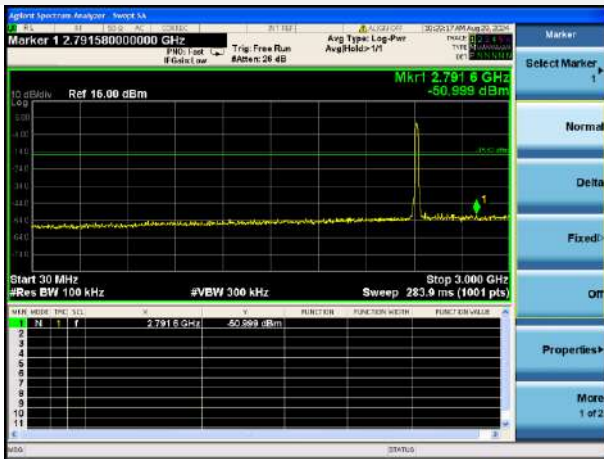

 
802.11ax-20 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

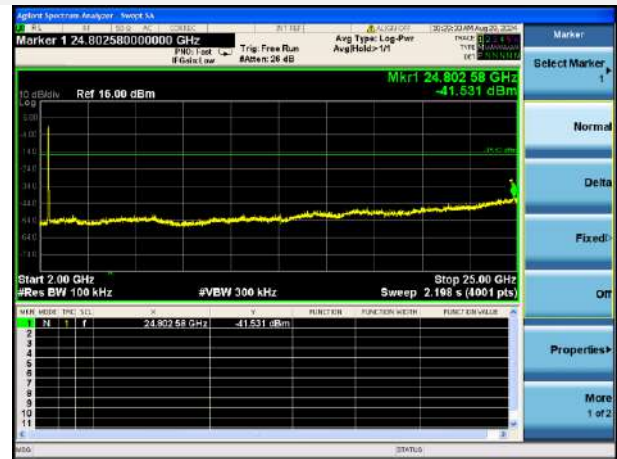

 
802.11ax-20 MHz CHANNEL 4 CARRIER LEVEL

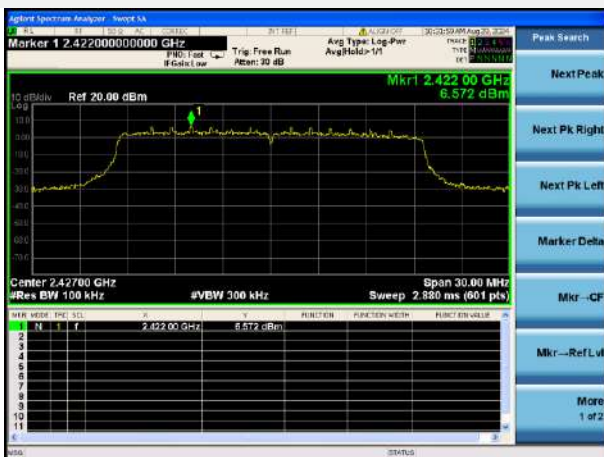

 
802.11ax-20 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

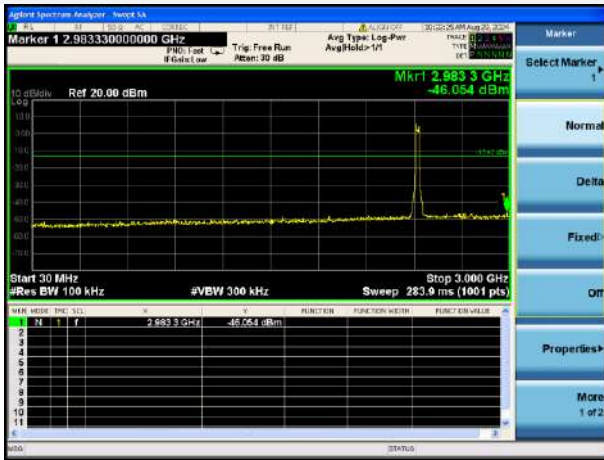

 
802.11ax-20 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

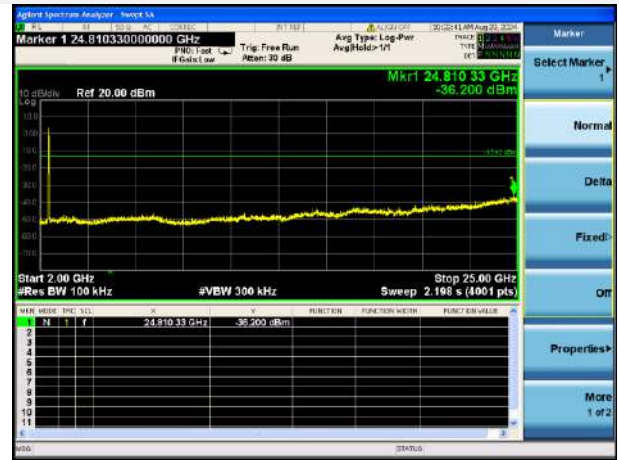

 
802.11ax-20 MHz CHANNEL 6 CARRIER LEVEL

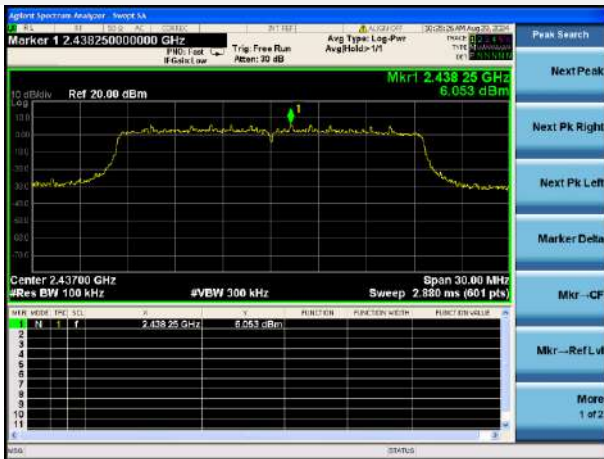

 
802.11ax-20 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

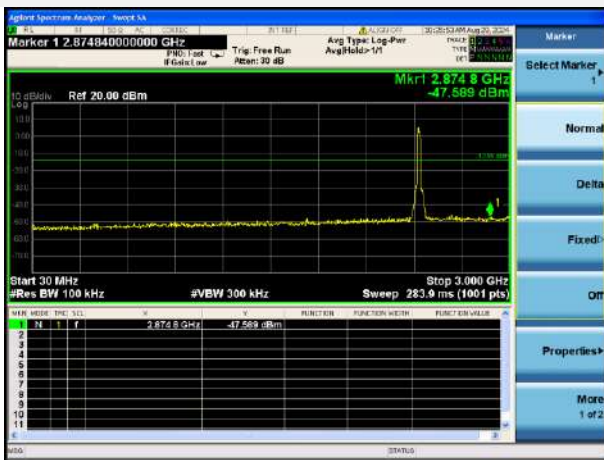

 
802.11ax-20 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

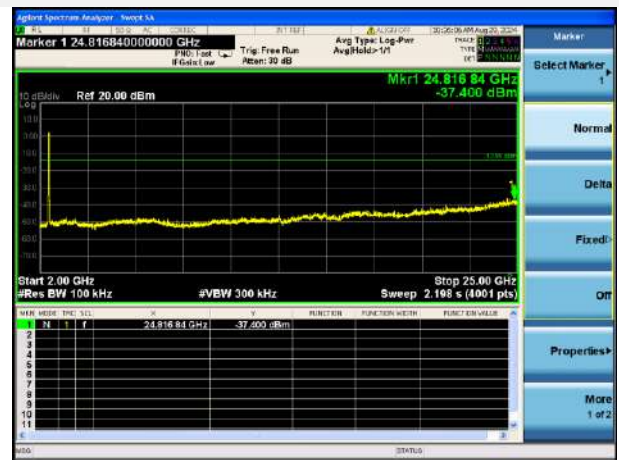

 802.11ax-20 MHz CHANNEL 9 CARRIER LEVEL

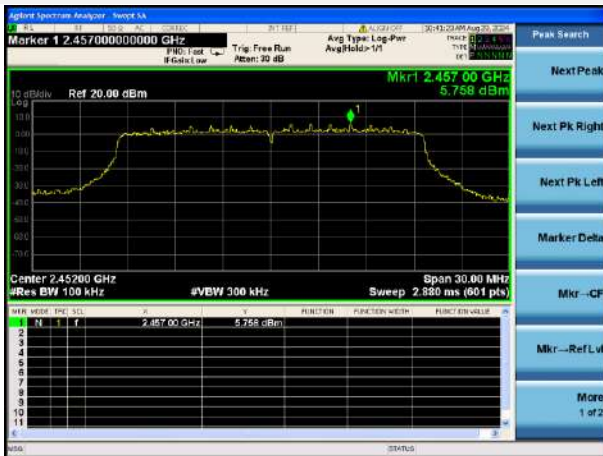

 
802.11ax-20 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

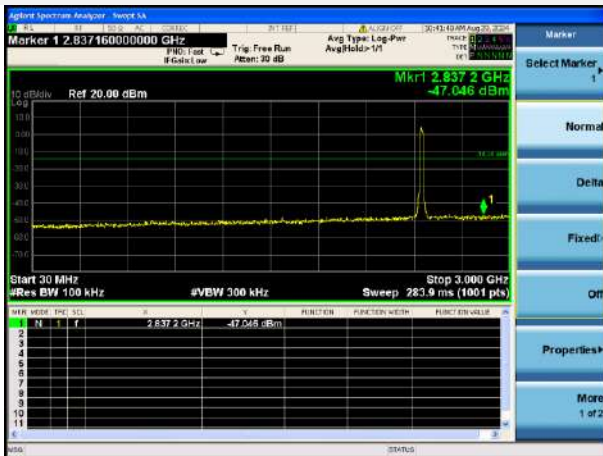


802.11ax-20 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz



 802.11ax-20 MHz CHANNEL 10 CARRIER LEVEL

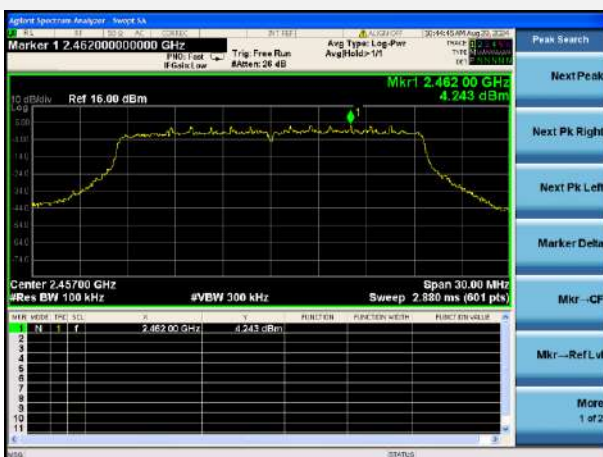

 
802.11ax-20 MHz CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

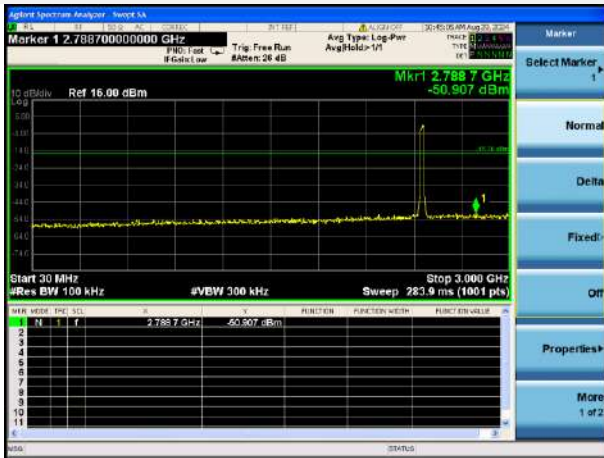


802.11ax-20 MHz CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz



 
802.11ax-20 MHz CHANNEL 11 CARRIER LEVEL

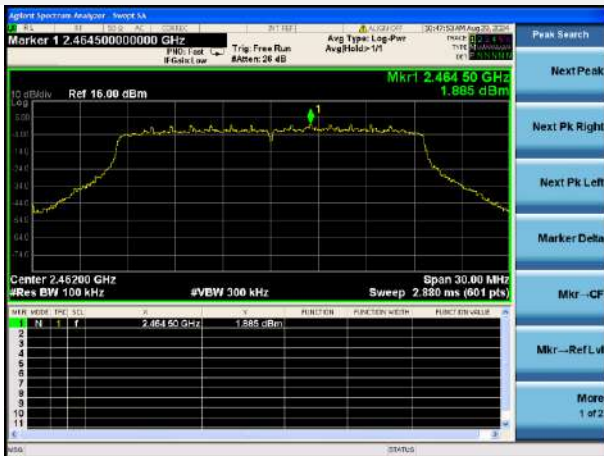

 
802.11ax-20 MHz CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

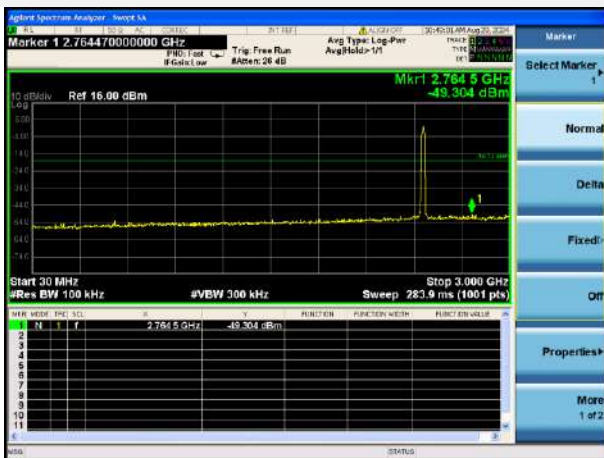

 
802.11ax-20 MHz CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

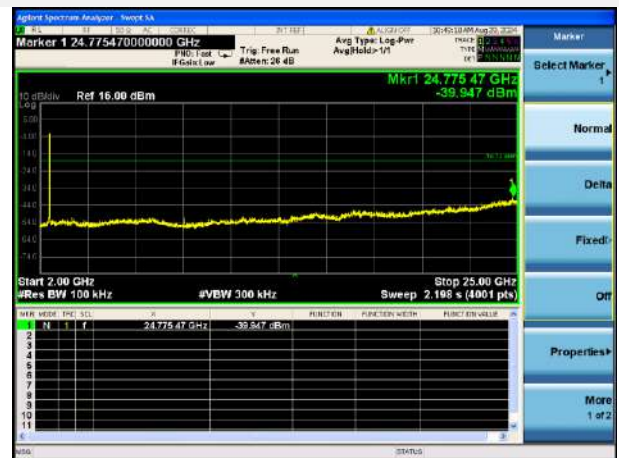

 802.11ax-40 MHz CHANNEL 3 CARRIER LEVEL

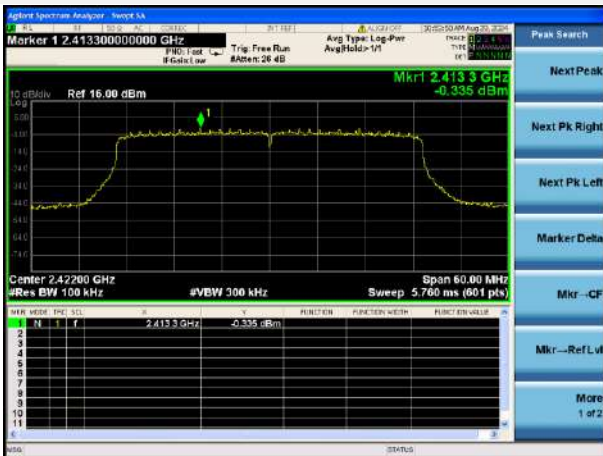

 
802.11ax-40 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

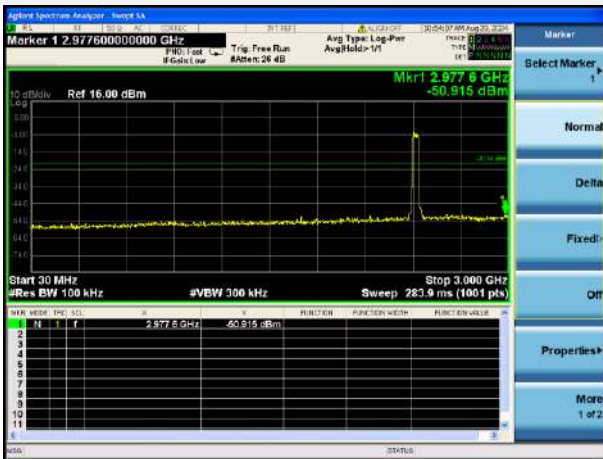


802.11ax-40 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz



 
802.11ax-40 MHz CHANNEL 4 CARRIER LEVEL

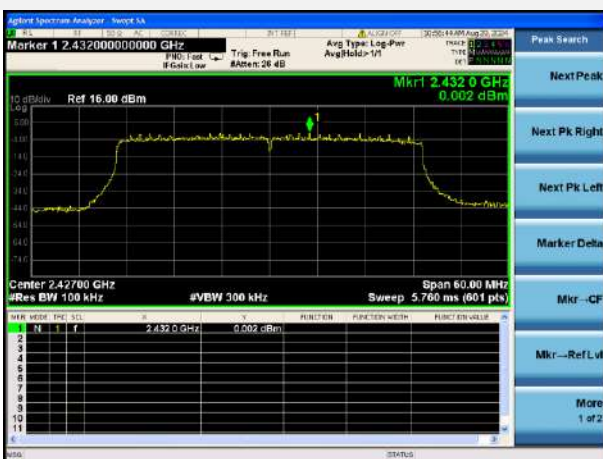

 
802.11ax-40 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

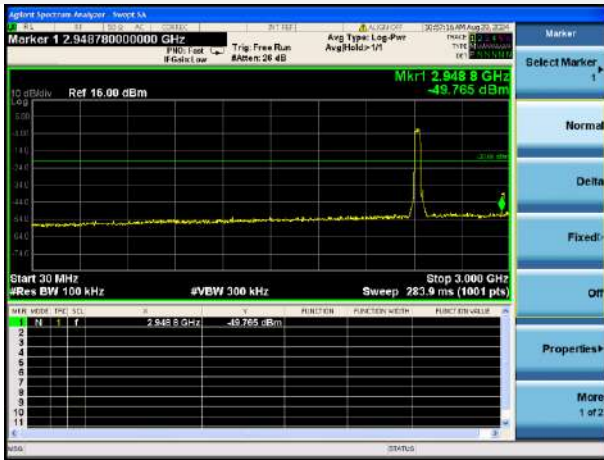

 
802.11ax-40 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

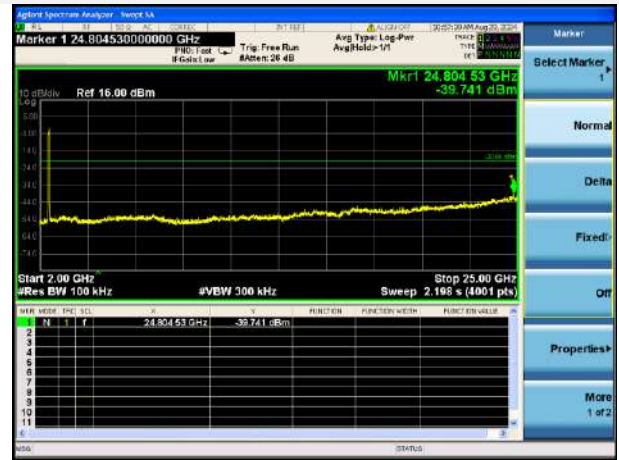

 
802.11ax-40 MHz CHANNEL 5 CARRIER LEVEL

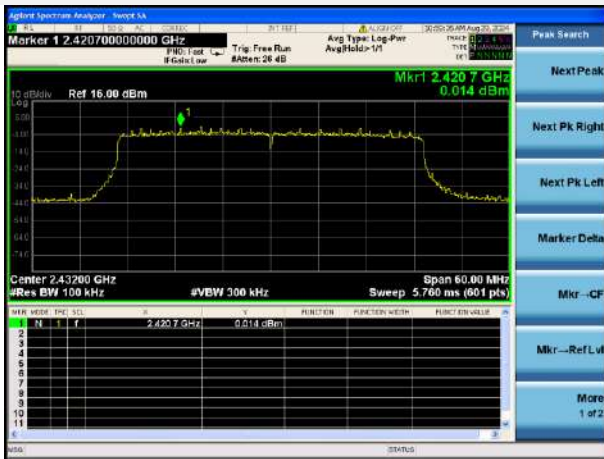

 
802.11ax-40 MHz CHANNEL 5, SPURIOUS
30 MHz ~ 3 GHz

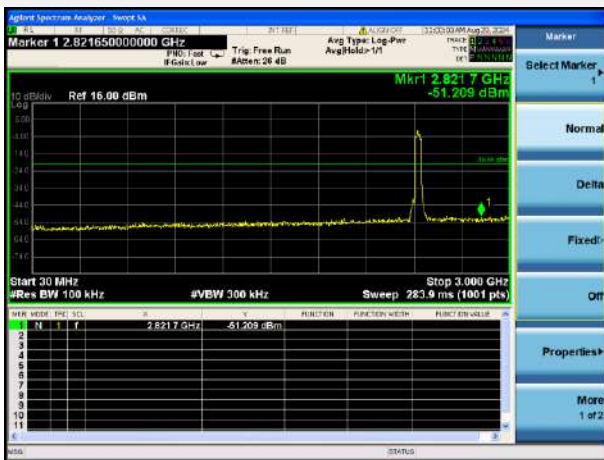

 
802.11ax-40 MHz CHANNEL 5, SPURIOUS
2 GHz ~ 25 GHz

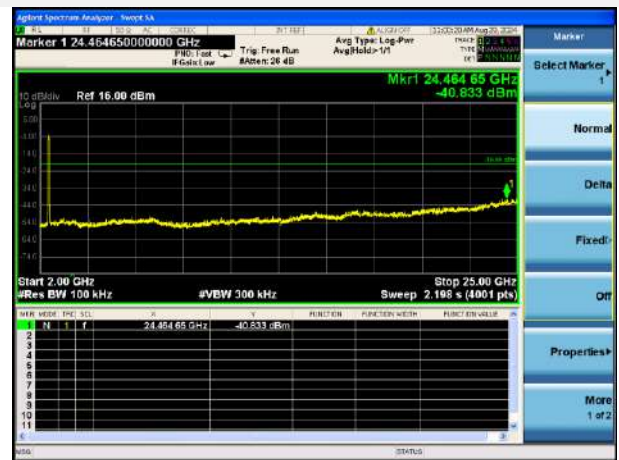

 802.11ax-40 MHz CHANNEL 6 CARRIER LEVEL

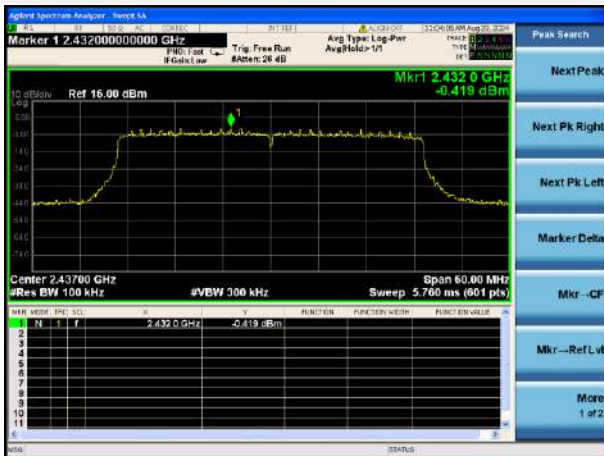

 
802.11ax-40 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

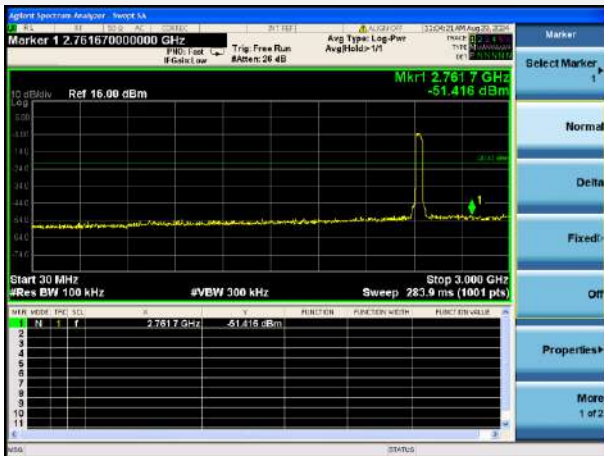


802.11ax-40 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz



 802.11ax-40 MHz CHANNEL 7 CARRIER LEVEL

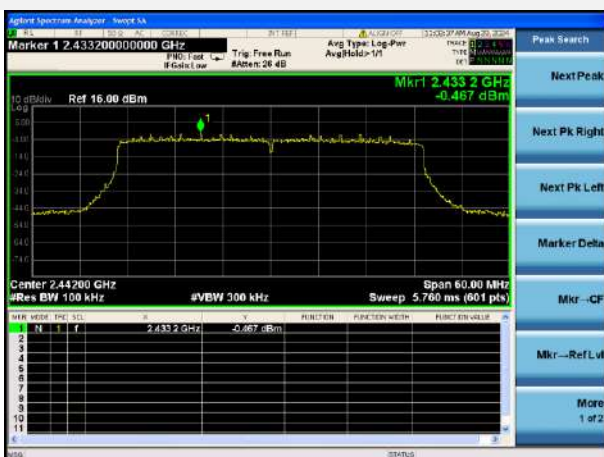

 
802.11ax-40 MHz CHANNEL 7, SPURIOUS
30 MHz ~ 3 GHz

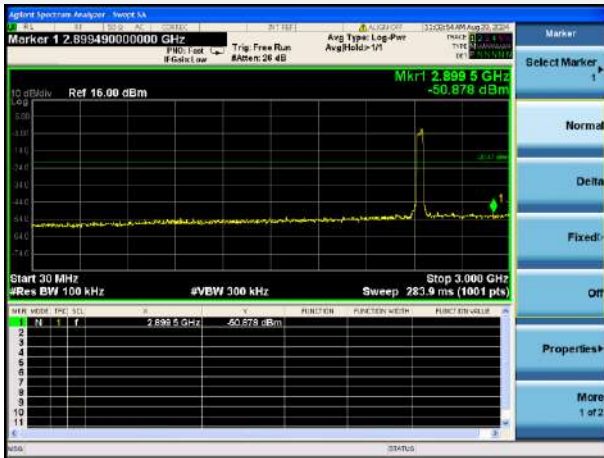


802.11ax-40 MHz CHANNEL 7, SPURIOUS
2 GHz ~ 25 GHz



 
802.11ax-40 MHz CHANNEL 8 CARRIER LEVEL

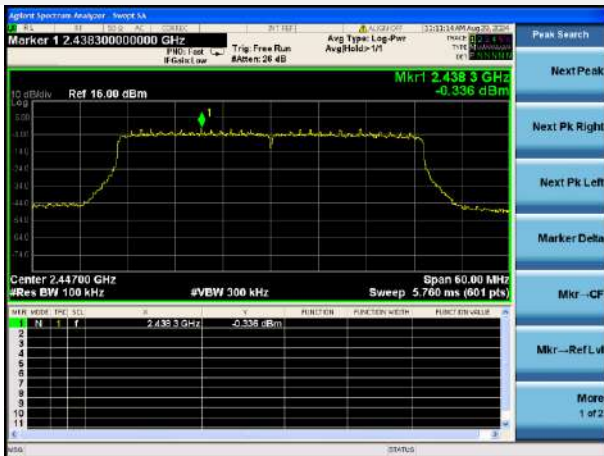

 
802.11ax-40 MHz CHANNEL 8, SPURIOUS
30 MHz ~ 3 GHz

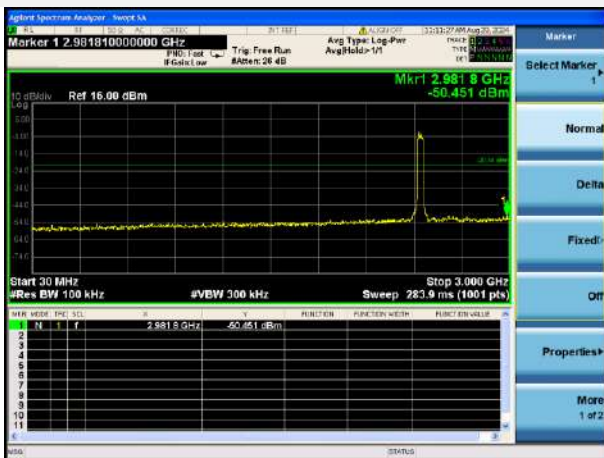

 
802.11ax-40 MHz CHANNEL 8, SPURIOUS
2 GHz ~ 25 GHz

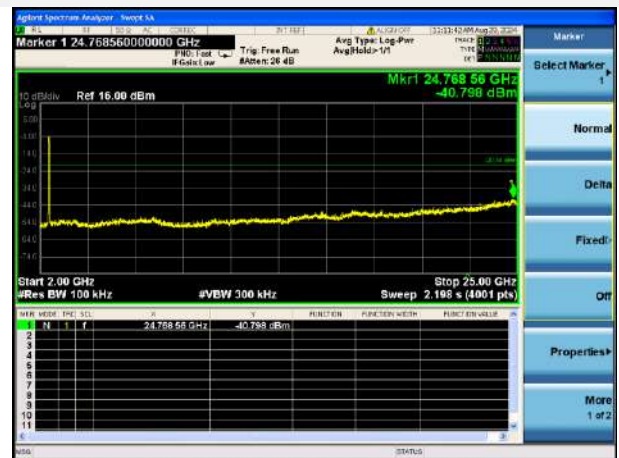

 
802.11ax-40 MHz CHANNEL 9 CARRIER LEVEL

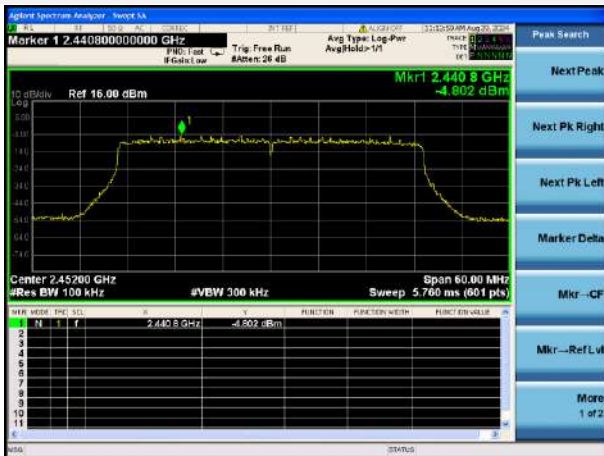

 802.11ax-40 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

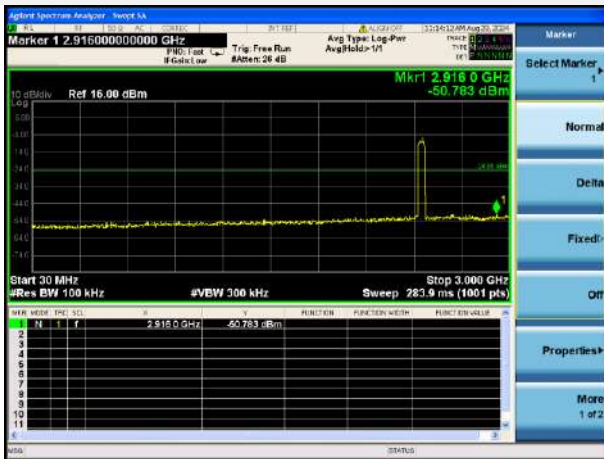

 802.11ax-40 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

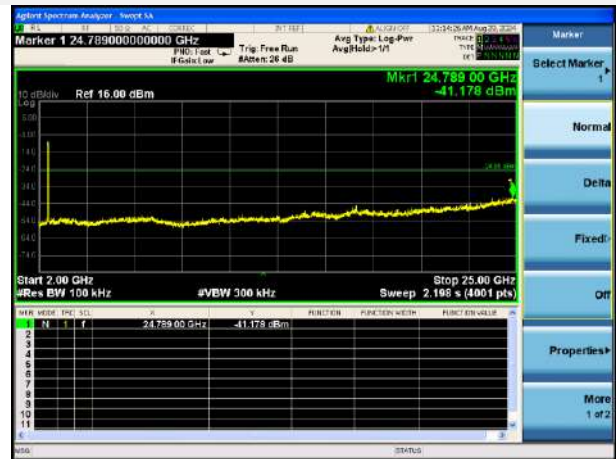


Aux. Antenna


802.11b CHANNEL 1 CARRIER LEVEL



 802.11b CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

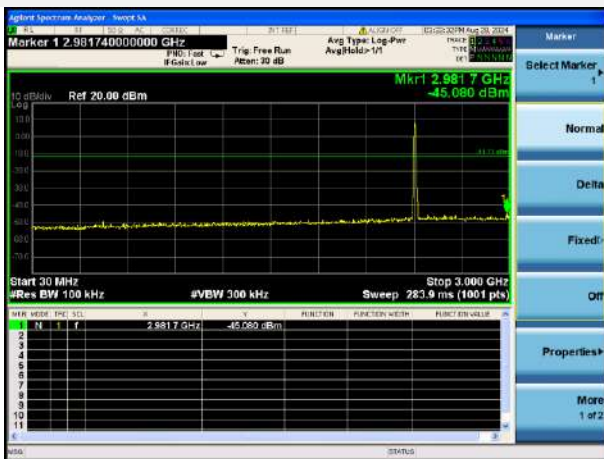

 
802.11b CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

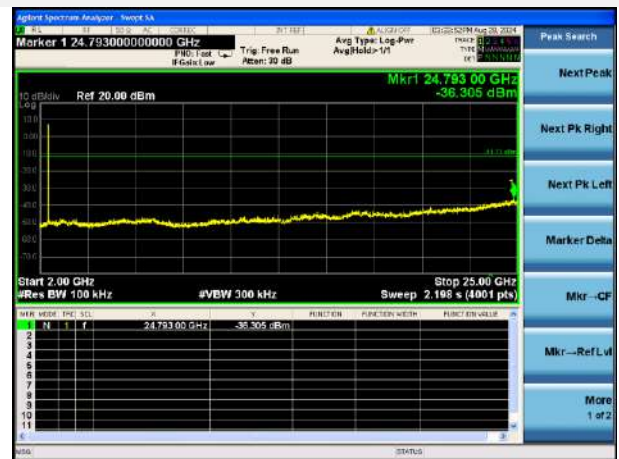


802.11b CHANNEL 6 CARRIER LEVEL



 802.11b CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

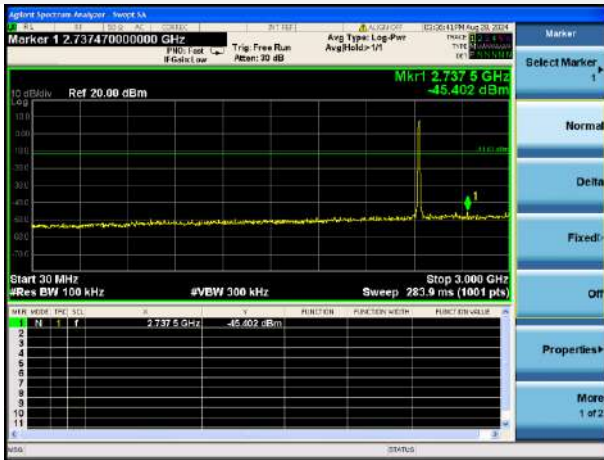

 
802.11b CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

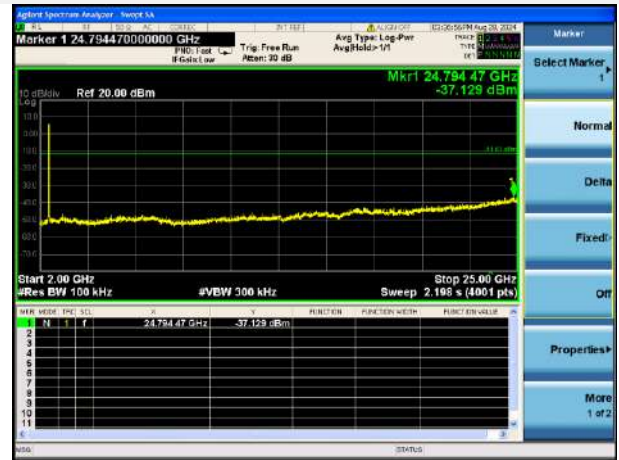

802.11b CHANNEL 11 CARRIER LEVEL



 
802.11b CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

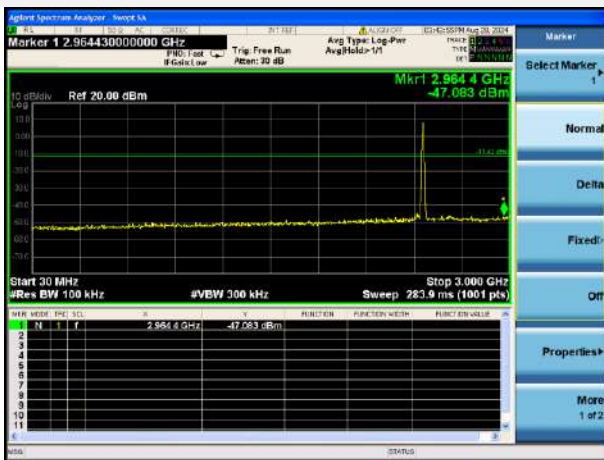


802.11b HIGH CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz



 
802.11g CHANNEL 1 CARRIER LEVEL

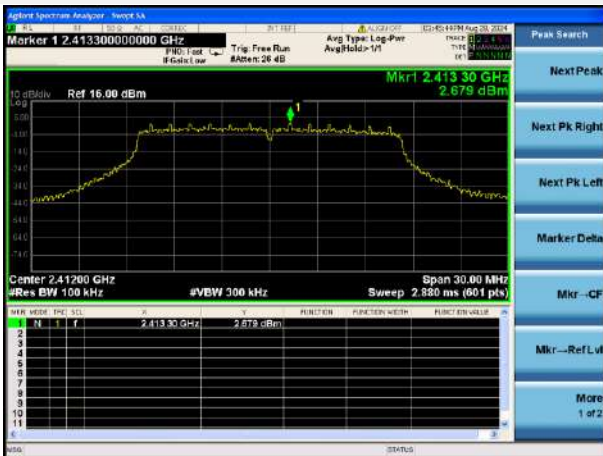

 802.11g CHANNEL 1, SPURIOUS 30 MHz ~ 3 GHz

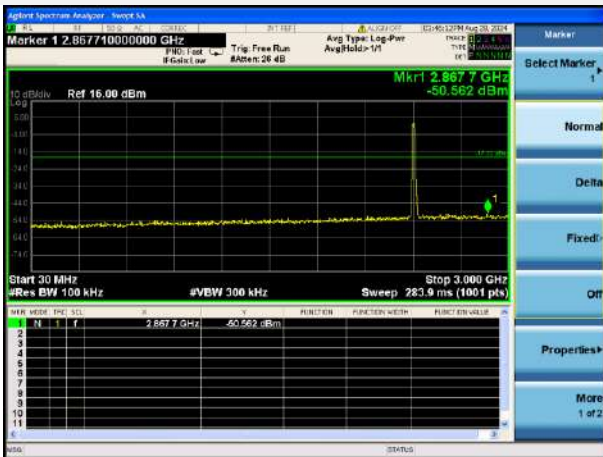

 
802.11g CHANNEL 1, SPURIOUS 2 GHz ~ 25 GHz

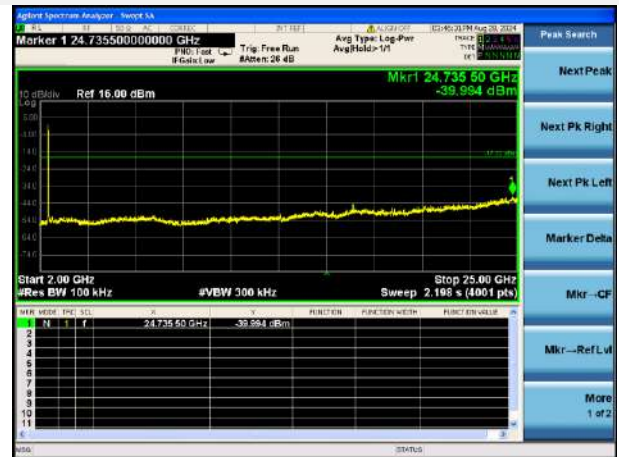

802.11g CHANNEL 2 CARRIER LEVEL



 802.11g CHANNEL 2, SPURIOUS
30 MHz ~ 3 GHz

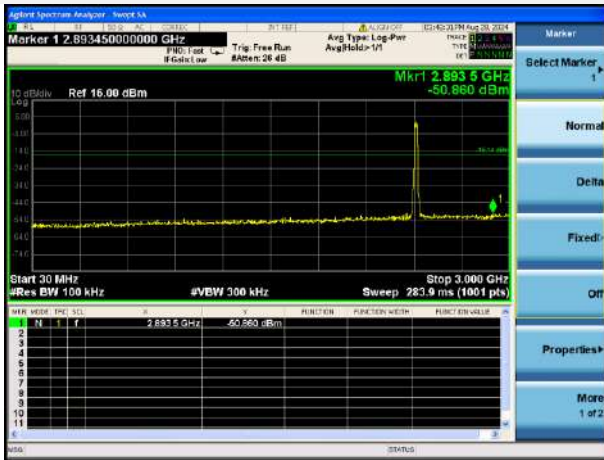


802.11g CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz




802.11g CHANNEL 3 CARRIER LEVEL



 802.11g CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

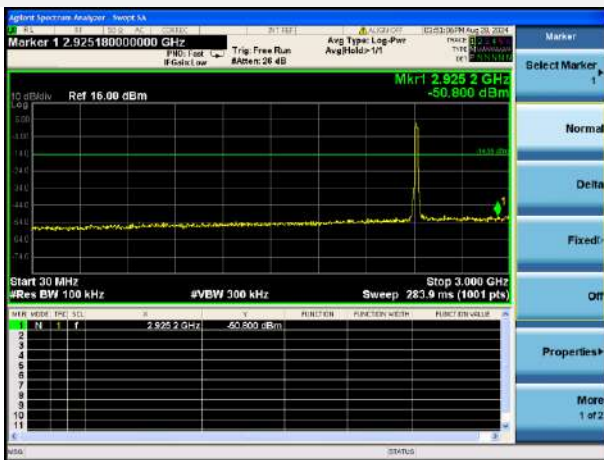

 
802.11g CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

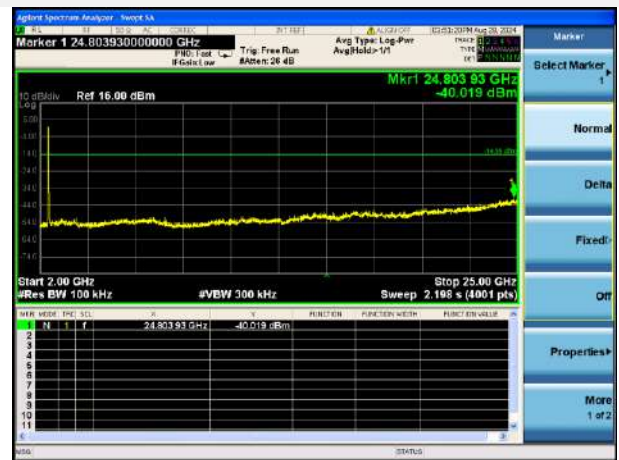


802.11g CHANNEL 4 CARRIER LEVEL



 
802.11g CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

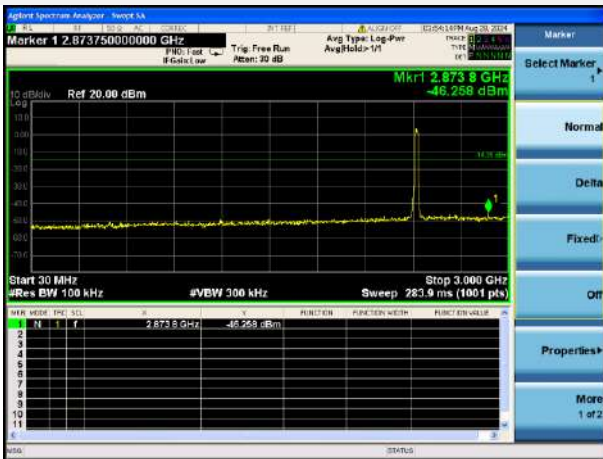

 
802.11g CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

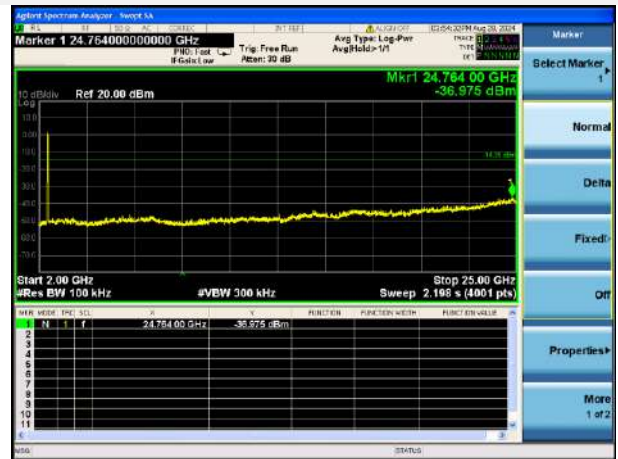

 
802.11g CHANNEL 6 CARRIER LEVEL

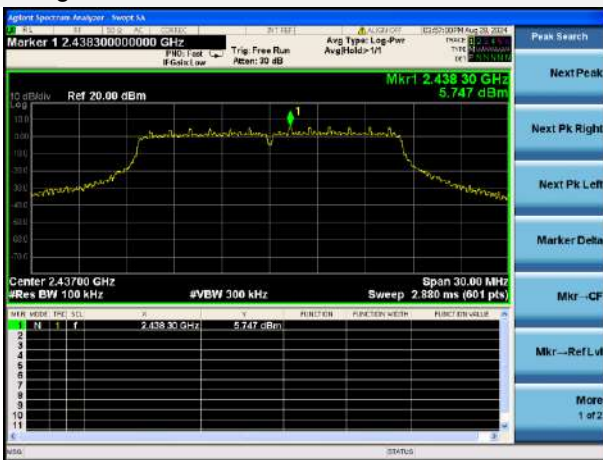

 802.11g CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

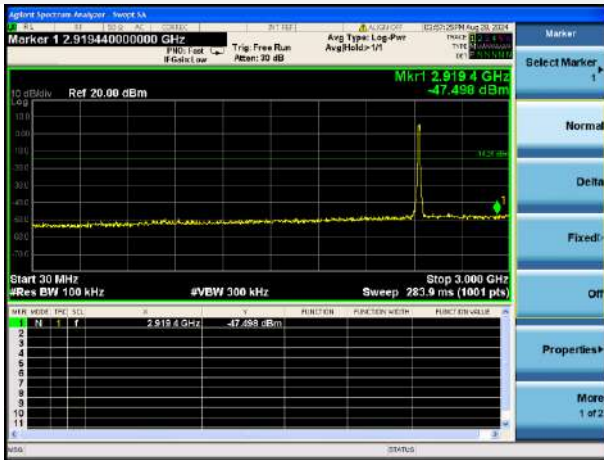

 
802.11g CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz

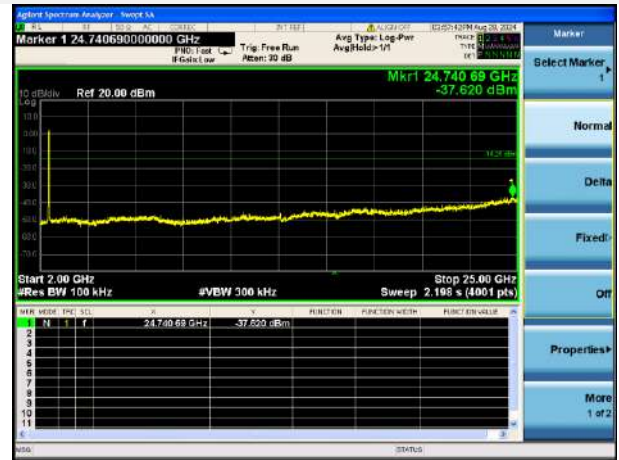


802.11g CHANNEL 9 CARRIER LEVEL



 802.11g CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

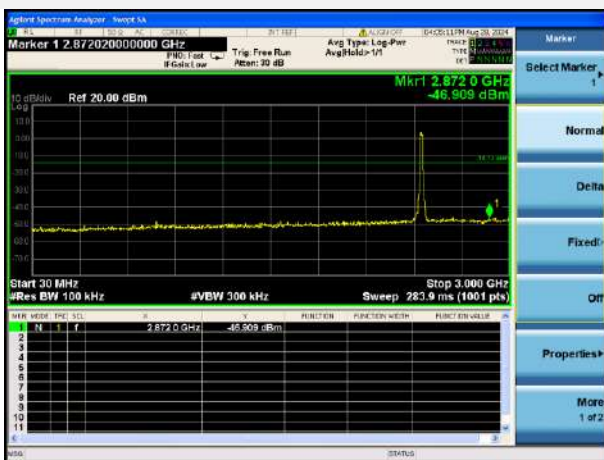

 
802.11g CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

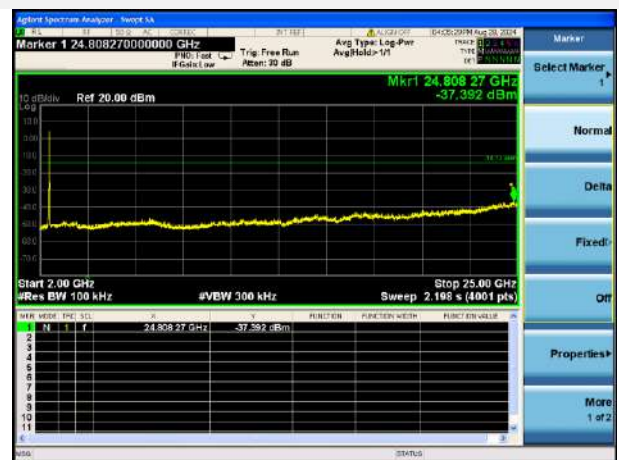

802.11g CHANNEL 10 CARRIER LEVEL



 
802.11g CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

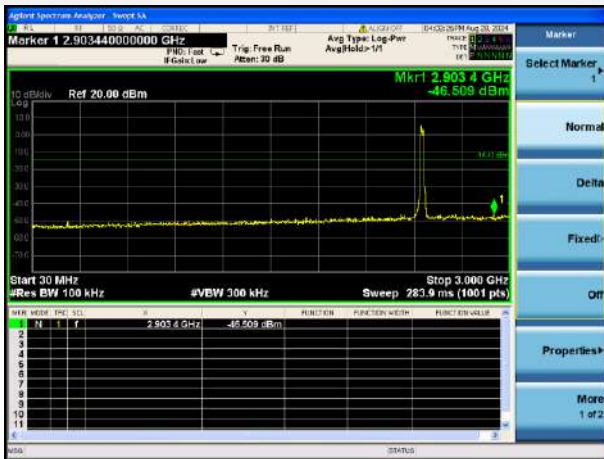


802.11g CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz



 
802.11g CHANNEL 11 CARRIER LEVEL

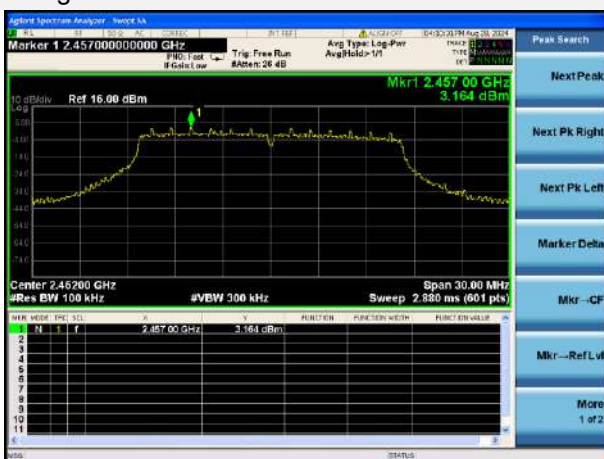

 802.11g CHANNEL 11, SPURIOUS
30 MHz ~ 3 GHz

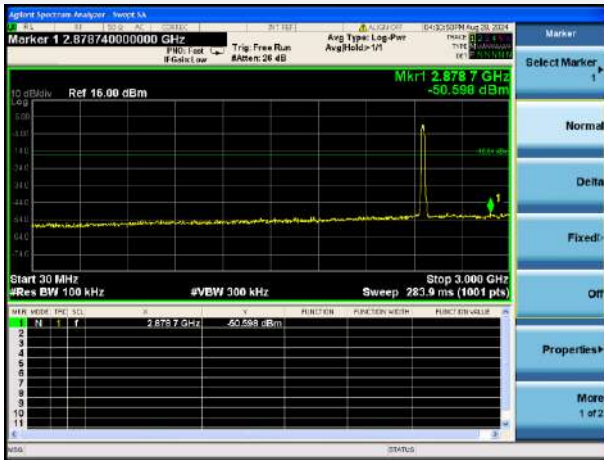

 
802.11g CHANNEL 11, SPURIOUS
2 GHz ~ 25 GHz

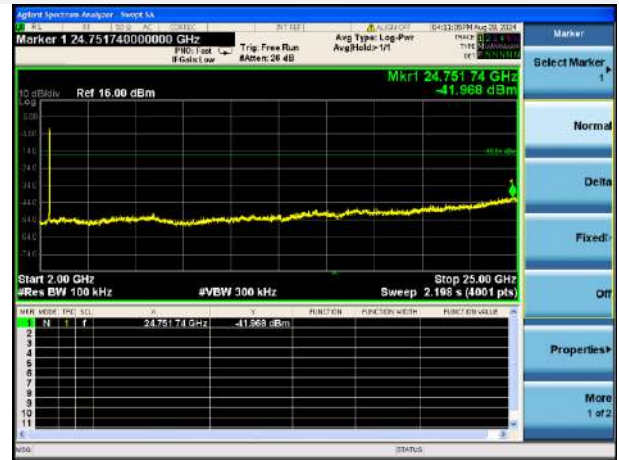


802.11n-20 MHz CHANNEL 1 CARRIER LEVEL



 
802.11n-20 MHz CHANNEL 1, SPURIOUS
30 MHz ~ 3 GHz

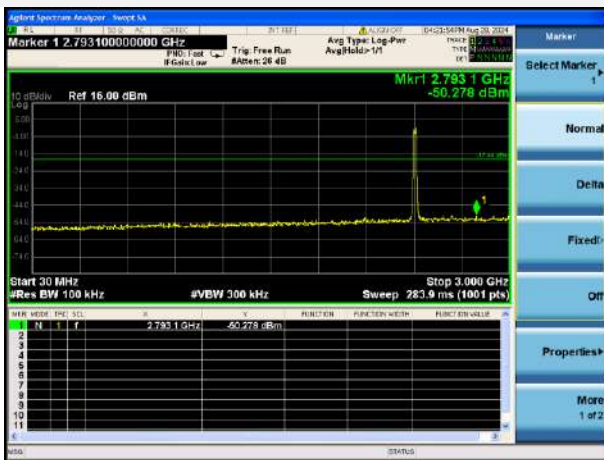

 
802.11n-20 MHz CHANNEL 1, SPURIOUS
2 GHz ~ 25 GHz

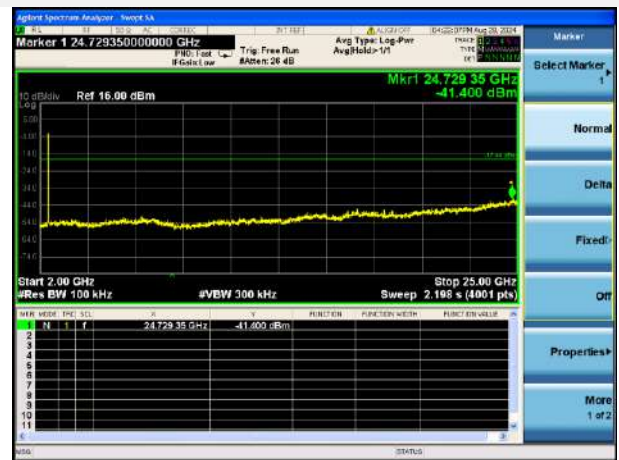

 
802.11n-20 MHz CHANNEL 2 CARRIER LEVEL

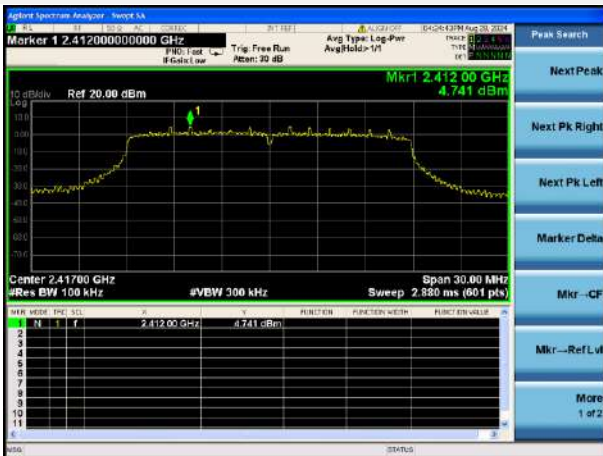

 
802.11n-20 MHz CHANNEL 2, SPURIOUS
30 MHz ~ 3 GHz

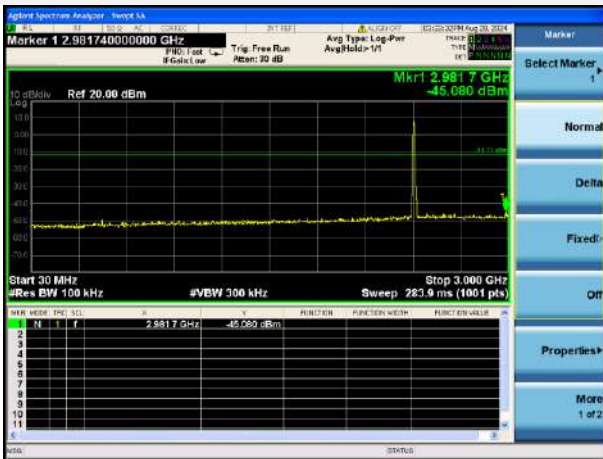

 
802.11n-20 MHz CHANNEL 2, SPURIOUS
2 GHz ~ 25 GHz

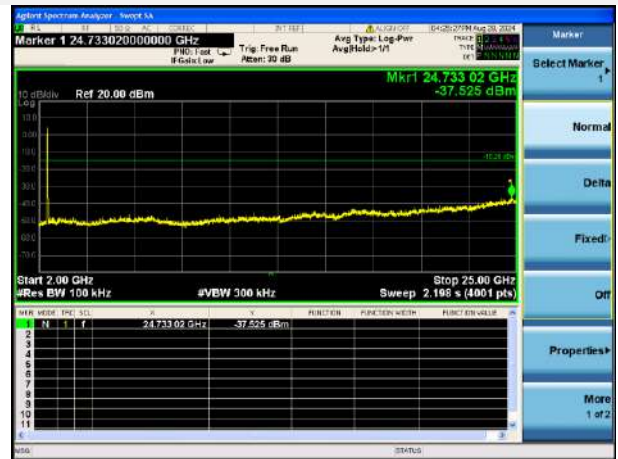

 
802.11n-20 MHz CHANNEL 3 CARRIER LEVEL

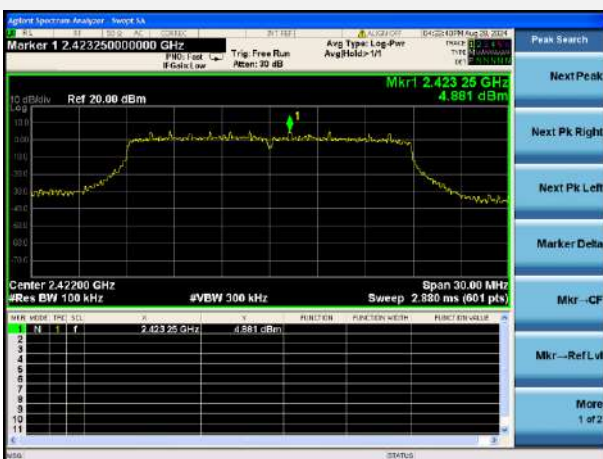

 
802.11n-20 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

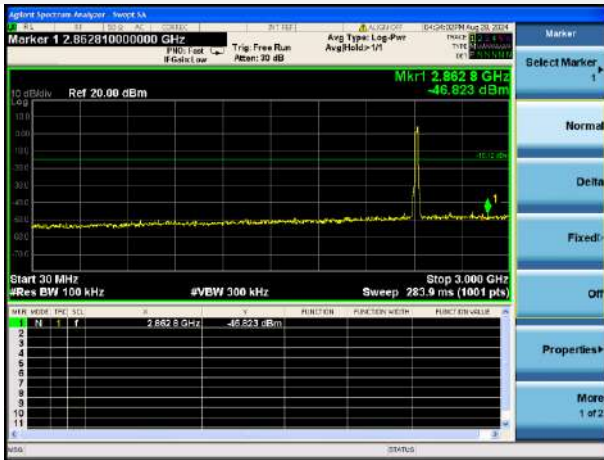

 
802.11n-20 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

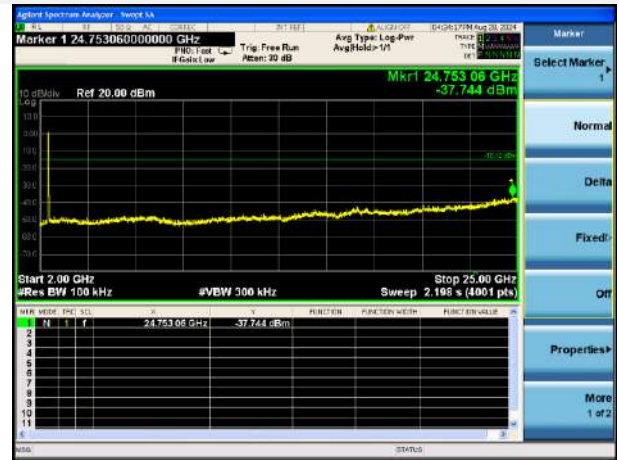

 802.11n-20 MHz CHANNEL 4 CARRIER LEVEL

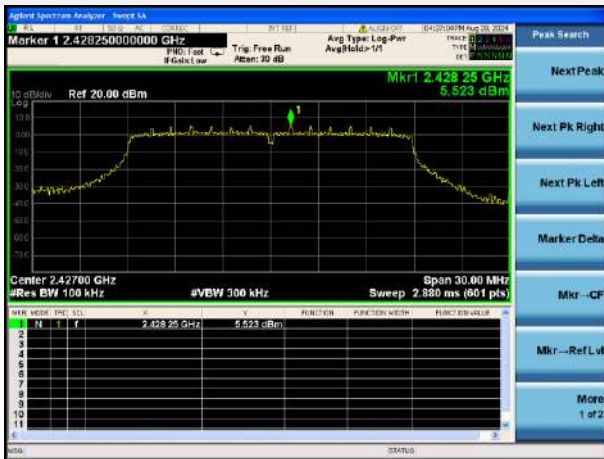

 
802.11n-20 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

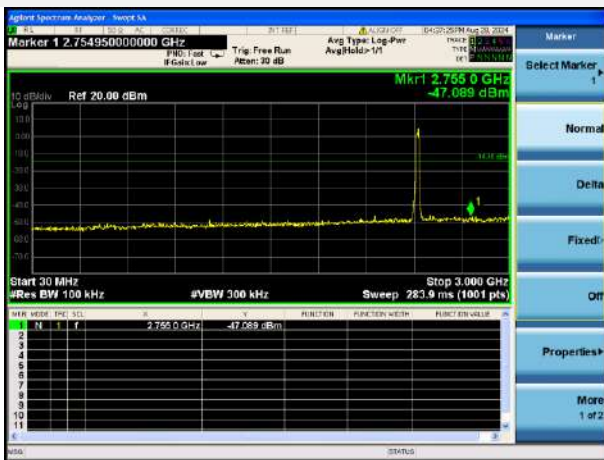


802.11n-20 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz



 802.11n-20 MHz CHANNEL 6 CARRIER LEVEL

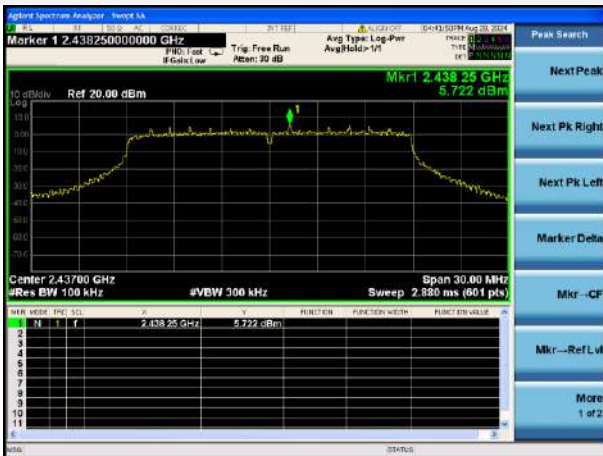

 
802.11n-20 MHz CHANNEL 6, SPURIOUS
30 MHz ~ 3 GHz

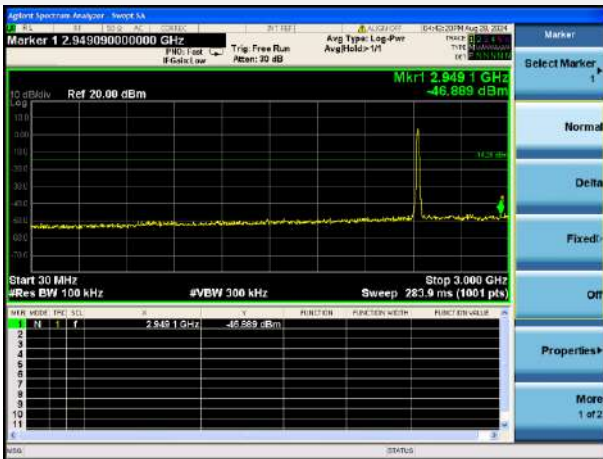


802.11n-20 MHz CHANNEL 6, SPURIOUS
2 GHz ~ 25 GHz



 
802.11n-20 MHz CHANNEL 9 CARRIER LEVEL

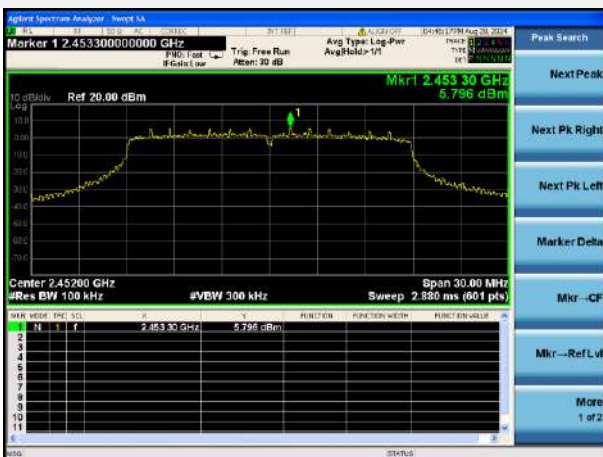

 802.11n-20 MHz CHANNEL 9, SPURIOUS
30 MHz ~ 3 GHz

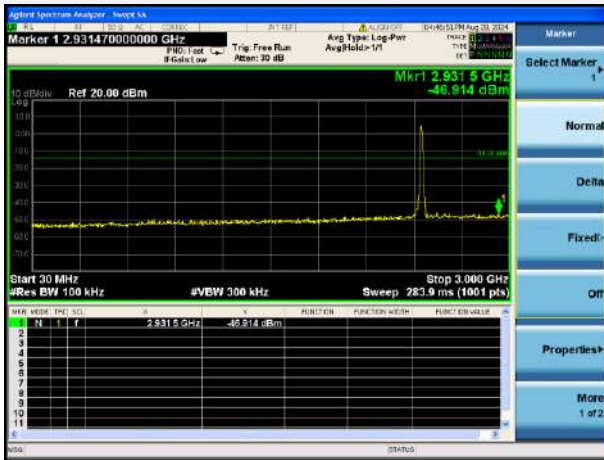

 
802.11n-20 MHz CHANNEL 9, SPURIOUS
2 GHz ~ 25 GHz

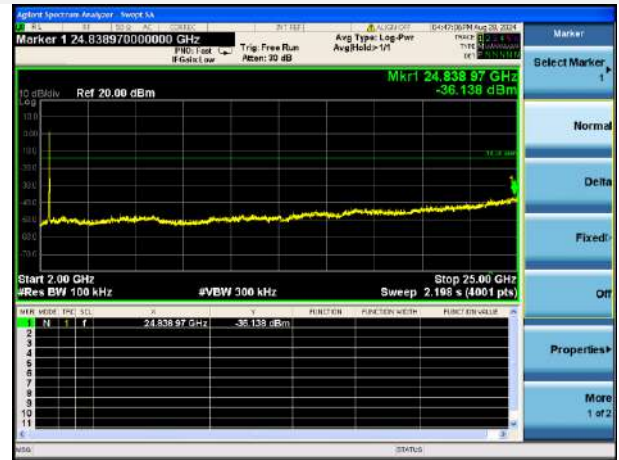

802.11n-20 MHz CHANNEL 10 CARRIER LEVEL



 802.11n-20 MHz CHANNEL 10, SPURIOUS
30 MHz ~ 3 GHz

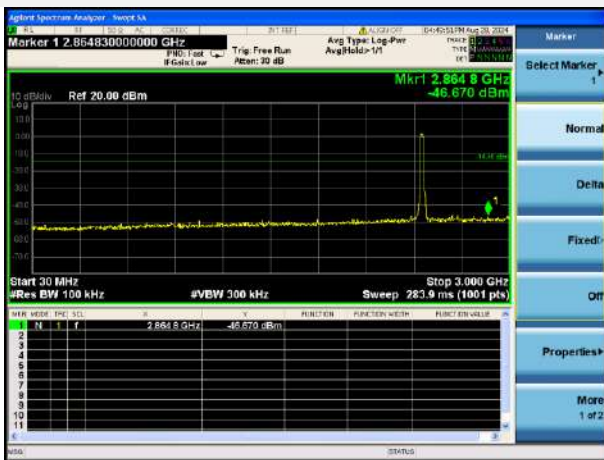


802.11n-20 MHz CHANNEL 10, SPURIOUS
2 GHz ~ 25 GHz



802.11n-20 MHz 11 CHANNEL CARRIER LEVEL



 
802.11n-20 MHz CHANNEL 11, SPURIOUS 30 MHz ~ 3 GHz

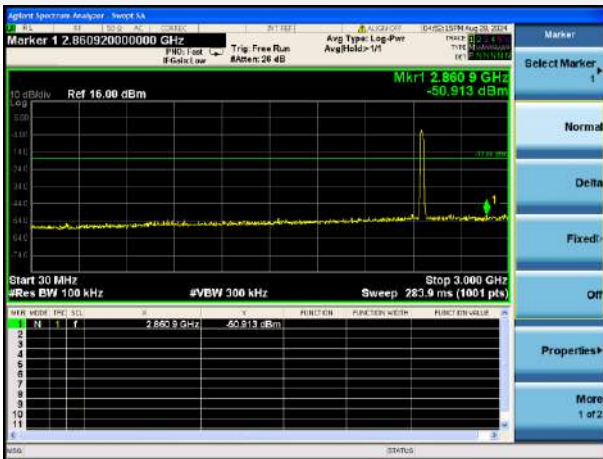


802.11n-20 MHz CHANNEL 11, SPURIOUS 2 GHz ~ 25 GHz



 
802.11n-40 MHz CHANNEL 3 CARRIER LEVEL

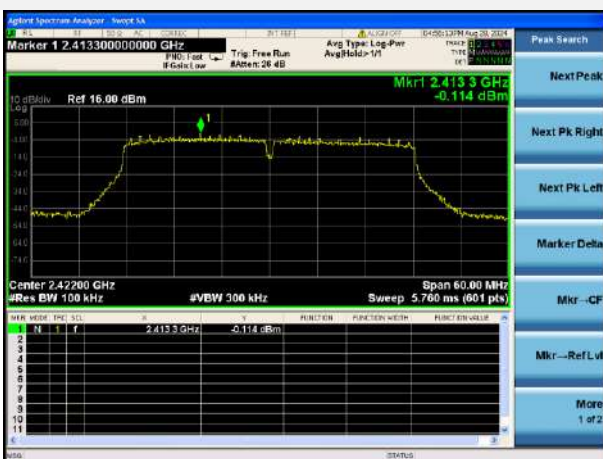

 802.11n-40 MHz CHANNEL 3, SPURIOUS
30 MHz ~ 3 GHz

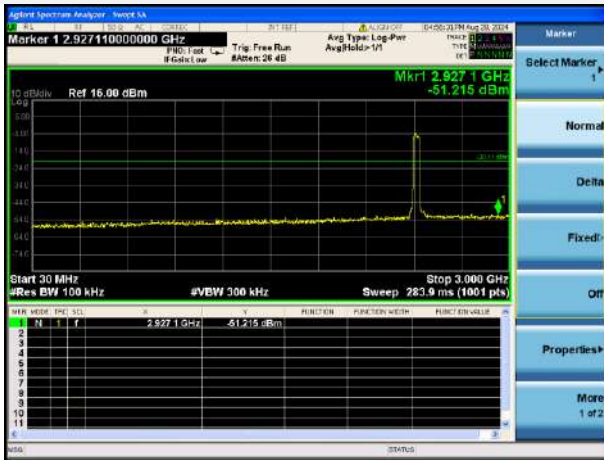

 
802.11n-40 MHz CHANNEL 3, SPURIOUS
2 GHz ~ 25 GHz

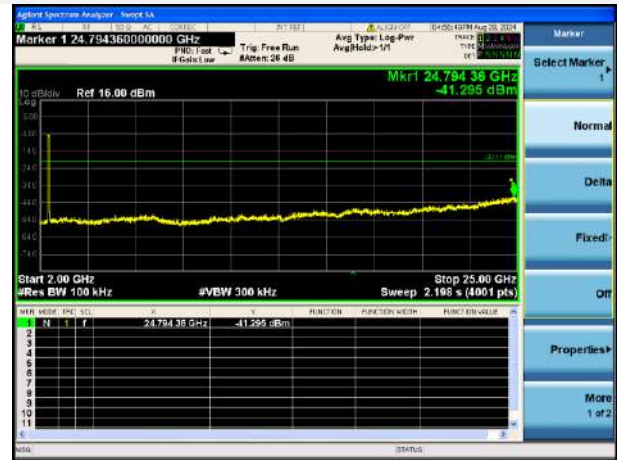


802.11n-40 MHz CHANNEL 4 CARRIER LEVEL



 
802.11n-40 MHz CHANNEL 4, SPURIOUS
30 MHz ~ 3 GHz

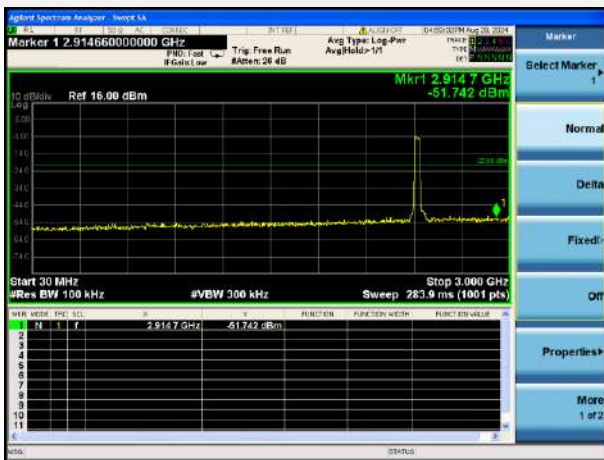

 
802.11n-40 MHz CHANNEL 4, SPURIOUS
2 GHz ~ 25 GHz

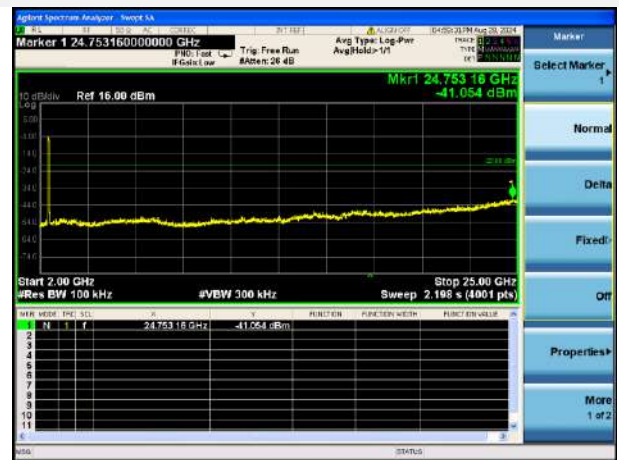

 
802.11n-40 MHz CHANNEL 5 CARRIER LEVEL

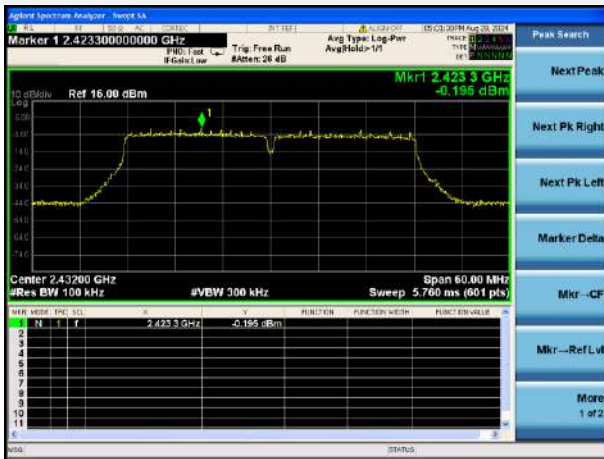

 802.11n-40 MHz CHANNEL 5, SPURIOUS
30 MHz ~ 3 GHz

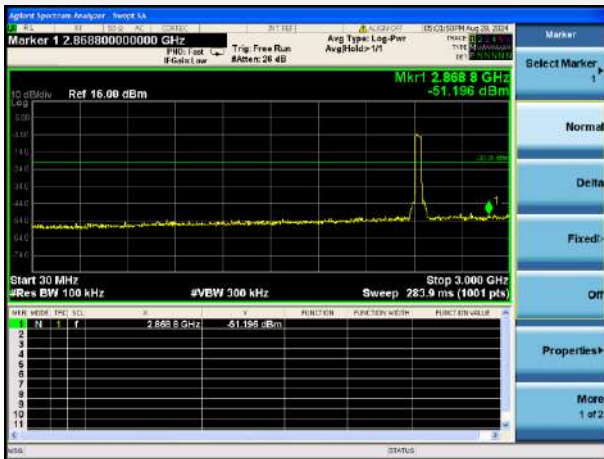

 802.11n-40 MHz CHANNEL 5, SPURIOUS
2 GHz ~ 25 GHz

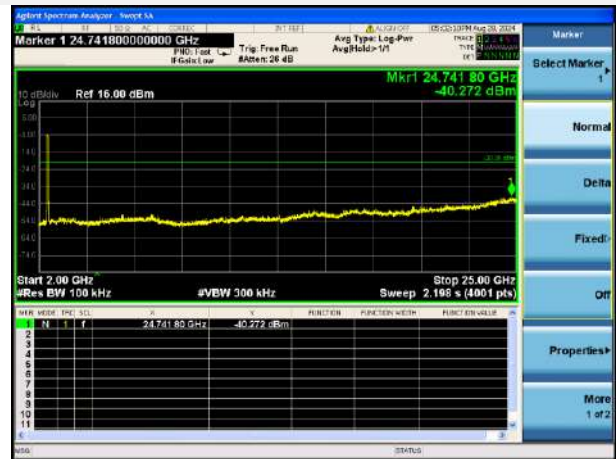

802.11n-40 MHz CHANNEL 6 CARRIER LEVEL

