 


THE
RABBIT
COMPANY™

OVERVIEW

 
All products by **The Rabbit Company**[™] are made from soft, smooth, body safe materials.

Our easy to use interface allows users to easily find the right stimulation and intensity. Get ready for sensual satisfaction that can not be matched and will have you craving for more.

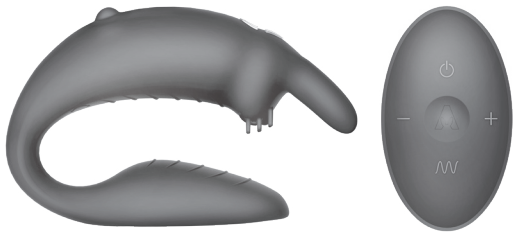


The Couples Rabbit™

THE COUPLES RABBIT

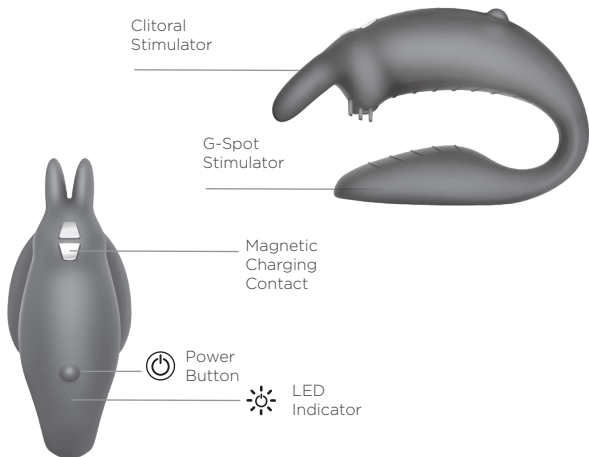

WIRELESS REMOTE CONTROL

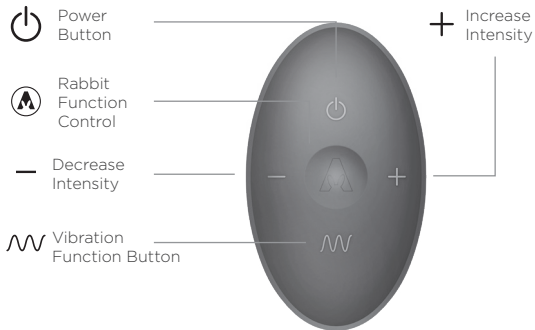 


GETTING STARTED

1. Before first use, charge your rabbit for approximately 2 hours. The USB charging cable can be plugged into any USB port or USB/AC power adapter (not included).

- Flashing Light = Charging
- Solid Light = Fully Charged
- Rapid Flashing Light = Low battery, charge is needed

 
2. Wash your rabbit with soap and water, or toy cleaner suitable for use with silicone items.

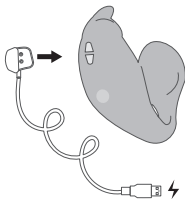



FAQs can be found at
www.TheRabbitCompany.com

 
Email us at
customercare@TheRabbitCompany.com
for any unanswered questions


3. Lubricate your rabbit (if needed) with a water based, silicone compatible lubricant.

4. Turn ON your rabbit by pressing  quickly at the bottom of your rabbit. The light will flash, indicating the power is on and in standby mode.



Push  again on your rabbit to use the manual mode, or push  on the remote to pair the remote & rabbit.

Once in use, the base light will change from flashing to solid.

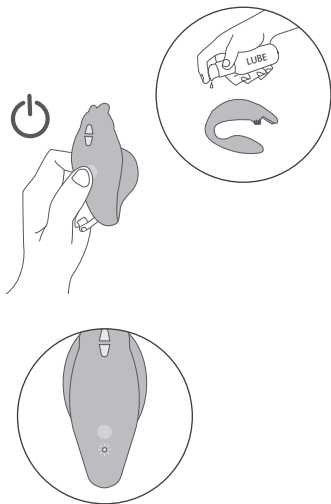




  
5. To change the vibration pattern via manual control, press the .

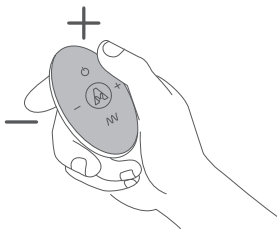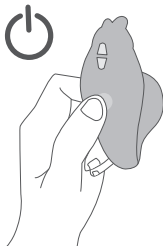  
6. To change the vibration intensity via the remote control press and release **+** (Increase Intensity) and **-** (Decrease Intensity).









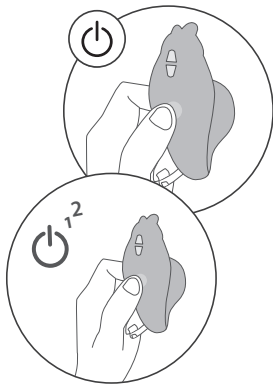

MANUAL CONTROL

 
 
1. To turn the item ON quickly press  on your rabbit. The  will flash to indicate the power is on. Push  again to change the vibration pattern. There are a total of 6 modes using the manual control.

2. To power OFF your rabbit press  and hold for 2 seconds. LED will turn off to indicate the power is OFF.





REMOTE CONTROL

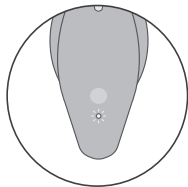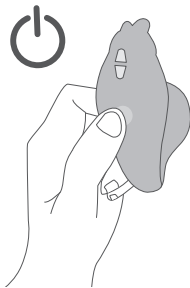1. First turn your rabbit on in standby mode by quickly pressing  on the bottom of your rabbit.
2. While the baselight is flashing, press  to power on your remote to pair the remote & rabbit.
3. Once the item is paired the base light  will become **solid** and you can control your rabbit by remote.
4. Press and release  on the remote to increase vibration intensity.
5. Press and release  on the remote to decrease vibration intensity.
6. To change the independent vibrator in the g-spot massager, press and release .
7. Holding  for 3 seconds will turn off the independent g-spot massager. Holding  for 3 seconds will turn on



 
 
the independent G-Spot massager.

8. To change the individual vibrator in the rabbit attachment clitoris, press and release .

9. Holding  for 3 seconds will turn OFF the independent rabbit vibrator. Pressing and releasing  will turn it back ON.

10. To turn the item ON/OFF press and release  on the remote.

11. To completely turn off your rabbit, press and hold  on your rabbit.

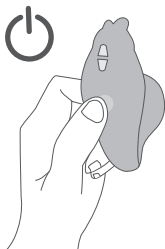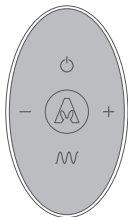


CHARGING

- Insert the charging plug into the designated charging area

- Flashing light indicates item is charging

- Solid light indicates item is fully charged

 - Rabbits require approximately 2 hours for full charge

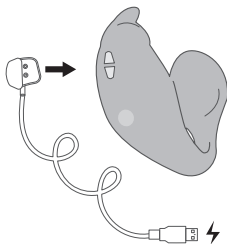

Flashing light = Charging

 


Solid light = Fully Charged



CHANGING YOUR REMOTE CONTROL BATTERY

- Slide open the remote control battery compartment as shown.
- Button cell CR 2032 has been preinstalled into the remote control.
- Remove the paper slip inside the battery compartment to activate the power in the remote control.
- Suggested to remove the battery from the remote control for extended storage. Store the remote control and the battery separately.

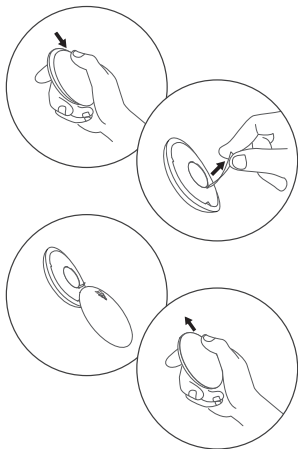

TRAVEL LOCK



The Rabbit Company™ items include a travel lock for safe and convenient travel.

 
For the remote:

Simultaneously press and hold the + and - buttons for 3 seconds. Flashing light will indicate the item is locked.


To unlock simply press and hold + and - again for 3 seconds. Flashing light will indicate lock is disabled.

For the rabbit:

Hold  for 5 seconds, flashing light will indicate the item is locked. For unlocking, hold  again for 5 seconds, flashing light will indicate the item is unlocked.

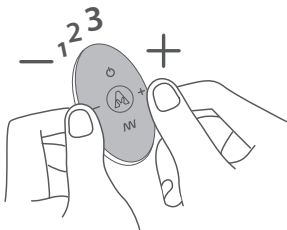


VIBRATING MODES

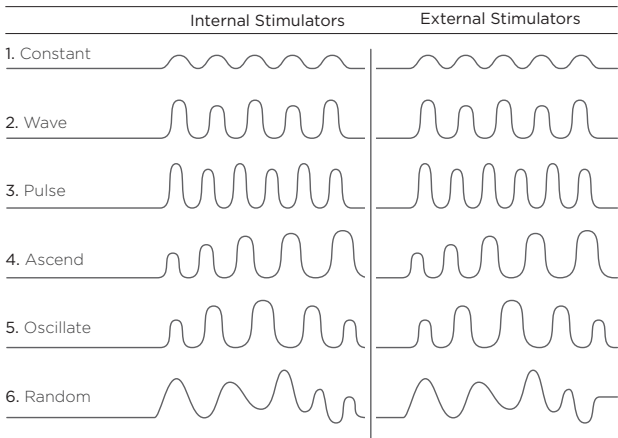 

HARE CARE™

Cleaning, Storage & Safety

 1. Always clean your rabbit thoroughly before and after each use.
2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended and can cause damage to the product. Never use hand cream, or massage oils as lubricants for your intimate areas.
3. To properly clean your rabbit, use a suitable silicone-compatible cleanser. If this is not available, wash the silicone area of your rabbit with luke-warm water and a respected antibacterial soap. Rinse clean and pat dry using a lint-free cloth or

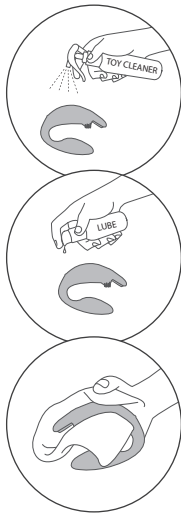


towel. Do not use cleaners containing alcohol, petrol or acetone.

4. Avoid leaving your rabbit in direct sunlight and never expose it to extreme heat.

5. Our products are designed to be splash-proof. Never immerse your rabbit in water.

If your rabbit appears to function abnormally, turn OFF and consult our customer care section on TheRabbitCompany.com where you will find help tips. Should you require further assistance please contact:

 customercare@TheRabbitCompany.com

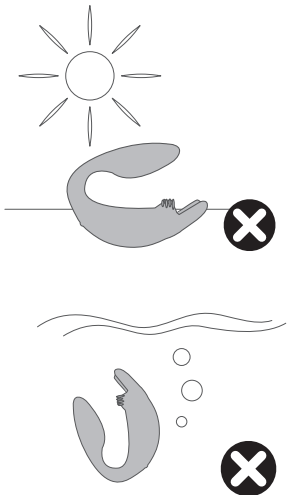

SPECIFICATIONS

Materials	Body Safe Abs / Silicone
Size	32 x 85 x 58 mm
Weight	64 g
Battery	150 mAh
Charging	2 hours
Use Time	1 hour
Max Noise Level	< 68 dB
Interface	Single Button Manual Control 5 Button Remote Control
Modes	12

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



RoHS
2002/95/EC



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

Complete user instructions in additional
languages can be found at:

www.TheRabbitCompany.com

FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions

Sold as a novelty only. Made and packed in China. All rights reserved. The shape and appearance of the products in this guide are a trademark and trade dress of B.C.B.V.I © 2018

Visit www.trcpatents.com for more info.

Warning: This product is for adults only. To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen or inflamed areas, or skin lacerations. No medical claims are warranted or implied by the use of this product.

Designed and Developed by
The Rabbit Company™

Made in China
© 2018 The Rabbit Company™

TheRabbitCompany.com

v1.0

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.