


## FEATURES

### Function Panel

1. Volume Increase & Next Track
2. Function & Hands Free
3. Pause / Play
4. Change LED Modes
5. Volume Decrease & Last Track

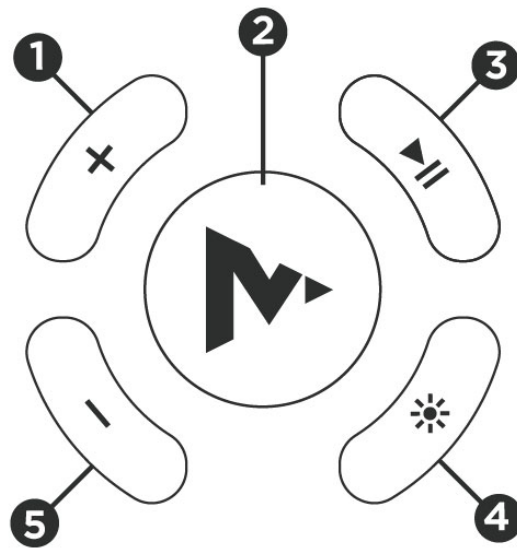

## CHARGING THE BLUETOOTH DEVICE

1. Connect the speaker's Micro USB socket with the power source's USB port through USB cable.  
(Micro USB port is located on the side panel of the device.)
2. The power indicator will show red while the battery is charging. When the speaker has reached a full charge the LED indicator will turn off to indicate the battery is fully charged.
3. Disconnect the USB cable when it is fully charged.  
(A full charge will take approximately 2-3 hours.)

## **AUXILIARY-IN FUNCTION**

1. With the speaker powered on, connect the included Auxiliary cable into the speaker's Auxiliary port and plug the other end into your phone's auxiliary port.
2. The device will automatically switch to auxiliary mode.
3. All Controls and functions are operated through your mobile device.
4. Disconnect the Auxiliary cable when finished.  
(Note: If there is no sound while the auxiliary cable is connected to a Bluetooth device, ensure all other Bluetooth devices are not paired and repeat step one. If the problem persists, replace the auxiliary cable.)

## **HANDS FREE CALLING**

1. To answer an incoming call press the Function button (2) for two seconds to answer.
2. To end or reject an incoming call when press the Function button (2) to hang up.

## **CARE AND MAINTENANCE**

- To clean the unit gently wipe with a soft, damp cloth.
- Never use Chemicals or hard abrasives. Doing so may damage the speaker's functionality and finish.
- Do not play music at excessive levels. Damage to hearing and/or equipment may result.
- Do not tamper or open the device. Doing so may result in damage and personal harm.

## **PAIRING / RECONNECTING THE DEVICE**

1. Power the speaker on, by Sliding the power button. When powered on it will automatically enter Bluetooth Pairing mode.
2. Now, turn on the Bluetooth function of your device.
3. Search for “SP3067 JOULE” and select it to begin Bluetooth pairing.  
(For first time pairing or pairing a new mobile device.)
4. The Speaker will reconnect automatically if your mobile phone has been paired previously.

(Note: Depending on the device's type and configuration, manual reconnection may be required each time.)

5. If pairing is successful, the speaker will make a tone to confirm.
6. Slide the Power switch to turn the unit off.

(Note: If you cannot search for the Speaker, this means the last device is reconnecting automatically. Choose to forget the speaker from your Bluetooth menu and try to pair with the speaker again.)

## **SPEAKER CONTROLS AND FUNCTIONS**

- To pause and play media use the Pause / Play button (3).
- To increase the volume press and hold the Volume Up button (1).
- To decrease the volume press and hold the Volume Down button (5).
- Press the Volume Up button (1) to play next track.
- Press the Volume Down button (5) to play the last track.

## LED LIGHTING MODES

- With the speaker powered on, press the LED button (4) to cycle through LED light modes. This button is also used to turn off the lights if desired.
- 

## SPECIFICATIONS:

- Model No: SP3065 LUX
- Driver Unit size: DIA 1.7"
- DC Power Input: 5V
- Bluetooth: V2.1 EDR
- Output power: 3W
- Frequency: 20Hz-20 KHz
- Working distance: Approx. 30ft
- Power Supply: Lithium battery
- Rechargeable Battery: 1200 mAh
- Playback Time: 4 hour
- Charge Time: 2-3 hour

### Limitation of Liability

In no event, under any cause of action of theory of liability, shall Sicura Media Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the iWave products, even if the iWave product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that iWave has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained inside or outside of the iWave products. This includes without limitation, laptops, Cellular phones, or other hand-held devices, or any loss of data contained in the foreign device. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of iWave and any of its distributors and / or suppliers shall be limited to the amount actually paid by you for the iWave product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under the applicable law.

## **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation