

Model: CQL1542-B

ENJOY.

MVMT by iWave

MVMT and MVMT logo are trademarks of iWave Sicura Media, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by iWave is under license. All other trademarks and trade names are those of their respective owners.

Les logos MVMT et MVMT sont des marques de iWave Sicura Media, Inc. La marque et les logos Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par iWave est sous licence.

Designed in New York. Made in China. iWave Sicura Media, Inc.
Conçu à New York. Fabriqué en Chine.
New York NY 10018 | support@argentosc.com | www.iwavesudio.com



AUXILIARY-IN FUNCTION

1. Using the 3-in-1 cable (included), plug the Micro USB end into the speaker's Micro USB port and plug the Aux end into your device's auxiliary port.
2. Slide the switch on the back of the speaker into the "AUX" position. You can now play your media as desired.
3. Slide the power switch to the "Off" position to turn the unit off.
4. Disconnect the 3-in-1 cable when finished.



Note: If there is no sound while auxiliary cable is connected to bluetooth device, ensure any other bluetooth devices are not paired to your media device and repeat from step one. If the problem persists replace the cable.

EN

TROUBLE SHOOTING

No power

- Recharge your speaker using the micro USB cable. If the problem persists try using another micro USB cable.

No response from the unit

- Ensure your Bluetooth device supports an A2DP, AVRCP, or HSP profile.
- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.



EN

CHARGING




1. Using the 3-in-1 cable (included), plug the Micro USB end into the speaker's Micro USB port and plug the USB end into your power source's USB port.
2. The power indicator will show red while the battery is charging. When the speaker has reached a full charge the LED indicator will turn off to indicate the battery is fully charged.
3. Disconnect the 3-in-1 cable when it is fully charged.

Note: It will take approximately 1-2 hour to achieve a full charge.

EN

Bluetooth® CONNECTION



1. Slide the switch on the back of the speaker into the  "Bluetooth" position. A blue light on the back of the speaker will begin blinking to indicate the speaker has entered pairing / reconnect mode.
2. Turn on the Bluetooth function of your device.
3. Search for "LEAF" and select it to begin Bluetooth pairing.
4. If pairing is successful, the speaker will make a tone to confirm and the blue light will blink slower.
5. Slide the Power switch to the "Off" position to turn the unit off.

Note: The speaker will reconnect automatically if your device has been paired previously. Depending on your device's type and configuration, manual reconnection may be required each time.

EN

SPECIFICATIONS

Model No: CQL1542-B

Working Distance: Approx. 30ft

Playback Time: 5 Hours

Charge Time: 1 Hours

Speaker Output Power: 3.0W

Frequency: 20 Hz - 20 kHz

Profile: HFP / A2DP / AVRCP

FUNCTION PANELS



Power Switch

Power the speaker on and off



Micro USB Port

Used to charge the device and to play media through an auxiliary connection

DEVICE FUNCTIONS



Volume Control

Controlled by your device



Track Control

Controlled by your device

EN

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation