

## Content

|   |           |
|---|-----------|
| <b>1. Safety Precaution .....</b>                             | <b>2</b>  |
| <b>2. Getting started .....</b>                               | <b>4</b>  |
| Installing the SIM Cards, the Battery and Micro SD card ..... | 4         |
| Charging the Battery.....                                     | 5         |
| <b>3. Input method .....</b>                                  | <b>6</b>  |
| To Shift Entry Methods.....                                   | 6         |
| Numeric and English Input.....                                | 6         |
| Inserting a Symbol .....                                      | 6         |
| <b>4. Using the Menus .....</b>                               | <b>6</b>  |
| File manager.....   | 6         |
| Contacts.....   | 6         |
| Calls .....   | 6         |
| Multimedia .....  | 7         |
| Messages.....   | 8         |
| Settings.....   | 8         |
| Camcorder .....   | 10        |
| Organizer .....   | 10        |
| <b>5. Use of USB .....</b>                                    | <b>11</b> |
| <b>6. Maintenance &amp; Safety .....</b>                      | <b>11</b> |

## Phone Overview



*Note: User's Manual is just to guide the user about the functionality of the phone. Some functions may vary due to modifications and up gradations of software or due to print mistake.*

### 1. Safety Precaution

For your safety and proper use of the mobile phone, please read the following guidelines carefully: Do not switch the mobile phone on when close to chemical factory, gas station or other explosive objects.

- During driving, please use headset for safety purpose; unless otherwise in emergency, always stop the car on roadside to have a call conversation.
- Because the use of the mobile phone can cause interference in the aircraft, never use the mobile phone in aircraft. The use of the mobile phone is dangerous and illegal; do switch off the mobile phone before boarding.
- Pay special attention to the use of the mobile phone near heart pacemaker, deaf-aid and some other medical equipment. Because the mobile phone can cause interference with them.

- None-original factory's accessories and parts will lose guarantee.
- Do not dismantle the mobile phone without permission. In case of failure, please contact the supplier as soon as possible.
- Do not plug the charger into the mobile phone and charge without battery. Always power off the mobile phone when taking out the battery; otherwise the memory of the phone may be damaged.
- When charging the mobile phone, always keep it in the place with good ventilation, heat sink and away from flammable and explosive objects.
- Please use the specific battery, otherwise it may cause explosion.
- In order to avoid demagnetization, always keep the mobile phone away from magnetic objects such as CD, credit card etc.
- Ensure the mobile phone not to contact any liquid; once such case occurs, remove the battery and contact the supplier immediately.
- Do not use the mobile phone in the environment at too high or too low temperature, never expose the mobile phone under strong sunshine or too wet environment. The suitable temperature for the phone and accessories is 0℃-40℃. The height to use the phone shall be less than 2,000m.
- Do not use liquid or wet cloth with strong cleanser to clean the mobile phone.
- This mobile phone has shooting, videoing and audio recording functions, which shall be used as per the related laws and regulations.
- Always keep the mobile phone out of children's reach. Do not throw or vibrate the mobile phone because violent treatment to the mobile phone may damage the inner circuits and precise structures.
- Please do not discard the waste battery into general household garbage. Please deal with the waste battery according to provisions where they are definitely made.

 
Warning: We will not bear any responsibility for any incompliance with the above guidelines or improper use of the mobile phone. Our company keeps the right to make modifications to any of the content

here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.


## 2. Getting started

### Installing the SIM Cards, the Battery and Micro SD card



The line schematic diagram is noted how to install SIM card, Micro SD card and battery.



Insert memory card

 

Insert SIM cards

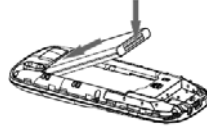  

Install battery and battery cover

ATTENTION: 1) Power off the phone; remove battery and other external power connection, as shown in the image. 2) Insert SIM card and memory card into card slots, and install battery as shown as the above drawings.

### Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked. Your mobile phone can monitor and display the battery state.

- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.
- ◆ It is normal of the battery to become hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.
- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is

required as the battery is put into use for a long time.

### 3. Input method

---

This mobile phone provides multiple input methods, including English input in both upper and lower case, French, Spanish, Portuguese and numeric input method.

#### To Shift Entry Methods

---

Press # key to switch between input methods.

#### Numeric and English Input

---

You can input numbers with the numeric input method. Press a number key to input the corresponding number. Switch to English input, press letter keys to input the English word.

#### Inserting a Symbol

---

Press the \* key to enter the Select symbol interface and select a symbol you want.

### 4. Using the Menus

---

#### File manager

---

The phone supports the Micro SD card. You can use the file manager to conveniently manage various directories and files on Micro SD card.

#### Contacts

---

You can check all the contacts in the phone and SIM cards.

#### Calls

---

#### Call history

---

◆ Missed Calls / Dialed Calls/ Received Calls/ All calls/Delete history

You can view a list of the above.

#### [Call settings](#)

---

##### ■ **SIM Call settings**

Call waiting/ Call divert/ Call barring/Line switching.  
You can browse a list of above.

##### ■ **Advanced settings**

Through this function, you can set Auto redial, Call time reminder, Reject by SMS, Connect notice and Answer mode, etc.

#### [Multimedia](#)

---

##### [Video player](#)

Use this function to play video files.

##### [Audio player](#)

Use this function to play audio files.

##### [Image viewer](#)

You can view the pictures or images through this function.

##### [FM radio](#)

This phone supports FM radio, you can plug in the earphone and then use FM radio. During FM radio, you can press \* or # key to control the volume.

- Channel list: You can edit and save 30 channels.
- Manual input: You can edit the specified radio frequency band.  
The frequency of the radio is between 87.5mHz and 108.0mHz.
- Auto Search: You can have automatic search and save the searched channels into the list.
- Settings: Do more settings for FM

- File list: the record files.

#### Sound recorder

---

Use this function to record audio files. The phone supports WAV and AMR format.

#### Messages

---

You can send and receive text message. If the short message memory is full, a blinking message icon appears on the top of the screen. While entering the Messaging interface, you will see the following menu options: Write message, Inbox, Drafts, Outbox, Sent Messages, Templates and Settings.

#### Settings

---

##### Dual SIM settings

---

- Dual SIM open
- Only SIM 1 Open
- Only SIM 2 Open
- Flight mode

##### Phone Settings

---

- ◆ Date and time: Set the date format, the time format, and detail time of the location.
- ◆ Languages→Phone Language: Your mobile phone supports with French, and English input method.  
Language→Pref. Input method: Select one of the input methods as the prior. So while you write SMS, it will automatically display the selected input method by default.
- ◆ Display: Users can access this item to set Wallpaper, Show date and time, Show operator name and LCD backlight.
- ◆ Menu vibration: Set the vibration effect when you select the icons in main menu.
- ◆ Dedicated key: Customize the shortcut functions of the Up, Down, Left and Right direction keys. In the standby interface, you can



press a direction key to directly enter the function menu corresponding to that direction key.

- ◆ Shortcuts: Set the items in shortcuts list.

### User Profiles

---

The mobile phone provides multiple user profiles General, Silent, Meeting, Outdoor and Headset.

You can customize settings on profile and then activate corresponding profiles.

There is no option for activating the Headset mode on the screen. When you insert an earphone to the mobile phone, the mobile phone automatically activate the Headset mode.

### Network settings

---

You can search the network again. Select your favorite network and choose to register the network automatically or manually.

### Security Settings

---

This function provides you with related settings about safety use.

- ◆ **Auto Keypad lock:** You can set the keypad lock automatically after a specific time you set.

- ◆ **SIM security**

**PIN lock:** The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people.

**Change PIN:** In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

- ◆ **Phone lock:** Set the phone lock, the password is 0000 by default.
- ◆ **Change password:** You should firstly input initial password 0000, and input the desired new password.
- ◆ **Auto keypad lock:** You can set it as off or 15/30/60 seconds.
- ◆ **Privacy protection:** Your phone gives you a good privacy lock here. The password is 0000 by default. You can manage the Message, Phonebook, Call logs, File manager and Keypad lock.

## Connectivity

---

### ◆ **Bluetooth**

You can use the Bluetooth to transfer data and files by pairing with other device.

### ◆ **Data connection SIM**

You can select which SIM card you want to use GPRS.

### ◆ **Data accounts.**

You can select the GPRS data account for SIM1 and SIM2.

## Reset settings

---

**Reset factory settings:** Use this function to restore factory settings. The initial password is 0000.

**Reset All:** Use this function to delete all settings and user data. You will be asked for "input password", and the default one is 0000.

## Camcorder

---

Use this function to capture pictures or videos.

## Organizer

---

### SIM Toolkit

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network.

### Alarm

Five alarm clocks are set but deactivated by default. For each alarm clock, the date and time can be set with ringing alert.

### Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.

### Calculator

---

This calculator provides limited precision and is only applicable to simple arithmetic calculation.

### Torch

---

Switch on/off the torch here.

In addition, when in the idle screen, you can long press 0 key to turn on/off the torch.

## 5. Use of USB

---

### Notices before use

- Always connect and stop USB device correctly.
- Never use Windows formatting command to format the mobile disk of the mobile phone; otherwise, it will be damaged severely.
- USB work environment:  
Windows2000 / XP / 7.  
For other operation systems, the connection between PC and the mobile phone cannot be conducted unless USB driver is installed.

## 6. Maintenance & Safety

---

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

### After sales service

---

You are kindly referred to the Warranty Card provided in the sales package box.

### Charger and Adapter Safety

---

Charger and adapter are designed for indoor use only.

### Battery Information and Care

---

- Please dispose of your battery properly.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Recharge the battery after long periods of non-use to maximize

- battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reinsert it, and turn the phone on.

#### General Notice

---

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e. TV or Radio) may cause interference to the phone.
- Do not immerse your phone in water. If this happens, remove the battery and take it to Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, picture, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when the phone is close to your ear.

**Warning:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new mobile phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the

body)as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.