Statement

Our company reserves the right to modify or improve any product described in this document without prior notice.

In any case, our company shall not be liable for any loss of data or income, or any special, incidental, incidental or consequential loss, no matter what the cause of the loss.

The description of the user's mobile phone and the phone's operating interface may exist some access, depending on the software version of your phone or a particular operator services.

At the same time the company has maintained the right to update the content of the product, all content, please prevail in kind.

	Eye book				
1	Basic	knowledge	3		
2	Mobile	phone appearance and press key	8		
	2.1	Left soft key	8		
	2.2	Shutdown key	8		
	2.3	Navigation key	8		
	2.4	Numbers, symbols, letter keys	9		
	2.5	Dial key	9		
3	Inform	ation symbol	9		
	3.1	Display	9		
4	instru	ctions for use	.10		
	4.1	how to install SIM card	.10		
	4.2	How to take out SIM card	.10		
	4.3	How to install the battery	.10		
	4.4	How to remove the battery	.10		
	4.5	How to charge the battery	.11		
	4.6	How to turn on / off the phone power supply	.11		
	4.7	How to install a memory card	.11		
5	Call a	nd answer the phone	.12		
	5.1	call	.12		
	5.2	Call an emergency number	.13		
	5.3	dial the international telephone number			
	5.4	Answer incoming calls	.13		
	5.5	Adjust volume	.14		
	5.6	Call options	.14		
	5.7	Missed calls			
6	Names		.15		
	6.1	Search	.15		
	6.2	New			
	6.3	Write message			
	6.4	Сору			
	6.5	Others			
	6.6	Delete multiple			
7	-	e			
	7.1	Write message			
	7.2	Inbox			
	7.3	Outbox			
	7.4	Drafts			
	7.5	Sentbox			
	7.6	Security inbox			
	7.7	Templates			
	7.8	SMS settings			
8		ogs			
9		gs			
	9.1	Call settings			
	9.2	Phone settings			
	9.3	Display	.27		

	9.4	Security		
	9.5	Profiles		
	9.6	Connections		
10	Applica	ation		
	10.1	Internet		
	10.2	Calendar		
	10.3	Calculator		
	10.4	Alarm		
	10.5	Ebook		
	10.6	Unit conversion		
	10.7	Bluetooth		
11	11 Multimedia			
	11.1	Camera		
	11.2	DV		
	11.3	Recorder		
	11.4	image viewer		
	11.5	Audio player		
	11.6	Video player		
	11.7	FM radio		
	11.8	My files		
12	input r	nethod		
	12.1	Input method key		
	12.2	English input method		
	12.3	Clear the input word		
13	USB cc	onnection		
14	Не1р			
15	Term			

1 Basic knowledge

1.1 Safety warnings and precautions

Before you use your mobile phone please read these notes carefully to ensure that you are using your mobile phone safely and correctly.

1.2 General considerations

Mobile phone

- Please 55 DEG C to 35% ~ 85% of the temperature
 and humidity environment using a mobile phone.
- Please as far as possible away from ordinary telephone, TV, radio and office automation equipment in place to use the phone, so as not to affect the use of these devices and mobile phones.
- SIM card can be removed, please pay attention to avoid the child swallowed such a small part. Battery
- Please place the battery in a place that is not under direct sunlight, cool and ventilated place.
- Cell phone battery life is limited, the battery's use of time in the frequent charging gradually shorten. Multiple charging is invalid, that the battery life has been done, it should be replaced by the specified model of the new battery.
- On not throw old batteries in the general life garbage. Please do it in accordance with the regulations where there are clearly defined requirements for the disposal of waste batteries. Charger

Please don't in the following places charge: direct sunlight; the outside temperature lower than - 10 DEG C or above the 45 DEG C; damp, dusty place or vibration of place (caused by fault); television, radio and other electrical appliances near (will affect the image, sound effects).

1.3 Note on the use of mobile phones

In the plane, a hospital at the prohibition of the

use of mobile phones, please turn off the phone. Mobile phones will be the normal work of the electronic equipment and medical instruments, in these places use mobile phones, please follow the relevant provisions of the. Mobile phone has timing and automatic starting and alarm clock function, please check the phone settings, to confirm in the flight process does not automatically boot. At any time aboard the aircraft must be shut down, so the phone jamming system, causing the accident aircraft.

Please do not use mobile phones in the vicinity of the weak signal or high precision electronic equipment. Radio interference may cause electronic equipment malfunction and other problems. Especially in the following equipment near the need to pay particular attention to: hearing aids, pacemakers and other medical electronic equipment, fire detector, automatic doors and other automatic control device. The impact of pacemakers and other medical electronic equipment, please consult the manufacturer of the device or local vendors. Mobile phones may interfere with television, radio, or personal computers electrical equipment

The risk of not on liquid crystal display force or hitting other things with it, otherwise it will causes the liquid crystal plate breakage and LCD liquid leakage. Liquid crystal into the eyes will be blind, then please immediately flush with plenty of water for eye (do not rub the eye) and to the hospital.

Do not remove or modify the phone, otherwise it will cause damage to the phone, leakage and circuit failure.

In very few cases, the phone in some models of the car when it may have a bad effect on the car's electronic equipment, please do not use the phone to avoid losing the security assurance.

Do not use needles, etc. written something sharp button, otherwise it will damage the mobile phone or misoperation.

If the antenna is damaged, please do not use the phone, otherwise it may cause harm to the human body.

When refueling should be shut down, in the gas station, near the chemical plant or explosive job do not use the phone, and do not remove the battery, because the phone will affect the technical installation operation.

Avoid mobile phones with damp, water or other liquids into the phone will cause the phone overheating, leakage and failure.

1.4 Battery safety instructions

Note on the use of batteries

- On not throw the battery into the fire, or it will cause the battery to fire and burst.
- When the battery is installed, do not force the pressure, otherwise it will cause the battery leakage, overheating, burst and fire.
- Do not use wires, needles and other metal objects will short-circuit the battery, nor will the battery with necklaces and other metal objects together, otherwise it will cause battery leakage, overheating, and burst into flames. Not in excess of the power system voltage is specified, and please using the provided external devices.
- On not solder the battery head, otherwise it will lead to leakage, overheating, burst and fire.
- If the battery liquid into the eyes, there will be the risk of blindness, then please do not rub your eyes, rinse with water, and then immediately to the hospital for treatment.
- \diamond To ensure safety, do not put the battery into the mouth or use the damaged battery.
- On not remove or modify the battery, otherwise it will cause the battery leakage, overheating, burst and fire.
- On not use or place the battery at a high temperature, such as the side of the fire or the heater, otherwise it will cause the battery to leak, overheat, burst and burst into flames.
- If the battery is in use, charge or save the process of heating up, discoloration, deformation and other abnormal phenomena, please stop using and replacing the new battery.
- If the battery liquid touches the skin, clothing, which may cause skin burns, should immediately rinse with water, if necessary, please consult a doctor immediately.
- If the battery leakage liquid or a strange smell, please immediately put it away from the open fire, to avoid the fire and burst.
- On not allow the battery to be affected with damp, otherwise it will cause the battery to overheat, smoke and corrosion.
- On not in direct sunlight or near a car hot place to use or placed in the battery, otherwise it will

lead to leakage of liquid and overheating, may reduce performance, shorten service life. Only use the approved accessories and batteries do not connect the matching products.

- On not charge more than 24 hours in a row. In any case, you can not open the phone or battery, and it is strictly prohibited to change these devices. Battery performance
- A Make a call, turn on the background light, use the game function will consume more power, with the longer call time, standby time will be shortened.
- \diamond Standby time in a non service area is shorter than the standard standby time.
- The performance of the battery with the state of charge, temperature, local network signals and the status of the background lights change.

1.5 Treatment of waste battery

Waste batteries in MSW is negligible, but the harm is very great, battery containing mercury, cadmium, lead and other heavy metals, harm human health. If the battery waste mixed with garbage landfill together, with the passage of time, the leaching may pollute the groundwater and soil. So to rationally deal with the scrap mobile phone battery.

Do not landfill, because the heavy metal of the used battery can pollute water and soil through the osmosis.

It is not to be burned, because if the steam is formed by incineration, it may be used to catalyze the formation of harmful gas, which will cause the pollution of the atmosphere.

Non composting. May lead to excessive levels of heavy metals in the material.

Do not discard the waste battery, so as not to pollute the environment.

As far as possible, the waste battery is separated from the domestic waste to reduce the pollution to the environment.

1.6 Note on the use of the charger

Use the charger can quickly charge for mobile phone battery. Before charging, please confirm that the battery has been properly installed on the phone,

do not remove or mobile phone battery charger. Please use the AC power provided by the charger. The use of other voltage will cause leakage, fire and damage to the phone and charger.

After the end of the charge, if the charger is still plugged in the phone, the phone will automatically check the battery status, if the battery is still below the full capacity of the test, it will automatically charge again.

Please put your mobile phone in a place where children can't touch.

Short circuit of the charger, otherwise it will cause electric shock, smoke and damage to the charger.

Please do not use the power cable in the case of the use of the charger, otherwise it will lead to fire and electric shock.

Please do not put containers of water on the charger next to the water to avoid spills caused the charger to overheat, leakage and fault.

If the charger comes into contact with water or other liquid, immediately pull the power off the socket to prevent overheating, fire, electric shock and charger failure.

Please do not remove or modify the charger, otherwise it will lead to personal injury, electric shock, fire and charger damage.

Please do not use the charger in the bathroom, such as high humidity, otherwise it will lead to electric shock, fire and charger damage.

Please do not use wet hands to touch the charger, wire and power outlets, otherwise it will lead to electric shock.

Do not put heavy objects on the power line or modify the wire, otherwise it will cause electric shock and fire.

Unplug the power plug from the outlet before cleaning and maintenance.

Pull the plug to seize the charger, pull the power cord will damage the wire, causing electric shock and fire.

1.7 Cleaning and maintenance

Mobile phone, battery and charger is not waterproof, do not use the high humidity in the bathroom, and also to avoid the rain.

USER MANUAL
Clean mobile phone, battery and charger with a soft dry cloth.
Do not use alcohol, thinner or benzene solution to wipe the phone.
• A dirt socket can lead to poor contact, power off,
and can not be charged, please clean regularly. If
the content of this manual is not in conformity with
your phone, please refer to the phone as the right
to the final interpretation of this manual.
2 Mobile phone appearance and press key
Right soft key
A Right soft key button for the mobile phone into the phone book and return key function
\diamond Enter the phone number to dial the user interface
or phone book, SMS and other editing state, press
the return key, can clear the character of the
input.
\diamond After entering the multi-level operation menu,
press the return key and return to the first level
menu.
2.1 Left soft key

- \diamond The left soft key to determine the key, select and determine the function
- 2.2 Shutdown key
- 2.3 Navigation key
- \diamond Up key : Specify function keys Down key : alarm

- Left soft key :calendar Right soft key : MP3
- 2.4 Numbers, symbols, letter keys
- Keyboard a total of 12 letter keys: letter keys to achieve the corresponding keys on the corresponding screen printing numbers, symbol complex;
- When dialing, press the corresponding key to display the corresponding number;
- In pinyin, strokes, English and digital input state, according to the input of the state display different characters, such as letters, symbols or numbers

2.5 Dial key

- \diamond Under open cover to check the phone records and answering function
 - 3 Information symbol
- 3.1 Display

- The middle part is the text, including the date, time menu icon.
- The next act, "menu", "phone book" icon, or as a lock screen prompt display area.

- 4 instructions for use
- 4.1 how to install SIM card

When the following steps are carried out, make sure that the phone's power is off, in case of no charge.

- \diamond Take out the battery.
- The SIM card is inserted into the fixed SIM connector, ensure card missing angle and the missing angle alignment card
- \diamond Put on batteries.
- 4.2 How to take out SIM card

When the following steps are carried out, first off the phone power.

- \diamond Take out the battery.
- \diamond Take the SIM card out of the SIM card slot.
- \diamond Put on batteries.

4.3 How to install the battery

- The battery is placed on the back of the phone, the tab is facing up, the connector is aligned with each other.
- 2. Put the battery cover, the alignment card stuck.

4.4 How to remove the battery

1. Press the key to shut down.

2. Open cell phone battery cover and remove the

battery from the bottom of the battery.

4.5 How to charge the battery

- Plug one end of the charger into the household power outlet and the other end is inserted into the mobile phone charging jack. (note that the plug is in line with the direction of the jack).
- When charging the battery indicator on the screen
 to start scrolling, until the battery is full.
- After the end of the charge, pull out the plug and remove the charger from the power outlet.

4.6 How to turn on / off the phone power supply

Determine the battery has been installed, and the battery has electricity.

- Open the phone, long press the hang up button 3-5 seconds until you hear the sound signal's power is turned so far. After opening, the phone will automatically search system.
- Turn off your mobile phone, press the hang up button 3-5 seconds until you hear a sound signal power down so far.

4.7 How to install a memory card

You can install the mobile phone memory card, please check carefully before installation, must be consistent with the TF card machine.

Turn off your cell phone, the memory card is inserted into the fixed memory card down sliding sheet metal will fixed. To ensure the storage card gold contact portions toward the, and card missing angle with booth's lack of angle alignment.

5 Call and answer the phone

5.1 call

To make a phone call, you can use the keyboard number keys to enter the number directly.

- If the input number is not correct, right softkey press "clear" to delete the last input a number; if clears all the input number, press and hold the right soft key until all the numbers to delete
- Enter the correct number, and then press the dial key. If the card has this number, it will display the number of users.

Quick dial phone number by name card folder

- Enter the business card folder to find, enter the name of the first letter of the name to find the name of the pre dial (telephone number).
- 2. Click "options" to call the phone.
- 3. In the telephone directory menu options and click the left key to determine the function, press the left soft key button below for dialing phone functions.
- 4. Speed dial in the call record list
- Enter the call record. Select the SIM card 1 call record or the SIM card 2 call record.

- Missed call: display recently missed calls.
- Dialed: display has been recently dialed.
- Has answered the phone: the phone has been answered recently.
- 2. Choose the name or phone number of the pre dial.
- 3. Press the "options" to select the call and dial the phone.

5.2 Call an emergency number

Emergency calls can be dialed only within the GSM system.

- Enter an emergency telephone number. For example: 112
- Then dial key (can choose SIM card 1 or SIM card
 2 dial) you can call.
- 5.3 dial the international telephone number
- Press the button repeatedly until the "+" symbol appears to dial the number. "+" represents the international dialing code.
- Enter the country code, area code and telephone number.
- Then dial key (can choose SIM card 1 or SIM card
 2 dial) you can call.

Remarks

Some of the network's international dialing code is not "+".

5.4 Answer incoming calls

When an incoming call, can directly open the cover

to answer, in has flip state, according to the display screen "answer" "mute" menu, select 1. Press the left soft key is on call, select

"transfer" can transfer (need operators support).

2. Right softkey "mute", shielding ringtones.

5.5 Adjust volume

In the call state, you can press the navigation button to adjust the volume.

5.6 Call options

When you click on the screen in the display icon in order (only by the key about now, on to adjust the speaker volume size):

Names: Find phone contacts

Keypad:digital key input

Hole : pause call (both sides can not hear the voice), and then click to turn to the normal call

Record: call recording, and then click to complete the recording, please find and play in the Multimedia-Recorder.

Mute:silent state (the other person can not hear the voice of the user)

Hands-free : hands-free calls, and then click to call "normal", namely phone calls.

5.7 Missed calls

For some reason is unable to answer the telephone information will display on the screen, to remind the missed call. For not answering the phone can into the details of the feature menu to view records for the telephone, or by pressing the "option" selective call, dial telephone.

6 Names

The function can let you through the phone book, storage, edit and delete phone and SIM card in the name and phone number. In order to facilitate the records management, the mobile phone set functional group, the project related points in the storage capacity of the card with a group of.SIM optic of different card and that the maximum storage capacity of the machine is 500.

6.1 Search

Enter the search name, in the phone book to find the conditions for the record.

6.2 New

Into the "telephone book" menu, "add the number" to select the storage location, according to the corresponding input number, the name of the SIM card storage capacity according to the card you use.

6.3 Write message

Into the "telephone book" menu, "message Write" to select the type of text message to select the contact directly to compile a short message.

6.4 Copy

Select "copy", select copy content (SIM card to the phone, mobile phone to the SIM card 1, from the sim2 card to the phone, from the phone to the SIM card 2, from the SIM card 1 to SIM card 2, from the SIM card to the SIM card 1), select copy mode and press the OK button to display "copying" and wait for the completion of the exit.

6.5 Others

Speed dial:Speed to set the speed dial, 2-9 number can be set

Own number: Set and store this machine number

Capacity query: you can check the SIM card 1, SIM card

2 and mobile phone directory storage status.

6.6 Delete multiple

Select "delete all contacts", select Delete content (from the SIM card 1, from the SIM card 2, from the machine, item by item deleted), select Delete mode and press function key and press the delete can be. At the same time select all delete, please careful operation of this step.

7 Message

This feature is used to provide text message service in order to receive or send text messages. When the screen appears with a short message status icon, it indicates that you have received a new short message.

If your inbox is full, you will not be receiving new information. Please delete the message that is full and continue to receive new messages.

7.1 Write message

This function is used to edit the new short message, press the navigation key OK key to enter the editor (see the input method for details). Edit the information can be through the # key to switch input method. In the editing process, if the input error can click the "clear" to delete operation.

When editing the new short message, press the options menu to enter the following menu: complete the selected SIM card 1 (2), insert the template, insert the phone number, insert the phone book name, and input method contents include:

- (1) Send: complete the election of the SIM card 1
 (2): after entering the option, choose to send, save and send, save, send multiple, for different ways to send.
- (2) Insert template: you can choose different template text to text messages.
- (3) Add contact info: you can browse the phone book is thin, choose according to determine the information can be inserted in the selected number and contact.
- (4) Add phiz: you can browse a simple tag, choose to be identified in the information can be inserted in the choice of expression.
- (5) Save as draft: save a draft, so that next time again into the compiled information.
- (6) Exit:exit

7.2 Inbox

Inbox can read SIM card 1/SIM card 2 received short message and its reply, forward, delete, delete all, save

- to the phone book and so on.
 - \diamond Into your inbox.
 - By the determination, the screen in order to receive the order of the short message.
 - Press the up or down arrow key to select the short message to read. Press OK to read the short message, press the option to reply to the short message, delete, edit, forward, delete, use the number and other operations.
 - When you read the short message, if the content can not be displayed in a screen, you can press the direction key to read the downlink content.
 - (1) reply
 - This function is used to send a short message to the person.
 - (2) delete
 - This feature is used to delete the selected short message.
 - (3) call
 - This feature is used to directly call the person who send text messages.
 - (4) Lock
 - The function of the lock information, do not allow delete operation.
 - (5) Move
 - This feature is used to move the short message to
 the SIM operation
 - (6) COPY
 - \diamond This feature can be copied to the SIM short message,

SIM storage

7.3 Outbox

The function of sending a successful storage or editing after the short message to "view, send, edit, delete, delete all, use the number" and other operations.

- \diamond To enter the "SIM card 1 cases" or "SIM card 2";
- Press OK to enter the function, the screen shows the stored short message;
- According to determine the specific content of the selected short message;
- Press "options" function keys can be selected for the short message: send, edit, delete, delete all, use the number and other operations.

7.4 Drafts

The function of sending the message has not been stored or edited to store the short message "view, send, edit, delete, delete all, use the number" and other operations.

7.5 Sentbox

This feature is sent to the success of storage or editing after the short message to "view, send, edit, delete, delete all, use the number" and other operations.

7.6 Security inbox

This feature has been sent to the successful SMS

encryption settings.

7.7 Templates

The mobile phone built-in 5 commonly used phrases, users can edit or delete, in order to quickly compile the content of text messages.

7.8 SMS settings

This feature is used to set the parameters of the short message.

a.Short message center number

This feature is used to store the short message SIM2, SIM1 center number (please consult your network operator).Only the short message center number is set to send a short message.

b.short message validity

Short information may be temporarily unable to be issued by the short message center (such as the boot), the function is used to set the short message center to save the time limit for these short information, until more than save the time limit.

 \diamond Press the direction key to enter the function. The

screen appears the following save time.

2.Starus report

Set whether the message is sent successfully, and return the message to the user.

3. Save sent messages

Choose whether or not to save the options that have been sent to the content of the message.

4.Preferred storange

Set the short message storage path, is stored in the

phone or SIM card.

8 Call logs

8.1.1 Missed calls

The function will automatically record the SIM card 1 recently did not answer and reject the telephone number, and can see the number of details (date, time, name or number).

- Select and enter the function display in order missed phone number.
- Select the phone number or press "options", you can delete, save, call, send text messages, edit, add to the blacklist and other operations.

8.1.2 Dialed calls

The function will automatically record the SIM card 1 recently dialed telephone number, and the number of delete, save, call, send text messages, editing, added to the blacklist. Selective calling can choose from the SIM card dial 1 or from the SIM card dial 2 out.

As to answer the phone.

8.1.3 Received calls

The function will automatically record the SIM card 1 has recently been answered the phone number, and the number of delete, save, call, send text messages, editing, added to the blacklist. Selective calling can choose from the SIM card dial 1 or from the SIM card dial 2 out.

As to answer the phone.

8.1.4 Rejected calls

The function will automatically record the user refuses to answer the phone records. And the numbers delete, save, call, send text messages, editing, added to the blacklist. Selective calling can choice from the SIM card dial 1 or from the SIM card two dial out.

8.1.5 delete all

This function is used to remove the SIM card 1 missed, has received, or all of the phone records.

- Select and enter the function, select the item you want to delete. Screen is asked to "delete", "yes" or "no".
- Press "yes" to delete, after the implementation of the return.

Select all delete SIM card can be a one-time delete all call records of 1

8.1.6 call timers

Last call: display SIM card 1 last call time.

Total: SIM display card dialed 1 all dialed total talk time.

Has received a total of telephone: display SIM card

1 all have been answered the phone call time.
Reset : SIM card 1 all call time cleared

8.1.7 GPRS counter

You can view the SIM card GPRS MMS and web traffic query.

9 Settings

9.1 Call settings

9.1.1 Dual-SIM

This feature is used to set the SIM card 1, SIM card 2, the mode of standby mode selection.

9.1.2 Filp to answer

This function is used to set the SIM 1 card, SIM card 2 is your flip answer choice.

9.1.3 Call divert

This function is used to set the SIM 1 card, SIM card 2 is your flip answer choice.

Call divert

1. Call forwarding unconditional

- This feature is used to set up the SIM card 1 to transfer all incoming calls to the specified phone.
 - 2. Call forwarding on busy
- This feature is used to set the SIM card 1 calls on the phone when the phone is busy.
 - 3. Call forwarding on no reply
- The function is used to set the SIM card 1 whether the call will be transferred to the designated phone when no one is answering.
 - 4. Divert if unreachable
- \diamond When the shutdown or not in the network coverage

area, can not be switched on when the transfer of SIM card 1 calls. 5. Cancel all diverts

9.1.4 Call waiting

Used to set the SIM card 1 is in the communication process so as to make a prompt sound to prompt new calls (network support). After the start of the function, in the communication process, if new calls, the network will be mobile phone notice issued the corresponding prompt sound, and on the screen shows the new phone number, according to the need to decide whether to receive calls from new. If turning off this feature, when a new call, a mobile phone does not issued beep, and phone will hear busy prompt (if open call transfer function will automatically transfer to another phone).

- Activate: The function is used to start the SIM card 1 call waiting function. Select and enter the function. The screen shows the implementation.
- Off: This function is used to cancel the call waiting function of the SIM card, select and enter the function.
- Check status: The function is used to check the SIM card call waiting settings, select and enter the function.

9.1.5 Call barring

Set up SIM card under the condition of various limiting telephone incoming or outgoing. Must first to

network providers to apply for opening, and obtains the network to limit the password in order to set up the limit function. Call restriction of every can set to open, closed and query. Call restriction of content including:

- \diamond All outgoing calls
- \diamond All incoming calls
- \diamond Incoming calls when roaming
- \diamond Cancel all barring
- \diamond Change password

1:select and enter the function, the screen prompts to enter the old password.

2: enter a new password and confirm, the screen prompts to enter the new password again confirmed.
3:The default password for the 3: password is 1234

9.1.6 Others

- Call time minute reminder : This function can set the phone in the call process and the way of the time.
- \diamond Auto redial
- \diamond Vibration when connected
- \diamond Reply SMS after reject
- \diamond Auto record voice call.

9.2 Phone settings

Select the machine set and press the function keys, can be on time and date, time switch machine, language, the preferred input method, the standby menu display, shortcut function, specify the function keys, and other functions to set.

9.2.1 Date&time: time setting

- Time setting: in the column you can set the time, the next column can enter the date. You can also choose whether to open daylight saving time.
- Time format : the time format is set to: 12 or 24 hour system; date format setting options are: the sun and the moon / month / day / year, date separator optional. ":", "/", "-".
- Auto update time:Automatic calibration time through the network.
- 9.2.2 Language settings : Refers to the display of text for the language of choice.
- Display language : Select the default language for your phone.
- Writing language : The default language for short message compilation is selected.

9.2.3 Shortcut settings

9.2.4 Auto power on/off

9.2.5 Power management

9.2.6 Restore factory settings : The default password is: 1234

9.3 Display

Select the machine settings and press the function keys, you can set the effect Animation, settings Wallpaper, Backlight, backlight, time, Keypad and other functions.

- 9.3.1 Animation effect: The function of the switch machine screen to choose settings
- 9.3.2 Wallpaper settings : This feature to select the wallpaper screen settings.
- 9.3.3 Backlight : The function of the screen brightness time to choose settings
- 9.3.4 Keypad backlight time: The function of the key light time to choose the setting.

9.4 Security

Security settings is that some of the features of mobile phone encryption settings. Helps prevent your

mobile phone and SIM card stolen. When asked to enter here any password, type the correct password ("*") after press the "OK" function keys. If the input error, please first click the "clear" button to delete incorrect input, and enter the correct number. In the security settings can change pin code, the Pin2 code.

Pin the function can be a mobile phone SIM card lock / unlock operation. Operations are required to enter the SIM card password (PIN). Input pin (personal identification number) and set up SIM card is locked or opened, the default state under, SIM card lock off.

When the SIM card on the lock, the boot will be required to enter the SIM card password, that is, PIN code.

* pin by the SIM card operators, pay attention to input three times is not correct, enter the PUK code (personal unblocking key), the PUK code is used to unlock and changing the locked pin PUK code does not provide or missing, please contact with the network operators.

- Modfiy PIN: The function can be used to modify the PIN password.
- Phone locked:Using this feature can be carried out on the phone lock.
- Modify the cellphone password : The cellphone password: Modify using this feature can be modified to change the phone password. The default password is 1234
- Privacy: this feature can be used for privacy lock.
- \diamond Auto keypad lock :Keypad lock Auto use this

 Lock screen by end-key:Screen by end-Key Lock function can press the key to lock the keyboard.

function to achieve automatic lock time.

- Fixed dialing: if your SIM card has the function, you can limit the outward dialing a phone number. If the function is active, your SIM card can only call present limiting dialing a phone number list. Set this function takes as input the Pin2 code. After the start of the lost a Pin2 code, before the shutdown no longer need Pin2 code. Therefore, if you do not want to others to change the fixed dialing, set after please shutdown, and then reboot.
- Slacklist: the function to achieve the number of black list, do not blacklist the number of users can not be dialed, SMS and other functions.

9.5 Profiles

This function is used to select a different ring, SMS alerts mode to suit different occasions. By press the up or down arrow keys to select the option, and then press the OK button to enter.

9.5.1 Normal

- Rename: uses this function to modify the scene mode name.
- Ring settings: uses this function to realize the SIM2 SIM1 to repair the incoming call bell and the bell of SIM2 SIM1 short message

- Fixed ringtones: Fixed determine the choice, you can set the default tone song selection
- ② More ringtones: More ringtones to determine the selection, can be set more ringing song choice. The songs stored in t-card my music files in MP3 format songs.
- Adjust volume: Adjust uses this function to realize the repair incoming call bell, the short message, the alarm clock, the bell sound volume of the switch machine.
 - ③ Determine the choice, you can set the tone type volume.
 - ④ Press up or down arrow keys to adjust the size of the ring.
- Ring type: Ring uses this function to realize the repair incoming call bell, the short message, the alarm clock and so on function the bell mode
 - ⑤ Ringtone, Vibrate, Silent, Vibrate then ring, Ring and Vibrate
 - ⑥ Determine the choice, you can set the bell mode. These include, Ringtone, Vibrate, Silent, then ring Vibrate, and Vibrate Ring
 - ⑦ Press up or down arrow keys to select.
- Others alert rings: Use this function to achieve tone Battery, low alert Key, ringtone power, tone Flip, on tone Flip features ring mode.

9.5.2 Silent

Silent modify the default setting method is same as

above: standard mode

9.5.3 Meeting

Meeting modify the default setting method is same as above: standard mode

9.5.4 Indoor

Indoor modify the default setting method is same as above: standard mode

9.5.5 Outdoor

Outdoor modify the default setting method is same as above: standard mode

9.6 Connections

This feature is used for network parameter settings.

- Network account: Network within the network account information of the system, please do not set the error
- GPRS Service: GPRS can open or close the data link functio
- \diamond Date connection settings
- \diamond Network selection: network priority setting.

10 Application

10.1 Internet

Sookmarks: to put you on the Internet to see any web page, the article collection up, so that you need to

- ♦ History: user browsing Web History
- offline pages: In the absence of GPRS cases, offline browsing web pages.

10.2 Calendar

The function is used to view the status of a certain date and the date of the lunar calendar.

10.3 Calculator

You can add, subtract, multiply, divide (dial, hang up key on the key, the key corresponding to the key addition and subtraction multiplication and division)

10.4 Alarm

This function is used to make the phone alarm sounds at the specified time. If a specified period of time has been to, when the phone is in shutdown state, this function can also sounding the alarm, and you are prompted to boot. Press the alarm clock function keys into the function (set up a three alarm clocks)

10.5 Ebook

This function is used to use the mobile phone to read the text, select the text can be stored in the memory in the Ebook path.

10.6 Unit conversion

The phone supports weight, length, and other basic unit conversion function.

10.7 Bluetooth

Turn on and off the Bluetooth function.

11 Multimedia

11.1 Camera

In the main menu, select "multimedia" into the "camera", then the display will absorb to the dynamic screen, select the picture, press the "capture/OK" button to take pictures.

Press the options key to perform the following operations in the preview state: Photo: photo album view into the mobile phone has good shot.Camera settings: you can set the shutter sound

and other functions..

Photo settings: can be set in the size of the photo photo and photo quality.

Storage location: select the location path of the captured data.

11.2 DV

Select "multimedia" in the main menu, select "video recorder" to enter, press the corresponding record key to start the video recording, and press the right function key to stop and save.

In framing options in the state, has the following operation:

The video is set: for a number of settings, please according to need to set.

Special effects settings: you can choose a variety of video special effects.

Restore default: restore all settings in this option to the initial state.

11.3 Recorder

Multimedia menu to determine the function keys to select the "recording" to enter:

If the recording file is entered, you can see the existing recording file. Press the options key to have the following function:

- \diamond Recording: you can record a new recording file.
- \diamond List: display all the recording files in the phone. \diamond Play: the sound has been recorded.
- New folder: you can modify the current recording file name.
- Set as ringtone : the current recording file transfer to the scenario mode for the ring selection.
- Send:will be the current recording file via Bluetooth or MMS to send.
- \diamond Delete: delete the current recording file.
- \diamond Details: details of the recording file.
- \diamond Edit : Rename and copy the current recording file.
- Search : quickly find the already existing sound recording files.

 \diamond Sort: sort the current recording file.

11.4 image viewer

Look at the pictures which have been taken.

 \diamond Rename: change the name of the photo.

 \diamond Slide play:start slide play mode

 \diamond Details: details of the photo.

11.5 Audio player

Music player interface shows the soft keys and keyboard corresponding to the operation of its functions, the basic button:

- \diamond Up Key: increase the volume
- \diamond Down key: reduce the volume
- \diamond Left key: a song (long press rewind)
- \diamond Right key: the next song (press fast forward)
- \diamond OK key:Play and pause
- \diamond Music list
- Set as ringtone : The music added to the bell library for use.
- \diamond Repeat

- ◇ Open\Close review : This feature can also be played after exiting the music player interface.
- \diamond Settings:

11.6 Video player

After entering the option, if there is a Video file, will be displayed in the list, press up and down arrow

 $[\]diamond$ Settings

keys to select the Video file, you can carry out the following operations.

The operation is similar to the music player

11.7 FM radio

- (this feature requires the headset support)
- \diamond Up key: increase the volume
- \diamond Down key: reduce the volume
- \diamond Left key: to manually adjust the channel.
- \diamond Right key: downward adjustment channel.

Ok key: play or stop.

When the channel is broadcast, press the "options", have the following functions:

- Channel list: you can view the search channel or new channel, select and enter options, can be the name of the channel, the frequency of the settings. Not set the channel, the list is displayed as a blank
- Annual input: can be manually enter the frequency to listen to.
- Automatic search: you can automatically search and save the channel to the channel list.
- Set: can be on the phone speaker to open / close, background play open / close and so on to set

11.8 My files

The mobile phone design has file management, similar to the computer model, provided to the user. If you use this mobile phone as an electronic mobile hard disk, you can use this function to manage the storage of files.

Among them, "mobile" and "memory card" access to all storage space and the remaining available space. Press options and OK keys can be opened: open the current mobile phone database.

Choose to open the database, the options can be carried out as follows:

 \diamond Open: open the selected folder or file.

New folder: according to the need to create a new folder.

 \diamond Delete: delete the current file (folder).

When you select a file, you can also use, send, copy, move, sort, and other operations.

12 input method

12.1 Input method key

- Numbers, symbols, letter keys: a total of 12 letters of the keyboard keys
- The letter keys can achieve the corresponding numbers of screen printing, symbol complex function;
- Spacebar: in pinyin, stroke, English as well as digital input state, press 0 keys for the space bar, which can press 0 keys can also press the spacebar on the virtual keyboard
- \diamond Togglekeys: [#] as the input method switch key

12.2 English input method

When a word is selected, the bottom of the screen

will appear with the word associative word, now input method into association mode input. If Lenovo word mode has the desired word, press the left, right arrow keys to move the cursor to the selected word then press OK function keys to select the word, if the required character can repeat step input to input.

12.3 Clear the input word

In spelling words, by the last letter of the clear button to delete input. Exit spelling words in an idle state the user can press the clear button to delete the screen a or a plurality of word, press the * key to open punctuation pattern.

13 USB connection

Connection USB capable of storing device(t-card support)

- 1) After selecting the storage device, the computer will appear the corresponding disk, but also for charging function.
- 2) Shutdown of the case can be connected to the USB charging and storage devices

14 Help

If there is an abnormal situation when using the phone, please refer to the following table to solve: if you still have questions, please call the company's telephone number.

		USER MANUAL
Abnormal	Cause of occurrence	Solution
Signal receiving difference	 Use mobile phones in areas where poor signal reception is received, such as tall buildings or in the basement. In the intensive period, the line congestion caused by unable to talk. 	If the signal is very weak, please move to the empty space if the signal is very weak, if the signal is very weak. Try to avoid.
Can not boot	The battery is running out.	To charge the battery.
Standby time becomes shorter	 Standby time is related to the system settings of the network operator. The same mobile phone is used in different network, the standby time is not the same. The battery depletion, battery performance after a few years will be gradually reduced. When the signal is not received, the phone will continue to launch, looking for a base station, consume a large number of batteries, resulting 	In a bad signal reception area, please temporarily shut down. Replace the new battery Move to a better area or temporary closure of the received signal.
SIM card can not be used		 Check back to the network operator. Re install the SIM card correctly. Clean the contact with a clean cloth.
No network service	 SIM card is not valid. Not in the service area. Weak signal User line switch is correct 	 Contact with network operators. Check the network operator's service area. Move out of the window or select another service network.

Can not send text messagesNo input short message center number messagesContact with the network operator; set the number of the short message center.Unable to make a phone call or not.Fixed dialing or call limit has been set.1: Close fixed dialing or call limit. 2: The machine number is set to the system default"PIN errorEnter the 3 incorrect PIN password.Contact with network operators.The battery1. The battery or charger is damaged. degrees Celsius or above 40 degrees of Celsius.1. Replace the new battery or charger. 3. check the charging environment. 3. check the charging time (when the battery voltage to the working voltage of CPU is shown) or use the charger to try!Unable to withoutThe telephone directory is full. enter the phoneDelete part of the telephone directory information.Unable to the phone.Is there a music download MP3 format phoneDownload the MP3 format music to your			ODER MANOAL
text messagesNo input short message center numberContact with the network operator; set the number of the short message center.Unable to make a phone call or not.Fixed dialing or call limit has been set.1: Close fixed dialing or call limit. 2: The machine number is set to the system default"PIN errorEnter the 3 incorrect PIN password.Contact with network operators.The battery1. The battery or charger is damaged. can not be1. Replace the new battery or charger. 2. Cell phone temperatures below 5charged displayCelsius.4. extend the charging environment. 3. Check the charger to the working voltage of CPU is shown) or use the charger to try!Unable to the phone bookThe telephone directory is full. enter the data into the phone bookDelete part of the telephone directory information.Unable toIs there a music download MP3 formatDownload the MP3 format music to your			4 . Select the correct line (to "L1" try!)
Name a phone call or not.Fixed dialing or call limit has been set.2 : The machine number is set to the system default*PIN errorEnter the 3 incorrect PIN password.Contact with network operators.The battery1. The battery or charger is damaged. 2. Cell phone temperatures below 51. Replace the new battery or charger.charged ordegrees Celsius or above 40 degrees claus.3. check the charger connector is connected.without3. Poor contact4. extend the charging time (when the battery voltage to the working voltage of CPU is shown) or use the charger to try!Unable toThe telephone directory is full.Delete part of the telephone directory information.Unable toIs there a music download MP3 formatDownload the MP3 format music to your	text	No input short message center number	-
Image: Construct of the set	make a phone		2 : The machine number is set to the system
The battery1. The battery or charger is damaged.2. adjust the charging environment.can not be2. Cell phone temperatures below 53.check the charger connector ischarged ordegrees Celsius or above 40 degreesconnected.chargedCelsius.4. extend the charging time (when thewithout3. Poor contactbattery voltage to the working voltagedisplay4. The battery is running out.of CPU is shown) or use the charger to try!Unable toThe telephone directory is full.Delete part of the telephone directorydata intobookUnable toIs there a music download MP3 formatDownload the MP3 format music to your	PIN error	Enter the 3 incorrect PIN password.	Contact with network operators.
can not be2. Cell phone temperatures below 5 degrees Celsius or above 40 degrees connected.3. check the charger connector is connected.chargedCelsius.4. extend the charging time (when the battery voltage to the working voltage of CPU is shown) or use the charger to try!unabletoThe telephone directory is full.datainto the phoneDelete part of the telephone directory information.Unable toIs there a music download MP3 formatDownload the MP3 format music to your			1.Replace the new battery or charger.
charged or degrees Celsius or above 40 degrees connected. charged Celsius. 4. extend the charging time (when the battery voltage to the working voltage of CPU is shown) or use the charger to try! Without 3. Poor contact belete part of the telephone directory is full. Unable The telephone directory is full. Delete part of the telephone directory information. data into Information. book Is there a music download MP3 format Download the MP3 format music to your	The battery	1. The battery or charger is damaged.	2.adjust the charging environment.
charged withoutCelsius.4. extend the charging time (when the battery voltage to the working voltage of CPU is shown) or use the charger to try!Unable toThe telephone directory is full.Delete part of the telephone directory information.datainto the phone bookIs there a music download MP3 formatUnable toIs there a music download MP3 formatDownload the MP3 format music to your	can not be	2. Cell phone temperatures below 5	3.check the charger connector is
without 3. Poor contact battery voltage to the working voltage display 4. The battery is running out. of CPU is shown) or use the charger to Unable to The telephone directory is full. Delete part of the telephone directory enter the information. data into the phone Delete part of the telephone directory book Unable to Is there a music download MP3 format Download the MP3 format music to your	charged or	degrees Celsius or above 40 degrees	connected.
display4. The battery is running out.of CPU is shown) or use the charger to try!Unable toThe telephone directory is full.Delete part of the telephone directory information.data intoInformationthe phoneInformationbookInformationUnable toIs there a music download MP3 formatDownload the MP3 format music to your	charged	Celsius.	4. extend the charging time (when the
Unable to The telephone directory is full. Delete part of the telephone directory enter the information. data into information. the phone v book v Unable to Is there a music download MP3 format Download the MP3 format music to your	without	3. Poor contact	battery voltage to the working voltage
Unable to The telephone directory is full. Delete part of the telephone directory enter the information. data into information. the phone	display	4. The battery is running out.	of CPU is shown) or use the charger to
enter the information. data into the phone book Unable to Is there a music download MP3 format Download the MP3 format music to your			try!
data into the phone book Unable to Is there a music download MP3 format Download the MP3 format music to your	Unable to	The telephone directory is full.	Delete part of the telephone directory
the phone book Unable to Is there a music download MP3 format Download the MP3 format music to your	enter the		information.
book Unable to Is there a music download MP3 format Download the MP3 format music to your	data into		
Unable to Is there a music download MP3 format Download the MP3 format music to your	the phone		
	book		
play MP3 to the phone. phone	Unable to	Is there a music download MP3 format	Download the MP3 format music to your
	play MP3	to the phone.	phone

Appendix 1::

15 Term

- GSM GSM global digital cellular mobile communication system
- SIM SIM user identification card
- SMS SMS short message service

- PIN personal identification code, usually refers to PIN1, along with the SIM card to provide, is using the SIM card password.
- PUK personal unlock code, along with the SIM card to provide. When three consecutive input PIN code error, SIM card is locked for the SIM card lock, or to modify the PIN code.
- PIN2 personal identity code 2, provided by the network operator, in the special features, such as the need to support the SIM card protected by the fixed number dialing (FDN) and other functions
- PUK2 personal unlock code 2, along with the specific SIM card to provide, for modifying or opening the PIN2 code.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body)as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 5 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.