

# EPIC PARTY INSTRUCTION MANUAL

DO NOT PRINT THIS LAYER

PRINT BACK TO BACK

Folding Line - - - - -

Cutting Line —————



## BLUETOOTH PAIRING YOUR SPEAKER

- 1 Turn On your speaker.**  
Short press the "MODE" button to switch to Bluetooth mode. You'll hear an automated voice saying "Bluetooth Mode".
- 2 Search pairing name "iHip EPIC Speaker" in your device and pair it.**

When successfully paired, an automated voice will say "connected".

## TWS FUNCTION

- 1 Turn On your Speaker.**
- 2 Double click the "MODE" button of two speakers at the same time to pair with each other.**
- 3 Search pairing name "iHip EPIC Speaker" in your device and pair it.**

When successfully paired, an automated voice will say "connected".

Screen shown as:



## FM Mode

- ▶▶▶ Long press to automatically search the channels.
- ▶▶▶ Short press to start/pause music.
- ◀◀◀ Short press to previous channel.
- ▶▶▶ Short press to next channel.

Screen shown as:



Package Includes:  
(1) Wireless Speaker, (1) User Manual, (1) 2in1 Charging Cable

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



© 2020 Zeikos, Inc. iHip is a trademark of Zeikos, Inc. Registered in the U.S. and other countries. The illustrated product and specifications may differ slightly from that supplied. All other trademarks and trade names are those of their respective owners. United States and international patent pending. All Rights Reserved. For ages 12+ up. This is not a toy. Designed by iHip. Manufactured in China.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by "iHip" is under license. Other trademarks and trade names are those of their respective owners.

Limited One Time Warranty.

To activate your product warranty go to our website, [www.iHip.com](http://www.iHip.com) & register this product.



12.5" inches

3.15" inches

## SPECIFICATIONS

- Bluetooth Version: V5.0
- Bluetooth Range: Up To 33ft
- Battery: 1200mah Rechargeable Battery
- Input: DC 5V / 0.5A
- Speaker Output: 2x5W
- Play Time: (Speaker Both At 100% Volume) 1 Hour At 100% Phone Volume; 4 Hours At 75% Phone Volume; 9 Hours At 50% Phone Volume.
- Charging Time: About 3-4 Hours
- Cable Included: 0.5m Usb Charging & 3.5mm Auxiliary 2 In 1 Cable

### Charging your Speaker

When the battery is low there will be a voice message "Low battery, please charge."

When charging, the LED light indicator will be RED and will turn off when fully charged.

Multicolor light will automatically turn On & Off with the Speaker.

### 1 Power Button

On: Slide the "ON/OFF" Switch to the ON position.  
Off: Slide the "ON/OFF" Switch to the OFF position.

### 2 Speaker Controls

- ◀◀◀ Short press to previous song.
- ▶▶▶ Short press to next song.
- ▶|| Short press to start/pause music.
- MODE Short press the "MODE" button to switch the mode. Will have both voice and screen advice.

### 3 Mic Port

For Karaoke Mode, plug in a 6.5mm jack microphone in Mic slot. \*(not included)

### 4 Volume

Turn the volume circle to adjust the volume.

Turn left to decrease the volume.

Turn right to increase the volume.

"U01" to "U16" Will be shown on the screen when the volume is adjusted.

### 5 Phone Stand

### 6 SD Card Mode

Insert the SD card into the TF slot.

Screen shown as:



### 7 USB Port

Insert the USB into the USB slot

Screen shown as:



### 8 Charging Indicator

The LED indicator will have a RED light when charging and will turn off when fully charged.

### 9 DC/5V AUX Port

Using the 2-in-1 cable included in your package, connect the micro-USB end to the DC/5V AUX Port of the speaker and connect the AUX end to your device.

Screen shown as:



### 10 LED Screen

