

Bell 24T

ORIGINALITY DESIGN SMART - AND BEAUTIFUL
.....

DOOR BELL






CE FC

QUICK GUIDE

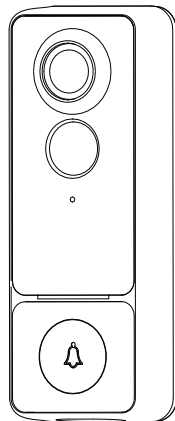


What's in the box

Please consult this checklist for all parts.

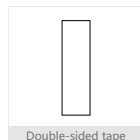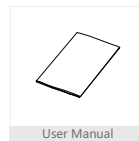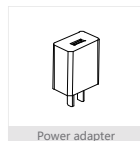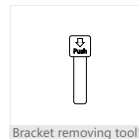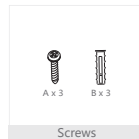

*** Bracket removing tool:**
It's used to take out the doorbell from the bracket, please keep it properly.


Description

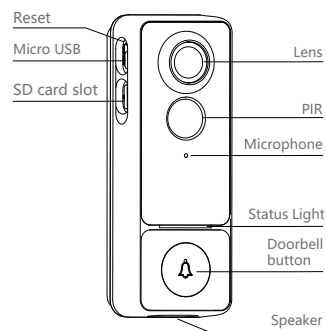

Power Port	DC 5V/1A of charging; battery (5200mAh / 6700mAh)
Doorbell button	Press the button to activate the doorbell; Long press the doorbell button for 8 seconds to enter sleep mode, and press the button again to wake up the device
Status light	<ul style="list-style-type: none"> Blinking red light: wait for network connection (fast blink) connecting the network (slowly blink) Solid blue light on: camera is working correctly Solid red light on: network is disabled
Microphone	Capture sound for your video
SD card slot	Support local SD Card storage (Max.128G)
Reset	Press and hold on for 3 seconds to reset


Installation

 Bracket Removing



1. On the live view interface of APP, turn off tamper alarm function.
2. Insert the bracket removing tool into the slot with red box, and the bracket will pop out automatically.



Bracket Installation (Screw)

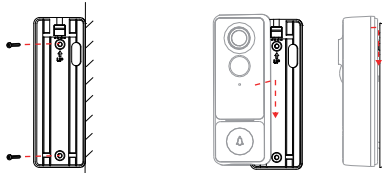

1. Install the bracket to the wall with screws.
2. Put the bell close to the bracket as shown above until the bracket covers the protruding parts of the bell back.
3. Push the bell down firmly until it is stuck.

Installation

Bracket Installation (Tape)

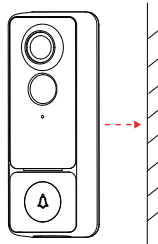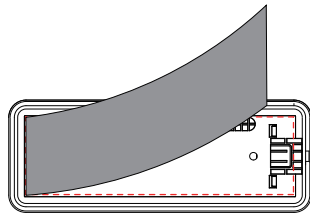

1. Tear off the cover on one side of the tape and stick it to the red position in the picture.
2. Tear off the cover on the other side of the tape and stick it to the wall.

Connection

Download


SmartLife or Tuya Smart is available for both iOS and Android OS. Search the name 'SmartLife', 'Tuya Smart' in App Store or Google Play, or scan the QR-Code to download the App. You can select App according to needs.

-Support



Set up router

The router supports the 2.4GHz WiFi (doesn't support the 5GHz), and is connected to the WiFi network. Please set the parameters of the router before connecting the WiFi network, and record the SSID and password of your WiFi.

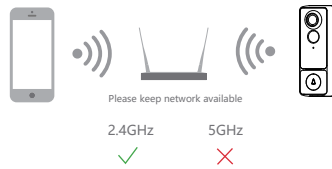


Registration

Registration process



Step 1 Open the App, click "Sign Up" to register.

If you already have an account, click "Log In" to log in.

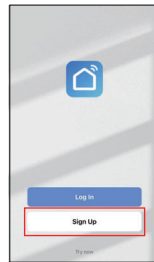



Step 2 Input a legal Email address and check the privacy agreement.

Then enter the verification code finish registration.

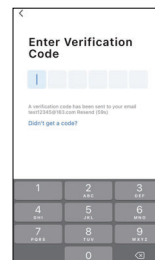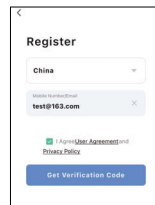


Home Management

Step 3 Click "Me" >> "Home Management" >> "Create a home", and you can customize the home name and related settings.

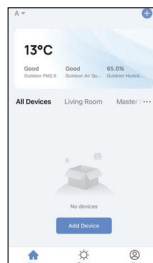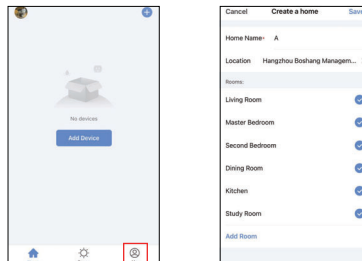


Device Adding

Step 4 Click "Add Device" and then select the corresponding device icon to add.

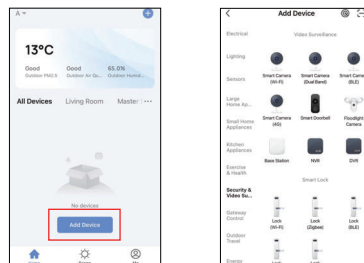


Step 5 Power on the device.
And then reset the camera and click "Next" on App.

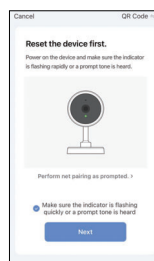

Device Adding


Step 6 Select the WiFi network and input the password, and then click "Next".
Make sure that your phone has connected to a fluent and steady WiFi already.

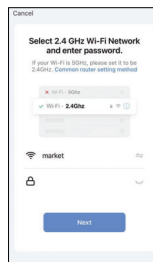


Note: 1) Camera only supports 2.4GHz WiFi network.
2) The number of bits in the SSID and passwords of the router should not exceed 24 digits.

Device Adding

Step 7 Scan the QR code in your phone with the camera and click "Next", when the camera comes out "dong dong dong". And you can complete the configuration about 30s.

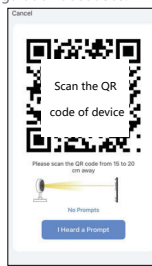


Step 8 When connecting, you should make sure your router, mobile and camera are as close as possible. And you can DIY device's name and assign the room.

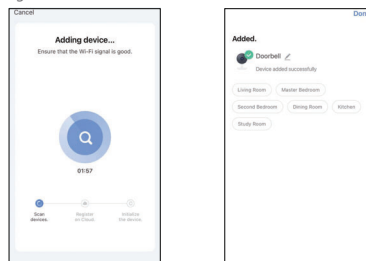

Settings

Step 9 In live view interface, click "...", and then you can set up the device common functions.

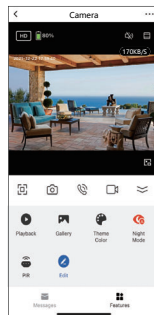

Functions

Two-way audio

When the visitor push the doorbell button, you will get a call. You can see and hear the visitor in your App from the doorbell if you answer.

PIR detection

When someone passes by, alarms will be triggered and sent to your phone.

Tamper alarm

Tamper alarm function is used to prevent intruders from disabling your bell. When the back cover is opened, the tamper is activated and an alarm is issued.

Record

Record every moment by using high capacity SD card storage.

Day & Night

Powerful night vision means no interruptions, even in complete darkness.



Daytime



Night

FAQ

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of devices after resetting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.


Q: Why doesn't the device identify the SD card?




A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the Internet environment is not good.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened, Message notification and authority confirmation in the mobile phone system have been opened.

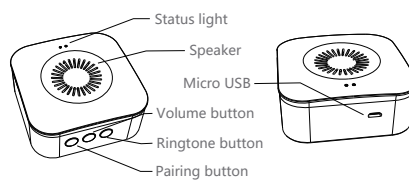Jingle Appearance




-  Pairing button: Press " " for 5s to restore **Factory Settings**;
Click the " " button(1~2 second) to pair the doorbell
-  Volume button: Click " " button to adjust volume, and continuously click to adjust the volume in a loop
-  Ringtone button: Click " " button to switch ringtone; you could choose one among the four ringtones

Ring volume	≥80dB
Micro USB	DC5V±10%
Working temp. (Transmittle)	-20C°~50C°
Standby consumption	<10μW
Work consumption	<100mA
Support frequency	433.92MHz

Jingle Appearance

1. Short press *Ⓜ* (within 2 seconds), the status light flashes red slowly and the jingle will be in pairing mode;

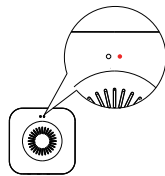


During pairing mode, it will blink red

2. Press the doorbell button to pair, when the jingle status light turns off, and the song will play automatically, the jingle pairing is successful at this time

Description:

1. The jingle can connect to maximum eight doorbells
2. When the jingle is in pairing mode, press the *Ⓜ* again (within 2 seconds), the jingle will automatically exit the pairing mode
3. After adding the jingle successfully, the volume will be adjusted to the maximum automatically. When it is at the minimum volume, it will return to the maximum volume after pressing *Ⓜ*
4. Each press *Ⓜ*, will play the next song along with blinking blue light

When playing ringtone, it will blink blue

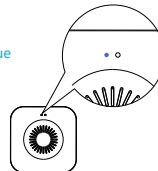

Functions

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.