

Front

billboard®

WIRELESS SPEAKER

for use with Bluetooth™ enabled devices



USER MANUAL



POWER ON/OFF

- Rotate the Volume knob clockwise until it clicks.
- The unit will enter into Bluetooth mode.

CHARGING BATTERY

- Charge the speaker battery fully before using.
- Connect the Micro USB Charging cable (included) to the front of the unit and USB to USB Adaptor (not included) to an AC Power outlet
- Charge Battery Time about 5-6 hours in Power Off mode
- In Charging mode, the indicator light will show red and when complete charged, the light will be off.

PAIRING YOUR SPEAKER

Pairing your Bluetooth™ speaker is like starting a relationship with it. Once paired, the speaker will automatically connect to your device the next time they are both powered on, and in proximity to each other.

1. Power on your speaker, The screen will read BT to indicate Bluetooth™ mode.
2. On your Bluetooth™ enabled device, navigate to the Bluetooth™ settings panel. The speaker will appear as **BB-BT-SP**, select that name to connect. Most devices will not ask for a password, but if one is requested, use 0000.
3. Once the speaker has connected successfully, you will hear a sound announcement

CONNECT USING AUX

- Plug in a 3.5mm audio cable into the AUX input, just below the LED indicator light, on the speaker control panel.
- You can connect to any audio device that has 3.5mm audio input jack and can playback any audio from this device.
- Note: You will not be able to use the speaker control panel buttons or remote control to control playback with this option.

LISTENING FROM USB/TF

- Plug in your USB stick or SD card in the appropriate slot on the front.
- Your speaker will automatically begin playback music from your memory card.
- You can use the control panel or remote control with your USB or SD card.

OPERATIONS DURING PLAYBACK

- To raise or lower the volume, rotate the Volume knob.
- To raise or lower the treble, rotate the Treble knob.
- To Pause/Play, short press the **II** button.
- To advance to the next track, short press the **III** button.
- To restart the current track, short press the **III** button.
- To navigate to the previous track, double short press the **III** button.




It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.

WIRELESS SPEAKER

Thank you for purchasing this Billboard® Wireless Speaker. For best use of this device we recommend carefully reading this user manual and keeping it for your records.

PACKAGE CONTAINS

- Wireless Speaker
- USB charging cable
- Remote control
- 3.5 mm AUX cable

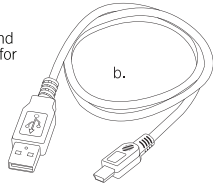


Back

REMOTE CONTROL

Your Wireless Speaker has a remote control to access higher functions, the buttons are as follows:

1. Mode - to switch between AUX input mode, radio mode, Bluetooth mode
2. ON/OFF in Standby Mode
3. Play/Pause in USB & TF Mode
4. EQ - 6 Preset EQ Function
5. 0-9 - to select your track song from your USB or TF device
6. Volume Down
7. Previous Track song
8. Mute/Unmute
9. Next Track song
10. Volume Up
11. U/SD - to switch between USB and SD mode
12. RPT - Repeat to replay back selected song.

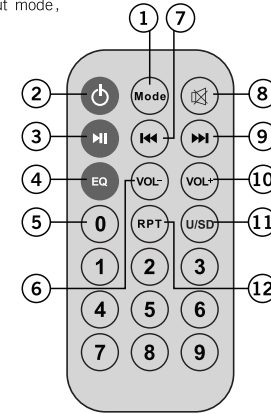

FCC INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

BATTERY INFORMATION

- The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Never use any charger or charging cord that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 59°F and 77°F. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of the device in a fire as it may explode. Batteries may also explode if damaged. Always dispose of electronics according to local regulations.
- Do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact Call2Recycle at 877-273-2925 or online at call2recycle.org for a battery recycling drop off location near you.



Technical Support: techsupport@esicellular.com or call: 212-883-8838

© 2017 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

Bluetooth is a registered trademark of Bluetooth SIG

LIMITED WARRANTY

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Bubble wrap & Send your device and the product to:

ESI Cases and Accessories,
44 East 32nd Street, 6th floor
New York, New York 10016

* Enclose proof of purchase and \$11.95 for Shipping and Handling.

PAIRING NAME: BB-BT-SP