SIZE: Width 4.5 inches, Height: 5.5 inches

INSTRUCTIONS WIRELESS MOUSE PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR NEW WIRELESS MOUSE KEEP THIS INSTRUCTIONS FOR FUTURE REFERENCE BACK OF WIRELESS MOUSE 1) Open the battery compartment of the wireless mouse and insert 2 AAA batteries. ON/ OFF Switch 2) Take out the USB receiver from the USB holder in the back and insert into a computer or laptop's USB port. 3) Switch the power to "ON". The wireless mouse is now ready to be used. OPEN Batterv Compartment Holder Scroll wheel TO USE THE MOUSE 1) To scroll thru web pages use the Speed Scroll Button scroll wheel Click to go to the next page 2) To Scroll faster press the button underneath the scroll wheel Click to go to the previous page 3) On the right side of the mouse are 2 buttons to click thru the next or previous webpage.

WIRELESS MOUSE

WARRANTY

Limited Warranty

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container, will be free from defective workmanship and materials and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described below.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The Limited one year warranty described herein is in additional to law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIFETIME TO THE PERIOD(S) FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental of consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS. WHICH VARY FROM STATE TO STATE.

Returns Department, ESI Cases and Accessories, 44 East 32nd Street, 6th floor New York, NY 10016

© 2016 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

* Enclose proof of purchase and \$5.95 for Shipping and Handling.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.