

Bluetooth Speaker
DY25
User Guide

Please read and follow this user guide thoroughly before using the HiFi Waves Pro.

[Show image of buttons (Play/pause/phone, mode, track back, track forward, volume down, volume up), LEDs (BT, FM, AUX), AUX port, Charge port, Power indicator LED, and Power switch]

Specifications

Driver Size: 52mm x 2

Output Power: 10W (5W x 2)

Bluetooth: v2.1 + EDR, up to 30 feet transmission range

Battery: 4,400mAh

Play Time: Up to 11 hours at 70% volume

Charge Time: 6 hours

Frequency Response: 65 Hz – 18.5 KHz

Impedance: 4Ω

Button Functions

NOTE: Button functions may vary per device

Play/pause/phone button

In Bluetooth mode:

- Press and release to pause a track; press again to play the track.
- When a phone call comes in, press and release to answer the call; press again to end the call.
- Press and release twice to dial the last call.

In FM mode:

- Press and hold to enable the scan/channel save function.
- Press and release to search through preset FM radio stations.

NOTE: When playing music, the music will pause and make a ringing sound when a call comes in. The music will resume when the call has ended. Ringing sound may vary per device.

Mode button

- Press and release the button to cycle through the different modes.

Modes include:

- Bluetooth mode – to play wirelessly via Bluetooth.
- FM mode – to play FM radio.
- LINE IN mode – to play via audio cable.

NOTE: "LINE IN mode" will not function unless an audio cable is inserted into the AUX port.

Track Buttons

In Bluetooth mode:

- Press and release the track forward button (>>) to go to the next track.
- Press and release the track back button (<<) to go to the previous track.

In FM mode:

- Press and release the track forward button (>>) to go to the next frequency.
- Press and release the track back button (<<) to go to the previous frequency.

Volume buttons

- Press and release/hold the volume up (+) button to raise the volume.
- Press and release/hold the volume down (-) button to lower the volume.

NOTES:

- The speaker will show the volume level on the LCD screen.
- The volume must be adjusted through both your speaker and audio device.

Charging your HiFi Waves Pro

NOTE: Make sure the HiFi Waves Pro is fully charged before using it the first time.

1. Gently plug the Micro-USB end of the included charge cable into the charge port labeled “USB DC”.
2. Plug the USB end of the cable into a powered USB port, such as a computer, laptop or USB AC adapter (not included).
3. The power indicator LED will glow solid red when charging.
4. Once the speaker is fully charged, the power indicator LED will turn green.

NOTE: Charge your HiFi Waves Pro with the included charge cable.

Connecting via Bluetooth® (first time set-up)

1. Power on the speaker by moving the power switch from “OFF” to “ON”. You will hear “Bluetooth mode”.
2. Open the settings on your Bluetooth device (Bluetooth must be enabled).
3. Select HiFi Waves Pro from the devices list.
4. Once paired, you will hear “Bluetooth paired”.

NOTE:

- Your device will automatically find and pair with the HiFi Waves Pro after the initial pairing. If your device does not automatically pair, turn off the speaker and repeat steps 1-4.
- The speaker will return to Bluetooth mode after the speaker has been turned off.

Connecting via audio cable (LINE IN)

1. Power on the speaker by moving the power switch from “OFF” to “ON”. You will hear “Bluetooth mode”.

2. Plug one end of the included audio cable into the AUX port on the back of the speaker. The LED screen will show "LINE" and the speaker will say "LINE IN mode".
3. Plug the other end of the cable into your audio device.

NOTE:

- "LINE IN mode" only works if you have an audio cable inserted.
- If you plug in an audio cable into the AUX port, the mode will automatically switch to "LINE IN mode".
- Make sure that you are using the audio cable that was included with your speaker.

Using the FM radio (First time set up)

1. Power on the speaker by moving the power switch from "OFF" to "ON", you will hear the speaker say "Bluetooth mode".
2. Press and release the mode button to switch to FM mode.
3. Press and hold the play/pause/phone button for 3 seconds to begin the scan/channel save function.
4. The speaker will scan and save the FM radio stations with the strongest frequency. Once it is complete with the scan/channel save function the FM radio will start on channel 01.

NOTE: You must complete the scan/channel save function in order to have preset radio stations.

5. Press and release the play/pause/phone button to browse through the saved presets or press and release the track buttons to go to specific frequencies.

Troubleshooting

Issue: My speaker doesn't turn on.

Solution: Try the following:

- Make sure that you fully charge your speaker before use.
- Power on the speaker by moving the power switch from "OFF" to "ON".

Issue: My speaker isn't charging.

Solution: Try the following:

- Make sure that the charge port on the speaker is free from dust and debris.
- Make sure that you are using the charge cable that came with your speaker.
- Make sure there is power from the power source.

Issue: My speaker isn't syncing to Bluetooth.

Solution: Try the following:

- Make sure that the Bluetooth setting is turned "ON" on your device.
- Check to see if another user is connected to the speaker.
- Refer to the user guide of your device for Bluetooth syncing instructions.

Issue: My speaker volume is turned all the way up, but the volume is still very low.

Solution: Try the following:

- Make sure your speaker and audio device are charged.

- Make sure the volume is turned up on your device and speaker.

Issue: I can't play music through "LINE IN mode".

Solution: Try the following:

- Make sure you are using the included audio cable.
- Make sure you are in "LINE IN mode".

Important safety precautions

- Incorrect use or incompatibility with your device may result in reduced battery performance or damage to your device.
- Do not attempt to disassemble product.
- Tampering or removing the battery can result in damage to your product, void of warranty, and could cause injuries.
- Store and operate between 32°F – 113°F.
- Do not fully submerge the speaker under water.
- Do not place this product near a heat source or flame.
- Do not throw or shake.
- Do not operate if it has been subjected to shock or damage.
- Do not crush or puncture the battery.
- Recharge the battery every 3 months when not in use to keep battery in best condition.
- Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents.
- The internal battery must be recycled or disposed of properly. Contact your local waste management office for information on the proper disposal or recycling.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.