 


Bluetooth Speaker with wireless charger M30W

 
USER MANUAL

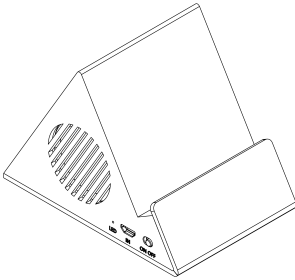

Product Introduction


Thank you for choosing Phone Stand Wireless Speaker. Please read this manual carefully before using. So that you can proper operation and better use of superior performance products.

Package Contents

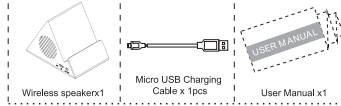

Product Features

 - ① Micro USB Input
- ② Power Switch
- ③ Indicator light
- ④ Center of Wireless Transmitter (Optional)
- ⑤ Luminous Panel (Optional)
- ⑥ Groove Phone Stand

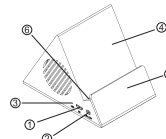

Specification

Model:	M30W
Wireless Version:	4.2
Loudspeaker Output:	3W
Frequency Response:	20Hz~20KHz
Distortion:	≤1.0%
Signal-To-Noise:	≥75dB
Range:	≤10m
Wireless charging input(Optional):	5V/2A(Max)
Wireless charging output(Optional):	5W
Dimension:	113x76x84mm

Operating Instruction

1. Pairing with mobile phone

Slide switch to the left to turn on wireless speaker, You will hear a tone

Turn on the Bluetooth function of the mobile phone, Search for the accessible Bluetooth devices and select 'M30 or M30W' from the device list to Pair, the mobile phone will show 'connected' if the phone is paired with wireless speaker, and you will hear a tone. Then you can play music from mobile phone and listen to music from wireless speaker.

2. Charging wireless speaker

Insert the Micro USB charging cable to speaker's micro USB port, insert the other end to the USB port of DC5V charger, Red LED will light up when charging. Light off when fully charged.

Note: When the speaker's voice is lower than normal conditions or heard a warning tone, please charge the speaker in time.

3. Wireless charging device (Optional)

1) Insert the Micro USB charging cable we provided to speaker's micro USB port, insert the other end to the USB port of DC5V charger.

2) Put the phone on the wireless charging area and make sure their center is aligned.

Note: Make sure your phone is fit for Qi standard receiving equipment.



1. Connect the power supply

2. Place the phone in the wireless charging area

3. Start charging

Warm Tips

1. Do not charge the speaker with other unsuitable power adaptors. It may cause damage to the speaker. The speaker must be charged properly by USB ports or by a AC/DC adapter with output DC5V.

2. In order to avoid damage to your hearing and prolong the speaker's use-life, please do not listen to music for long time in high volume environment.

3. When a fault occurs, please immediately turn off the power switch, unplug the USB plug, prevent speaker and other components damaged.

4. Over use of battery will affect the wireless distance and use-life, please charging in time.

FAQs

1) Why is there no sound when the speaker is turned on?

A: Make sure that you have charged the battery fully for the first time. Charging time is approx 3 hours.

2) Why is there no sound when playing the speaker?

A: Check the speaker is connected by your phone. If there is no connection, please reconnect and make sure your phone have connected the properly Speaker.

3) How to recognize the Bluetooth speaker is fully charged?

A: When the speaker is being charged, and the red indicator is automatically turned off, It is already fully charged.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
 - - Increase the separation between the equipment and receiver.
 - - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/
TV technician for help.

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment should be installed and operated with minimum distance of 20cm the radiator your body.