

Quick Start Guide

OontZ

Angle 3S

 
Portable Bluetooth Speaker

Designed and Engineered By
CAMBRIDGE SOUNDWORKS.

TheOontZ.com

In the Package

OontZ
Angle 3S

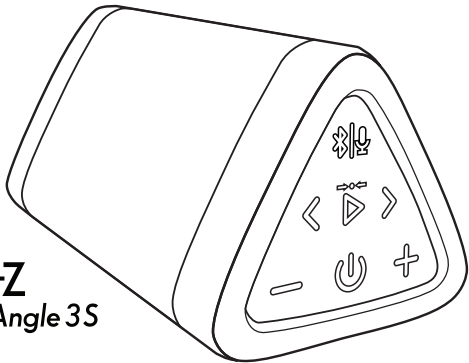

Quick-Start Guide



Micro USB Charging Cable




3.5mm Audio Cable

Note: The cables are packed below the cardboard insert in the box. Slide out the insert to locate the cables.

Table of Contents

	Pages
Buttons, Lights and Connectors	1 - 3
Play Horizontally or Vertically.....	4
Battery Features and Charging the Battery	5 - 7
Turning On and Off.....	8
Pair & Connect with Your Device	9 - 12
To Play with Non-Bluetooth Devices Use the 3.5mm Audio Cable	13
OontZ Wireless Dual Stereo - Connect two OontZ Angle 3 S Speakers Together.....	14 - 18
IPX5 Water Resistance	19
Wireless Hands Free Personal Speakerphone	20
Reset Function.....	21
Contacting Customer Support.....	22
Safety and Precautions	23

 Buttons

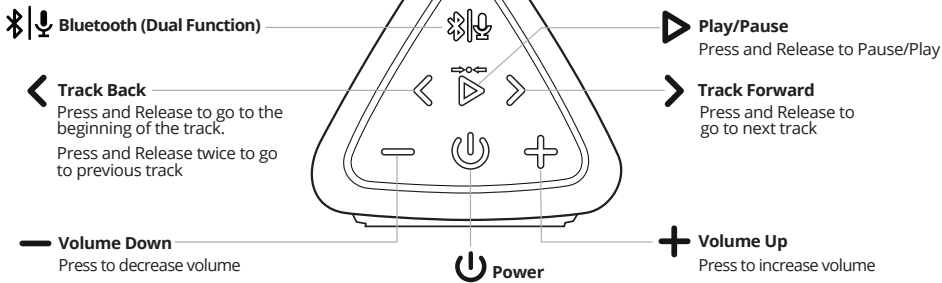

Important - The volume control on your device and the speaker work independently of each other.
To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.
Important - Some apps may not support track back, track forward, or play/pause

 
Lights

Blue Light lit when speaker is on:

- **Flashing Blue**
speaker is in Bluetooth pairing mode
- **Solid Blue**
speaker is connected
- **Blue Light will turn to Solid Green**
when the 3.5mm audio cable is plugged into the AUX IN Jack

Red Light lit when charging:


- **Slowly flashing Red**
battery is charging
- **Solid Red**
battery is fully charged

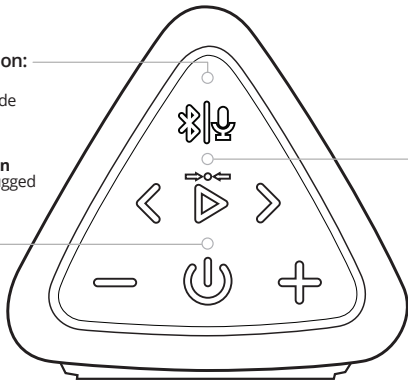

White/Orange Light lit when speaker is in OontZ Wireless Dual Stereo


- With a second OontZ Angle 3 S speaker (**sold separately**) you can wirelessly connect both speakers together to play with OontZ Wireless Dual Stereo.
- For OontZ Wireless Dual Stereo instructions please see page 14.

 Connectors

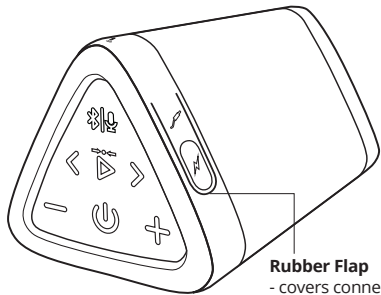

Rubber Flap

 - covers connectors
- pull gently from the bottom to access connectors, it is a snug fit to provide water resistance

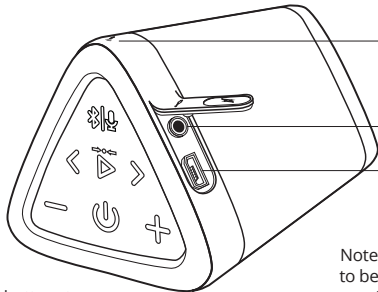

Built-in Mic for
Speakerphone

 
AUX IN Jack

Micro USB
Charging Connector


Note: The rubber flap needs to be closed to keep the speaker water resistant

Play Horizontally or Vertically

Play Horizontally
Controls on side

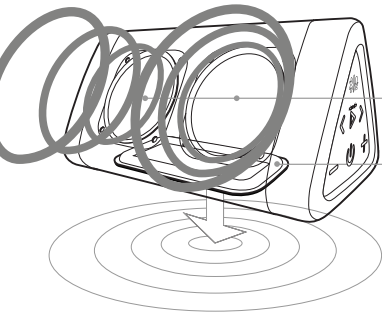

Play Vertically
Controls on top

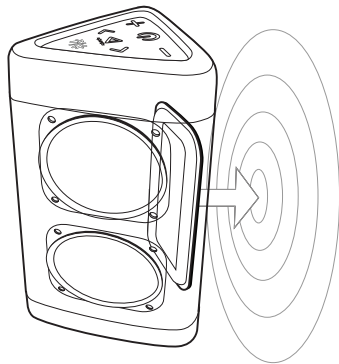 

Dual Precision Stereo Drivers

Passive Bass Radiator

Battery Features

- The rechargeable battery comes with a partial charge and the speaker is ready to play.
- For maximum playtime, fully charge the battery.
- You can play while charging.

Low Charge Remaining

- When the battery charge has less than 15% remaining the Red Light will begin flashing rapidly.
- The volume will decrease to preserve the remaining battery charge.

Music Play Time

Up to 12 hours on a full charge, at 2/3 volume.
Louder volumes will reduce the battery play time.

Power Saving Feature

 
- When playing from battery power the OontZ Angle 3 S will turn off after 15 minutes of not playing audio to conserve the battery charge. *
- When plugged into a charging source the OontZ Angle 3 S will remain on until you turn the power off.
- You can continue to keep the speaker plugged into a charging source even when it is fully charged, keeping the speaker turned on and available

*Exception: when connected to certain devices, including the Amazon Echo Dot or Amazon Echo, the **Power Saving Feature** is disabled and the speaker will remain on until you turn the power off.

Charging the Battery

Red Light lit
when charging:

- **Slowly flashing Red**
battery is charging
- **Solid Red**
battery is fully charged

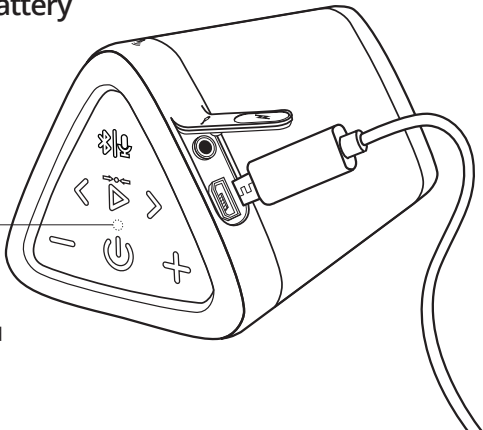


- Insert the small end of the Micro USB Charging Cable into the Charging Connector as shown.

- Insert the larger end of the Micro USB Charging cable into a USB wall charger for a Smartphone or iPhone, or a USB port on your laptop/computer to charge the battery (see illustrations on page 7).

Charging Time:

- Up to 4.5 hours to fully charge a low battery.

 
Charging the Battery (continued)

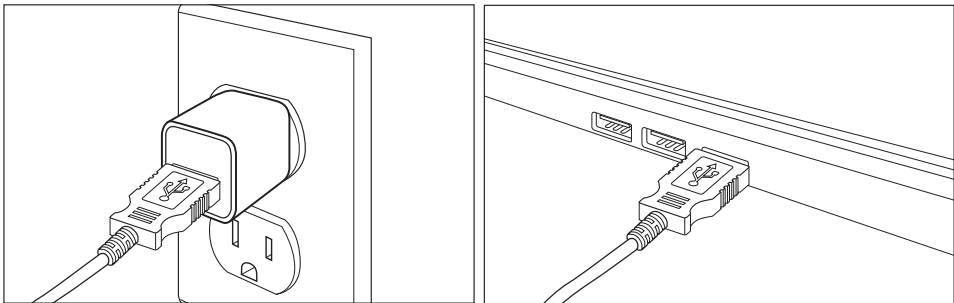


Insert the larger end of the Micro USB charging cable into a USB wall charger for a Smartphone or iPhone (5V \equiv 1.0A up to 5V \equiv 2.4A maximum), or a USB port on your laptop/computer to charge the OontZ Angle 3 S battery.

Turning On and Off

Turn ON

Press and Release
the Power Button 

 Red Light will turn
on for 3 seconds

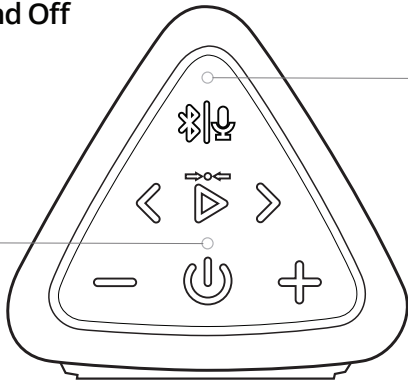

Blue Light will turn on
after Red Light turns off


- Flashing Blue

The speaker is in pairing mode

- Solid Blue

Your device has connected with the
OontZ Angle 3 S and is ready to play

Turn OFF

Press and Hold Down the Power Button 
for 2 Seconds

Blue Light will turn off

Pair & Connect with Your Device -- Step 1

Turn ON your OontZ Angle 3 S


Flashing Blue Light

- The OontZ Angle 3 S is ready to pair and connect.

Solid Blue Light

- Your device has connected to the OontZ Angle 3 S and is ready to play.
- The OontZ Angle 3 S allows the last device it was connected with to automatically reconnect with the speaker each time the speaker is turned on and that device is within range.*

 
The OontZ Angle 3 S can be connected to one device at a time.

- To pair and connect to a different device, you need to first disconnect the currently paired device.
- To disconnect the current device, press and hold down the **Bluetooth button**  for 3 seconds.
- The **Blue Light** will begin **flashing** and the OontZ Angle 3 S is ready for the next device to pair and connect.

*Exception: certain devices may not automatically reconnect.

Amazon Echo devices will not automatically reconnect. You will need to say "Alexa, connect my speaker"

- Your device needs to be within 100 unobstructed feet of the OontZ Angle 3 S to pair and connect.
If there is an issue when connecting please move your device closer to the speaker, then pair and connect.
- When the charge is too low indicated by a flashing red light on the speaker, your device will not be able to connect with the speaker.

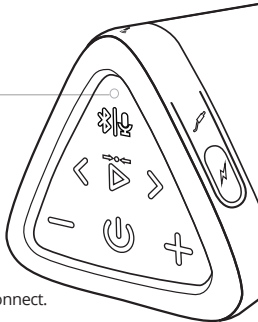

Pair & Connect with Your Device -- Step 2 --

-- With Your iPhone, iPad, or iPod

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ_Angle 3S xxx' when it appears under DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The **Blue Light** will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 S

-- With Your Smartphone, Tablet & Mobile Devices

- Go to Settings > Bluetooth, check Bluetooth is on
 - Scan or Search and select 'OontZ_Angle 3S xxx' when it appears under AVAILABLE DEVICES (xxx: 3 characters which are unique to your speaker)
 - Your device will connect in a few seconds
 - The **Blue Light** will turn solid blue and there will be a quiet chime
 - You can now play your audio wirelessly to your OontZ Angle 3 S
- Note: Your Smartphone or Tablet instructions may vary

Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

-- With Your Apple Mac or Windows Laptop/Computer

For the pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit: TheOontZ.com/pairing

Pair & Connect with Your Device -- Step 2 --

-- With Your Amazon Echo or Amazon Echo Dot

To pair and connect with the Amazon Echo or Amazon Echo Dot the first time use the Alexa app. For other Amazon Alexa devices please refer to their pairing and connecting instructions.

- Open the Alexa app
- Go to the 'Home' menu by pressing the 3 horizontal lines in the upper left corner next to 'Home'
- Press 'Settings'
- Select your Amazon Echo device under 'Devices' by pressing it
- Press 'Bluetooth'
- Select the 'OontZ_Angle 3S xxx' (xxx: 3 characters unique to your speaker) when it appears in the list of 'Available Speakers'
- Alexa will announce: "Connected to OontZ_Angle 3S xxx"


To connect the next time, turn on the OontZ Angle 3 S and say "Alexa, connect my speaker" or "Alexa, pair"

Pair & Connect with Your Device -- Step 2 --

-- With Your Amazon Echo or Amazon Echo Dot (continued)

Important Note: When the OontZ Angle 3 S is playing from battery power and connected to the Amazon Echo device, the speaker will remain on and it will not automatically turn off after 15 minutes of not playing audio. This will use up the battery charge.

We recommend to:

 
- 1) Keep the OontZ Angle 3 S plugged into a USB wall charger.
It can remain on and available to play from the Amazon Echo device.
- Or -
- 2) Turn off the OontZ Angle 3 S when you are done listening.
 - Either turn off the speaker by pressing and holding down the power button  for 2 seconds,
 - or say "Alexa, disconnect my speaker" and the OontZ Angle 3 S will automatically turn off after 15 minutes.
 - When you want to connect and play to the speaker again turn on the OontZ Angle 3 S and say "Alexa, connect my speaker" or "Alexa, pair".

For assistance with the Alexa app, contact Amazon's Customer Service.
Open the Alexa app and select Help & Feedback > Email Customer Service

To Play with Non-Bluetooth Devices Use the 3.5mm Audio Cable

Turn ON your OontZ Angle 3 S 

- Plug one end of the 3.5mm audio cable into the **AUX IN Jack** on the speaker.
- The Blue Light will turn solid Green.
- Plug the other end of the 3.5mm audio cable into the headphone jack on your device.
- Make sure both ends of the cable are fully inserted
- You are now ready to play.

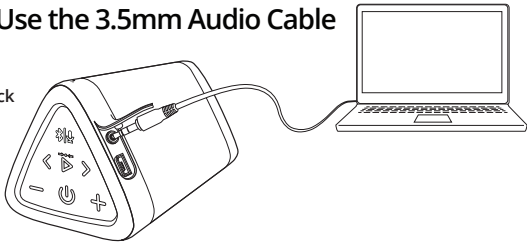


Important: The Bluetooth on the OontZ Angle 3 S is disabled when the 3.5mm audio cable is connected to the speaker. You need to remove the 3.5mm audio cable from the speaker in order to connect to a Bluetooth device.

- **Note:** When the rubber flap is open to allow the 3.5mm audio cable to be connected, the speaker is not water resistant. The rubber flap needs to be closed to keep the speaker water resistant.
- **Note:** The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

OontZ Wireless Dual Stereo - Connect two OontZ Angle 3 S speakers together

 Play your music wirelessly through both speakers up to 100 feet apart*

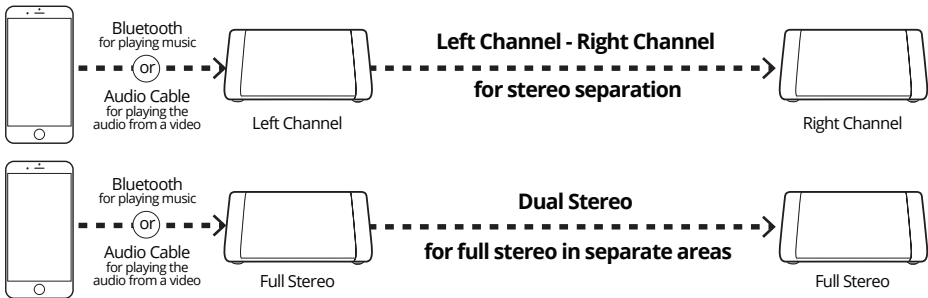


*Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together

Connecting two OontZ Angle 3 S Speakers together for Left Channel - Right Channel


- Turn on both OontZ Angle 3 S speakers. 
- Pair and Connect one of the speakers with your device. When connected the Blue Light will be lit solid. This speaker will serve as the **Play Control Speaker**.
- The second speaker must not be connected to any device, its Blue Light needs to be flashing. If the second speaker has a solid Blue Light it is connected to a device and you need to disconnect it, by pressing and holding down the **Bluetooth button**  for 3 seconds until the Blue Light begins flashing.
- On the **Play Control Speaker** (speaker with solid Blue Light) press and hold down the **Play/Pause button**  for 5 seconds until the flashing White Light appears and the speaker says "Dual Pairing".
- After a few seconds the **Play Control Speaker** will say "Left Channel" and the second speaker will say "Right Channel" and the speakers will be connected together for Left Channel - Right Channel and you are ready to play.

 Two OontZ Angle 3 S Speakers connected for Left Channel - Right Channel

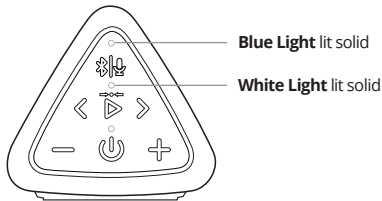

Play Control Speaker

 - Use the buttons on the **Play Control Speaker** to adjust volume, play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the second speaker when paired together.
- Use the **Play Control Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the second speaker when paired together.
- Speakerphone call audio will only play through the **Play Control Speaker**

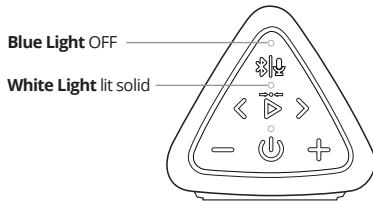

Second Speaker

Changing to Dual Stereo from Left Channel - Right Channel

Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- To set both speakers for Dual Stereo they must first be connected together for Left Channel - Right Channel (see page 15).
- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press and hold down the **Track Forward button** > on the **Play Control Speaker** for 5 seconds until the White Lights turn solid Orange on both speakers.
- Both speakers will say "Dual Stereo" and you are ready to play.

Changing back to Left Channel - Right Channel from Dual Stereo

- To change back to Left Channel - Right Channel, press and hold down the **Track Forward button** > on the **Play Control Speaker** for 5 seconds until the Orange Lights turn solid White on both speakers.
- The **Play Control Speaker** will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.

OontZ Wireless Dual Stereo - Important Notes


Turning the speakers off

- Turning the **Play Control Speaker** off will turn both speakers off.
- Turning the second speaker off first will only turn that speaker off and the **Play Control Speaker** will play as a single speaker.

Turning the speakers back on

- Turn both speakers on and they will automatically try to connect to each other again.
- Turn one of the speakers on and a device can connect with it, and play as a single speaker.

Disconnecting the two speakers from each other

- Both speakers need to be turned on.
- On the **Play Control Speaker** press and hold down the **Play/Pause button**  for 5 seconds. The White Lights will turn off and the speakers will be disconnected from each other.

Playing the audio from a video in OontZ Wireless Dual Stereo

 
- To play the audio from a video or TV in OontZ Wireless Dual Stereo you will need to connect the **Play Control Speaker** to your device or TV using the 3.5mm audio cable, allowing the audio and video to play in sync with each other. If the **Play Control Speaker** is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.

IPX5 Water Resistance

No more worries about the rain or getting splashed

Perfect for taking to the beach or by the pool

The rubber flap needs to be closed to keep the speaker water resistant and dustproof

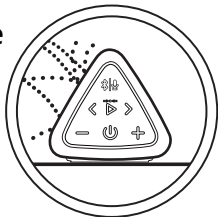

Gentle Water Spray or Splash is okay



DO NOT allow speaker to sit in water



DO NOT allow speaker to submerge fully or partially in water

Safety Precaution: When the OontZ Angle 3 S speaker is plugged in to a charging source with the Micro USB charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.


IPX5 rating - The OontZ Angle 3 S can resist gentle water spray & splash but cannot be partially or fully submerged or left in a wet environment for an extended period of time, any of which could cause unreparable damage to the speaker.

When charging or using the 3.5mm audio cable, please keep the speaker away from water as it can be damaged by water entering the connectors.


Wireless Hands Free Personal Speakerphone

 
- The Wireless Hands Free Personal Speakerphone feature works over Bluetooth with Smartphones and iPhones only
- This feature is not supported when connected to PCs, laptops, Apple Mac or other types of devices.

To answer an Incoming Call / To End a Call


- Press and Release the Bluetooth Button 

To Reject an Incoming Call


- Press and Hold Down the Bluetooth Button  for 3 Seconds.
- Please keep the speaker close in front of you so you may be heard clearly by the listener.
- You can use your Smartphone or iPhone to switch between using Hands Free Speakerphone and your phone.

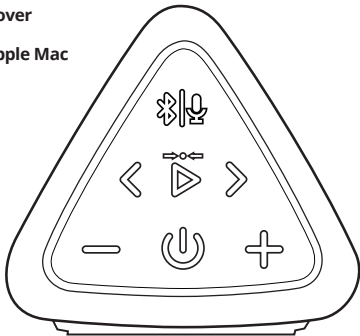

Reset Function

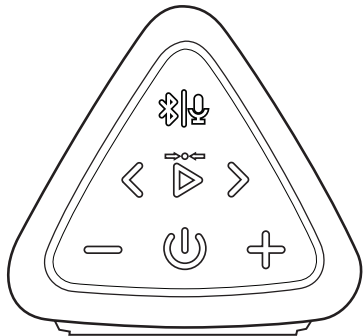 

Step 1: Remove the Micro USB charging cable and 3.5mm Audio cable, if connected.

Step 2: Press and hold down the **Power button**  for 8 seconds, then release.

Step 3: The speaker has now been reset and you can turn it on.

Customer Support

If you have a question about your OontZ Angle 3 S or experience an issue with the speaker, our Customer Support Team wants to assist you.

For online troubleshooting tips please visit:

TheOontZ.com/troubleshooting

and select the OontZ Angle 3 S

Contact us at:

TheOontZ.com/support

and fill in our customer support form

Safety and Precautions

- 1. When the OontZ Angle 3 S speaker is plugged in to a charging source with the Micro USB charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**
2. Read and follow all instructions.
3. Protect the Micro USB charging cable from being pinched, particularly at the connectors.
4. Unplug the Micro USB charging cable during lightning storms or when unused for long periods of time.
5. Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
7. Do NOT make unauthorized alterations to this speaker.
8. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
9. Do NOT place naked flame sources, such as lighted candles, on or near the speaker.
10. Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like)
11. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes to this device not expressly approved by SoundWorks, INC may void the user's authority to operate this device.

Apple, iPhone, iPad, iPod, and Mac are registered trademarks of Apple Inc.
Amazon, Alexa, Amazon Echo and Amazon Echo Dot are registered trademarks of Amazon.com, Inc.
Windows is a registered trademark of Microsoft Corporation
Bluetooth is a registered trademark of Bluetooth SIG, Inc.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

OontZ Angle 3 S Carry Case

Sold separately

- Lightweight neoprene rubber with reinforced zipper
- Includes a durable aluminum carabiner for easily attaching to backpacks, luggage, laptop bags, coolers, camera bags, purses, belts, and other clippable items



Available at TheOontZ.com