

## User Guide

# OontZ

## Angle 3 ULTRA

### 4th Generation

 
Play 2, 3 or more Speakers Together  
Waterproof Bluetooth Speaker, Incredible Sound,  
Powerful Volume, 100 Foot Wireless Bluetooth Range

OontZ App for the OontZ Angle 3 ULTRA  
Control the OontZ Angle 3 ULTRA Advanced Features  
from your iPhone or Smartphone

Designed and Engineered By  
**CAMBRIDGE SOUNDWORKS.**

**TheOontZ.com**

## In the Package

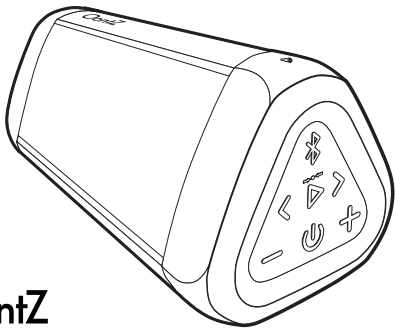

**OontZ**  
Angle 3 ULTRA



User Guide



USB Type C Charging Cable




3.5mm Stereo Audio Cable

## Table of Contents

 	Pages
Buttons, Lights, and Connectors .....	1 - 3
Battery Features and Charging the Battery .....	4 - 5
Turning On and Off .....	6
Pair & Connect with Your Device .....	7 - 10
IPX7 Water Resistance.....	11
Talk to Siri and Hands Free Speakerphone.....	12
To Play with Non-Bluetooth Devices Use a 3.5mm Stereo Audio Cable.....	13
Dual Speaker Mode - Connect Two OontZ Angle 3 Pro Speakers Together .....	14 - 18
The Surround Mode - Connect 2, 3 or more OontZ Angle 3 ULTRA speakers together.....	19 - 22
Using The OontZ App .....	23 - 33
Contacting Customer Support and Reset Function .....	34
Safety and Precautions .....	35 - 36

# Buttons

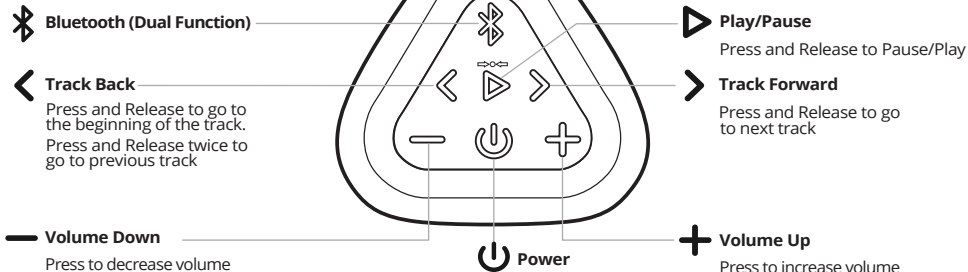

**Important** - The volume control on your device and the speaker work independently of each other.

To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

**Important** - Some apps may not support track back, track forward, or play/pause


# Lights

 Bluetooth Light lit when speaker is on:

- **Flashing Blue**  
speaker is in pairing mode
- **Solid Blue**  
speaker is connected
- **Blue Light will turn to Solid Green**  
when the 3.5mm audio cable is plugged into the AUX IN Jack

Power Light lit when charging:


- **Slowly flashing Red**  
battery is charging
- **Solid Red**  
battery is fully charged

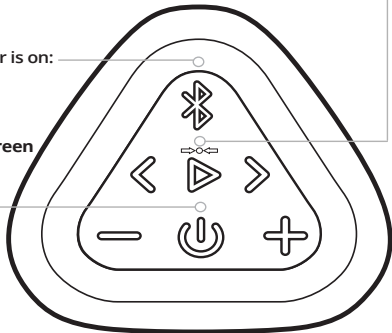

**White Light lit** when speaker is in Dual Speaker Mode  
**Orange Light lit** when speaker is in The Surround Mode


- With a second OontZ Angle 3 ULTRA speaker (**sold separately**) you can wirelessly connect both speakers together to play in Left Channel-Right Channel or Dual Stereo.
- For Dual Speaker Mode instructions please see page 14.
- With a 2, 3 or more OontZ Angle 3 ULTRA speakers (**sold separately**) you can wirelessly connect all the speakers together to play in The Surround Mode.
- For The Surround Mode instructions please see page XX.

## Connectors

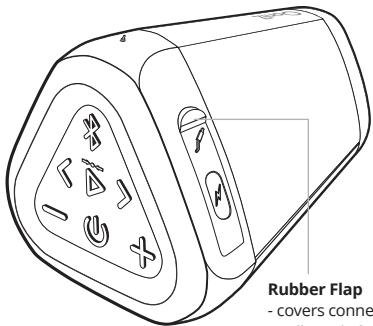 

### Rubber Flap

 - covers connectors
- pull gently from the top to access connectors, it is a snug fit to provide water resistance

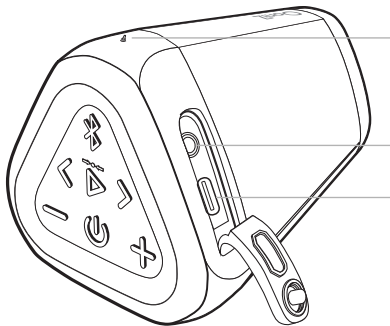

Built-in Mic for  
Speakerphone &  
Siri

AUX IN Jack

USB Type C  
Charging  
Connector

Note: The rubber flap needs to be closed to keep the speaker water resistant

# Battery Features

- The rechargeable battery comes with a partial charge and the speaker is ready to play.
- For maximum playtime, fully charge the battery.
- You can play while charging.

## Low Charge Remaining

- When the battery charge has less than 15% remaining the Power Button Light will begin flashing Red rapidly.
- The volume will decrease to preserve the the remaining battery charge. To return to full volume follow the steps to charge the battery on Page 5.

## Music Play Time

- Up to 20 hours on a full charge, at 2/3 volume. - Louder volumes will reduce the battery play time.

## Power Saving Feature

- When playing from battery power the OontZ Angle 3 ULTRA will turn off after 30 minutes of not playing audio to conserve the battery charge. \*
- When plugged into a charging source the OontZ Angle 3 Pro will remain on until you turn the power off.
- You can continue to keep the speaker plugged into a charging source even when it is fully charged, keeping the speaker turned on and available.

\* Exception: certain devices, including the Amazon Echo Input, Amazon Echo Dot and Amazon Echo, disable the Power Saving Feature and the speaker will remain on until you turn the power off.

## Charging the Battery

**Power Light** Lit Red when charging:

- **Slowly flashing** battery is charging
- **Solid** battery is fully charged

 
Insert the small end of the USB Type C Charging Cable into the Charging Connector as shown.

Insert the larger end of the USB Type C Charging Cable into a USB wall charger for a Smartphone or iPhone (USB wall charger\* that is 5V  $\equiv$  3A maximum) to charge the OontZ Angle 3 Pro battery.

\* Only use a USB wall charger that is UL listed. A UL listed USB wall charger will have the logo  printed on it.

Charging Time - Up to 7 hours to fully charge a low battery.

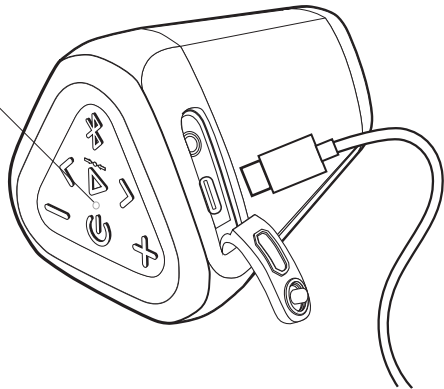


**Important:** When the OontZ Angle 3 ULTRA is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.








## Turning On and Off
 
### Turn ON

- Press and Release the Power Button 
- Power Light  will turn **Red** for 3 seconds then turn off
- Bluetooth Light  will turn **Blue**

### Turn OFF

- Press and Hold Down the Power Button  for 2 Seconds
- Bluetooth Light  will turn off

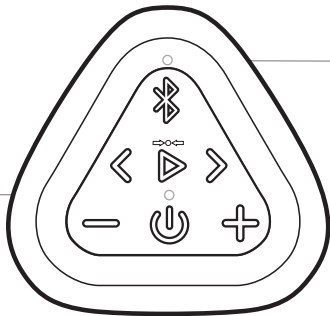

### Bluetooth Light

- **Flashing Blue** in pairing mode
- **Solid Blue** your device has connected with the OontZ Angle 3 ULTRA and is ready to play

# Pair & Connect with Your Device – Step 1

## Turn ON your OontZ Angle 3 ULTRA

### Bluetooth Light Flashing Blue

- The OontZ Angle 3 ULTRA is ready to pair and connect.


### Bluetooth Light Solid Blue

- Your device has connected to the OontZ Angle 3 ULTRA and is ready to play.

- The OontZ Angle 3 ULTRA allows the last device it was connected with to automatically reconnect with the speaker each time the speaker is turned on and that device is within range.\*

### The OontZ Angle 3 ULTRA can be connected to one device at a time.

- To pair and connect to a different device, you need to first disconnect the currently paired device.

- To disconnect the current device, press and hold down the Bluetooth button  for 5 seconds.

 
- The Bluetooth Light will begin flashing blue and the OontZ Angle 3 ULTRA is ready for the next device to pair and connect.

\*Exception: certain devices may not automatically reconnect. When connected to an Amazon Echo device it will not automatically reconnect. You will need to say to your Amazon Echo device, "Alexa, connect my speaker".

- Your device needs to be within 100 unobstructed feet of the OontZ Angle 3 ULTRA to pair and connect.


If there is an issue when connecting please move your device closer to the speaker, then pair and connect.

- When the charge is too low indicated by a flashing red light on the speaker, your device will not be able to connect with the speaker.

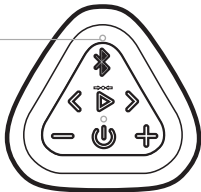

## Pair & Connect with Your Device -- Step 2 --

### -- With Your iPhone, iPad, iPod, Smartphone, Tablet & Mobile Devices

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ Angle 3U SS xxx' when it appears under DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The Bluetooth Light  will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 ULTRA

**Note:** Your Smartphone or Tablet instructions may vary

Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

### -- With Your Apple Mac or Windows Laptop/Computer

For the pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit: [TheOontZ.com/pairing](https://TheOontZ.com/pairing).

## Pair & Connect with Your Device -- Step 2 --

### -- With Your Amazon Echo, Amazon Echo Dot or Amazon Echo Input

To pair and connect with the Amazon Echo, Amazon Echo Dot or Amazon Echo Input for the first time use the Alexa app. For other Amazon Alexa devices please refer to their pairing and connecting instructions.

- Open the Alexa app
- Select your Amazon Echo device by pressing 'Devices' in the lower right corner of the screen.
- Press 'Echo & Alexa'
- Select your Amazon Echo device by pressing it
- Press 'Bluetooth Devices'
- Press 'Pair a New Device'
- Select the 'OontZ Angle 3U SS xxx' (xxx: 3 characters unique to your speaker) when it appears in the list of 'Available Speakers'
- Alexa will announce: "Connected to OontZ\_Angle 3U SS xxx"

To connect the next time, turn on the OontZ Angle 3 ULTRA and say "Alexa, connect my speaker" or "Alexa, pair"

## Pair & Connect with Your Device -- Step 2 --


### -- With Your Amazon Echo or Amazon Echo Dot (continued)

Important Note: When the OontZ Angle 3 ULTRA is playing from battery power and connected to the Amazon Echo device, the speaker will remain on and it will not automatically turn off after 30 minutes of not playing audio. This will use up the battery charge.

We recommend to:

- 1) Keep the OontZ Angle 3 ULTRA plugged into a USB wall charger.  
It can remain on and available to play from the Amazon Echo device.

- Or -

- 2) Turn off the OontZ Angle 3 ULTRA when you are done listening.
  - Either turn off the speaker by pressing and holding down the power button  for 2 seconds,
  - or say "Alexa, disconnect my speaker" and the OontZ Angle 3 ULTRA will automatically turn off after 30 minutes.
  - When you want to connect and play to the speaker again turn on the OontZ Angle 3 ULTRA and say "Alexa, connect my speaker" or "Alexa, pair".

For assistance with the Alexa app, contact Amazon's Customer Service.  
Open the Alexa app and select Help & Feedback > Email Customer Service

## IPX7 Waterproof

The OontZ Angle 3 ULTRA is Waterproof and it is IPX7 certified

The perfect speaker for listening to your favorite music in any environment

Perfect for taking to the lake, the beach, listening by the pool, listening in the shower

IPX7 means the OontZ Angle 3 ULTRA is Waterproof and can handle water spray or being splashed and can handle being partially or fully submerged in water up to a maximum of 3 feet deep, for up to a maximum of 30 minutes


The rubber flap needs to be closed for the speaker to be waterproof and dustproof.

**Important Safety Precaution: When the OontZ Angle 3 ULTRA speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**

## Talk to Siri on your iPhone or iPad through the OontZ Angle 3 ULTRA

This feature works when connected to an iPhone or an iPad over Bluetooth.

### To talk to Siri through the OontZ Angle 3 ULTRA

- Press and Release the Bluetooth Button  twice on the OontZ Angle 3 ULTRA
- The Bluetooth Light will turn to green and flash 3 times
- Wait for about two seconds until you hear a "chime"
- After the "chime" say what you need into the mic on the OontZ Angle 3 ULTRA
- The response from Siri will then play through the OontZ Angle 3 ULTRA, and may display information on your iPhone or iPad

Your iPhone or iPad needs to be on the latest version of iOS


## Wireless Hands Free Personal Speakerphone

The Wireless Hands Free Personal Speakerphone feature works over Bluetooth with Smartphones and iPhones only; this feature is not supported when connected to other types of devices.

### To answer an Incoming Call / To End a Call

- Press and Release the Bluetooth Button 

### To Reject an Incoming Call

 
- Press and Hold Down the Bluetooth Button  for 2 Seconds
- Please keep the speaker close in front of you so you may be heard clearly by the listener.
- You can use your Smartphone or iPhone to switch between using Hands Free Speakerphone and your phone.
- When two speakers are paired together in **Dual Speaker Mode** or **The Surround Mode**, calls will come through the **Master Speaker**.

For more information on **Dual Speaker Mode** please see page 14 and for **The Surround Mode** please see page 19.

## To Play with Non-Bluetooth Devices Use the 3.5mm Stereo Audio Cable

Turn ON your OontZ Angle 3 ULTRA 

- Plug one end of the included 3.5mm Stereo Audio Cable into the **AUX IN** jack on the speaker.
- The Bluetooth Light will turn solid Green.
- Plug the other end of that 3.5mm Stereo Audio Cable into the headphone jack on your device.
- Make sure both ends of the cable are fully inserted
- You are now ready to play.

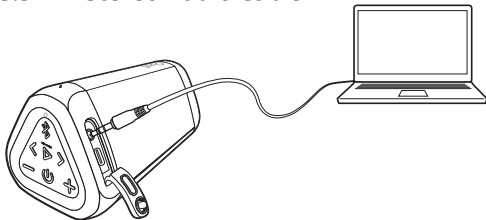

Important: The Bluetooth on the OontZ Angle 3 ULTRA is disabled when the 3.5mm Audio Cable is connected to the speaker. You need to remove the 3.5mm Audio Cable from the speaker in order to connect to a Bluetooth Device.


### Important Notes:

 - Note: The rubber flap needs to be closed before the speaker is exposed to water. The speaker is not water-resistant or waterproof when the flap is open.
- The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.



## Dual Speaker Mode - Connect two OontZ Angle 3 ULTRA speakers together Play your music wirelessly through both speakers up to 100 feet apart\*

**Note:** The OontZ Angle 3 ULTRA 4th Generation is **NOT** compatible with the previous generations of OontZ Angle 3 ULTRA speakers.

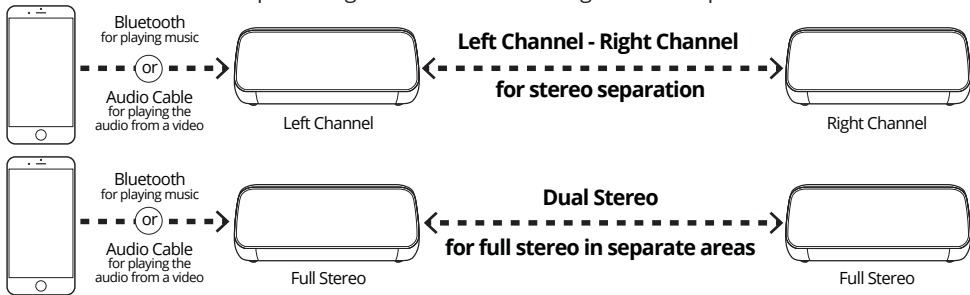

\*Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together


## Connecting two OontZ Angle 3 ULTRA speakers together for Left Channel - Right Channel

 You can also use the OontZ app to connect two OontZ Angle 3 ULTRA speakers together - See page 26 for instructions on using the OontZ app

- Turn on both OontZ Angle 3 ULTRA speakers. 
- Pair and Connect one of the speakers with your device. When connected the Bluetooth Light  will be lit Solid Blue. This speaker will serve as the **Master Speaker**.
- The second speaker must not be connected to any device, its Bluetooth Light  needs to be flashing. If the second speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the Bluetooth Button  for 3 seconds until the Bluetooth Light  begins flashing.
- On the **Master Speaker** (speaker with solid Blue Light) press and hold down the **Play/Pause button**  for 3 seconds until the light above the **Play/Pause Button** is flashing with a White Light and the speaker says "Dual Pairing".
- After a few seconds both speakers the light above the Play/Pause Button will be lit with a solid White light. The Master Speaker will say "Left Channel" and the second speaker will say "Right Channel". The speakers will be connected together for Left Channel - Right Channel and you are ready to play.

## Two OontZ Angle 3 ULTRA Speakers connected for Left Channel - Right Channel


**Master Speaker**

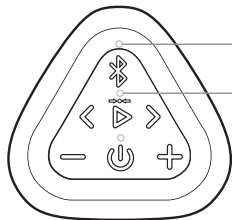

Light lit solid **Blue or Green**

Light lit solid **White**

**Second Speaker**

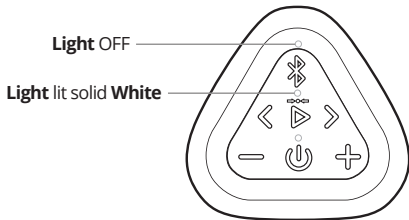 

Light OFF

Light lit solid **White**

- Use the buttons on the **Master Speaker** for play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the second speaker when paired together.
- Use the **Master Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the second speaker when paired together.
- Speakerphone call audio will only play through the **Master Speaker**

## Changing to Dual Stereo from Left Channel - Right Channel

Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- To set both speakers for Dual Stereo they must first be connected together for Left Channel - Right Channel (see page 15).
- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press and hold down the **Track Forward button** > on the **Master Speaker** for 3 seconds until Both speakers say "Dual Stereo" and you are ready to play.

## Changing back to Left Channel - Right Channel from Dual Stereo

- To change back to Left Channel - Right Channel, press and hold down the **Track Forward button** > on the **Master Speaker** for 3 seconds until the Master Speaker will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.

## Dual Speaker Mode - Important Notes


### Turning the speakers off

- Turning the **Master Speaker** off will turn both speakers off.
- Turning the second speaker off first will only turn that speaker off and the **Master Speaker** will play as a single speaker.

### Turning the speakers back on

- Turn both speakers on and they will automatically try to connect to each other again.
- Turn one of the speakers on and a device can connect with it, and play as a single speaker.

### Disconnecting the two speakers from each other

 
- Both speakers need to be turned on.
- On the **Master Speaker** press and hold down the **Play/Pause button**  for 3 seconds. The White Lights will turn off and the speakers will be disconnected from each other.

### Playing the audio from a video in Dual Speaker Mode

- To play the audio from a video or TV in OontZ Wireless Dual Stereo you will need to connect the **Master Speaker** to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the **Master Speaker** is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.
- You can also use the OontZ Bluetooth Adapter - 2nd Generation (Sold separately on [www.theoontz.com](http://www.theoontz.com)) with it's low latency technology which removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video when playing to two OontZ Angle 3 ULTRA speakers.

## The Surround Mode - Connect 2, 3 or more OontZ Angle 3 ULTRA speakers together Play your music wirelessly through speakers up to 100 feet apart \*



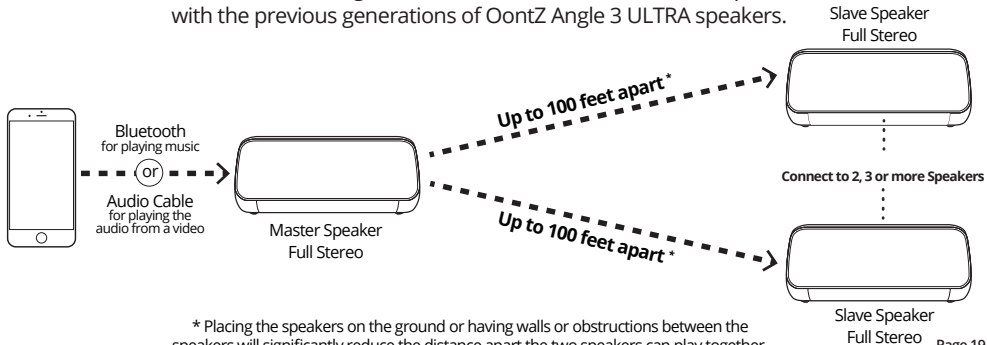


 

**Note:** The OontZ Angle 3 ULTRA 4th Generation is **NOT** compatible with the previous generations of OontZ Angle 3 ULTRA speakers.



\* Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together.


## Connecting 2, 3 or more OontZ Angle 3 ULTRA speakers together

 You can also use the OontZ app to connect the OontZ Angle 3 ULTRA speakers together - See page 29 for instructions on using the OontZ app

- Turn on one of OontZ Angle 3 ULTRA speakers. 
- Connect the speakers to your device. When connected the Bluetooth Light  will be lit Solid Blue or Solid Green if using Aux In. This speaker will serve as the **Master Speaker**.
- Turn on the other OontZ Angle 3 ULTRA speakers. These speakers will be the **Slave Speakers**.
- The **Slave Speakers** must not be connected to any device, their Bluetooth Light  must be flashing. If a speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 5 seconds until the Bluetooth Light  begins flashing.
- On the **Master Speaker** (speaker with solid Blue or Green Light) press and release the **Bluetooth Button** . The light above the Play/Pause Button will start flashing Orange and the speaker will say "Surround Mode Transmit".
- On the **Slave Speakers** with a flashing Blue Light, press and release the **Bluetooth Button** . The light above the Play/Pause Button will start flashing Orange and the speaker will say "Surround Mode Receive".
- After a few seconds each speaker connected with the **Master Speaker** will have the light above the Play/Pause Button lit with a solid Orange light.

## OontZ Angle 3 ULTRA Speakers connected in The Surround Mode


Master Speaker

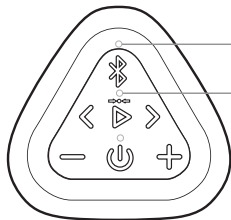

Light lit solid **Blue or Green**

Light lit solid **Orange**

 Slave Speaker

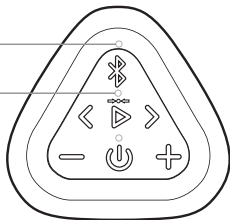

Light OFF

Light lit solid **Orange**

- Use the buttons on the **Master Speaker** for play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the other speakers when connected together.
- Use the **Master Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the other speakers when connected together.
- Speakerphone call audio will only play through the **Master Speaker**



## The Surround Mode - Important Notes



### Turning the speakers off

- Turning the **Master Speaker** off will turn off all the speakers.
- Turning a Slave Speaker off first will only turn that speaker off and the other Slave Speakers will continue to play. The **Master Speaker** will play as a single speaker if no other Slave Speakers are connected.

### Turning the speakers back on

- Turn all the speakers on and repeat the pairing process - See page 20 for instructions.
- Turn one speaker on and the speaker can be paired and connected with another device. The speaker will play as a single speaker.

### Disconnecting the speakers from each other

- To disconnect a single Slave Speaker, press and release the **Bluetooth Button**  on the speaker. All other Slave Speakers will stay connected to the Master Speaker.
- To disconnect all the speakers, turn off the Master Speaker or press and release the **Bluetooth Button**  on the Master Speaker. The speakers will all be disconnected.

**Note:** To pair a Slave Speaker with a flashing Orange Light with another device, press and release the **Bluetooth Button** . The Bluetooth Light will begin flashing Blue and the OontZ Angle 3 ULTRA is ready to pair and connect with the device.

# The OontZ app

Control the advanced features of your OontZ Angle 3 ULTRA from your iPhone or Smartphone running the Android operation system.

**EQ** - Adjust the Treble and Bass levels

**Volume Control** - With a single OontZ Angle 3 ULTRA speaker remotely control the volume. With two OontZ Angle 3 ULTRA speakers in Dual Speaker Mode sync the volume to control both speakers together or independently control the volume on each OontZ Angle 3 ULTRA speaker

**Dual Speaker Mode** - Connect, Disconnect and change between Left Channel - Right Channel and Dual Stereo when using two OontZ Speakers in Dual Speaker Mode.

**The Surround Mode** - Connect, Disconnect and manage 2, 3 or more OontZ Speakers in The Surround Mode.

**Support** - View the latest online manual and get OontZ speaker updates

**Speakers** - Select to allow the OontZ app to control other connected OontZ speakers

Download the OontZ app from the [Apple App Store®](#) or [Google Play™ Store](#).

- 1) Open the Apple App Store® or Google Play™ Store on your iPhone or Smartphone running the Android operating system.
- 2) Search for the "Oontz" app and install.
- 3) After the app has been installed the Oontz app will appear on your iPhone or smartphone.



# The OontZ app

To enable the OontZ app with your OontZ Angle 3 ULTRA

- Turn on your OontZ Angle 3 ULTRA speaker
- Launch the OontZ app and the Home screen will appear
- Select the Menu ≡ in the upper left hand corner of the OontZ app and the Menu screen will appear
- Select 'Speakers' from the Menu and the Speaker screen will appear

 
OontZ Angle 3 ULTRA icon is Grey

- Press the Grey speaker icon on the app to enable the OontZ app with the OontZ Angle 3 ULTRA
- The OontZ app will be enabled with your OontZ Angle 3 ULTRA in a few seconds
- The Grey speaker icon will turn Blue
- The OontZ app is enabled and ready to use

If the OontZ Angle 3 ULTRA icon is already Blue the OontZ app is already enabled and ready to use.



Home screen

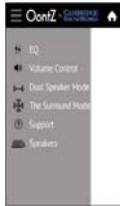

Menu screen



Speaker screen


# Using the OontZ app for EQ and Volume Control

 Select the Menu ☰ in the upper left hand corner of the app

- Select 'EQ' from the menu to access the speaker Equalizer screen

- Select 'Volume Control' from the menu to access the Volume Control screen

EQ  
screen

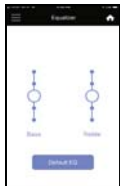

The Left slider adjusts the Bass and the Right slider adjusts the Treble. Press 'Default EQ' to set the EQ to the default setting.

Works when connected to one or two speakers and the OontZ app will adjust both speakers to the same EQ with two speakers connected in Dual Speaker Mode.

Volume  
Control  
screen  
for One  
Speaker

 


When using only one OontZ Angle 3 ULTRA speaker, the volume control functions the same for 'Sync Volume' or 'Independent Volume'.

Volume  
Control  
screen  
for Two  
Speakers



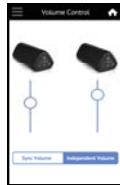


Press 'Sync Volume' to control together the volume of two OontZ Angle 3 ULTRA speakers when connected in Dual Speaker Mode.



Press 'Independent Volume' to separately control the volume of two OontZ Angle 3 ULTRA speakers when connected in Dual Speaker Mode.

## Using the OontZ app for Dual Speaker Mode

**Connect two OontZ Angle 3 ULTRA speakers together - Play your music wirelessly through both speakers up to 100 feet apart.**  
Refer to Page 14 for more information about Dual Speaker Mode

- Turn on **one** of the OontZ Angle 3 ULTRA speakers.
- Pair and Connect the speaker with your device. When connected the Bluetooth Light  will be lit solid Blue. This speaker will serve as the **Master Speaker**.
- Enable the OontZ app with the OontZ Angle 3 ULTRA speaker.
- Turn on the **second** OontZ Angle 3 ULTRA speaker.
- The second speaker must not be connected to any device, its Bluetooth Light needs to be flashing Blue. If the second speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 5 seconds until the Bluetooth Light  begins flashing Blue.
- Refer to the next page for connecting the two OontZ Angle 3 ULTRA speakers together using the OontZ app.

# Using the OontZ app for Dual Speaker Mode

Select the Menu ☰ in the upper left hand corner of the app and select 'Dual Speaker Mode' from the menu.



Press 'Connect' to connect two OontZ Angle 3 ULTRA speakers in Dual Speaker Mode.



After a few seconds the light above the **Play/Pause Button ▶** on the second speaker will be lit solid White. The Master Speaker will say "Left Channel" and the second speaker will say "Right Channel". The speakers are connected together for Left Channel - Right Channel and you are ready to play.

## Play Control Speaker



Light lit solid Blue or Green

Light lit solid White

## Second Speaker



Light OFF

Light lit solid White

Disconnecting and Reconnecting the OontZ Angle 3 ULTRA speakers.

- Press 'Disconnect' to disconnect the two OontZ Angle 3 ULTRA connected speakers.
- The light above the Play/Pause Button on both speakers will turn off and the speakers will be disconnected from each other.
- To reconnect press 'Connect' with both OontZ Angle 3 ULTRA speakers turned on.

Playing the audio from a video in Dual Speaker Mode

 
- To play the audio from a video or TV in Dual Speaker Mode you will need to connect the Master Speaker to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the Master Speaker is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.

## Using the OontZ app for Dual Speaker Mode



Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press 'Dual Stereo'.
- Both speakers will say "Dual Stereo" and you are ready to play.








Use Left Channel - Right Channel for incredible left and right stereo separation.

- With the speakers connected together for **Dual Stereo**, you can change the speakers to **Left Channel - Right Channel**.
- To change to Left Channel - Right Channel, press 'Left Channel Right Channel'.
- The Master Speaker will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.

# Using the OontZ app for The Surround Mode

## Connecting 2, 3 or more OontZ Angle 3 ULTRA speakers together

- Turn on all of OontZ Angle 3 ULTRA speakers. 
- The speakers must not be connected to any device, their Bluetooth Light  must be flashing Blue. If a speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the Bluetooth Button  for 5 seconds until the Bluetooth Light  begins flashing Blue.

Select the Menu  in the upper left hand corner of the app and select 'The Surround Mode' from the menu.

## Selecting the Master Speaker



Press the 'Master Speaker' Button.

Select the Grey box in the list of displayed speakers that is to serve as the Master Speaker.



The selected speaker box will turn from Grey to Blue.

The light above the Play/Pause Button on the selected speaker will flash Orange.



# Using the OontZ app for The Surround Mode

## Selecting the Slave Speaker(s)



Press the 'Slave Speaker' Button.

Select the Grey boxes in the list of displayed speakers that will connect with the Master Speaker.



The selected speaker boxes will turn from Grey to Blue.

The light above the Play/Pause Button on the selected speakers will flash Orange.

After a few seconds each speaker will connect with the Master Speaker and the light above the Play/Pause Button on each speaker will be lit a solid Orange.



# Using the OontZ app for The Surround Mode

## Disconnecting and reconnecting the OontZ Angle 3 ULTRA speakers



Press the 'Slave Speaker' Button. Select a Blue box in the list of displayed speakers, that box will turn from Blue to Grey and the speaker will disconnect from the Master Speaker.

To reconnect just select the Grey box and the speaker will reconnect with the Master Speaker.

 


Press the 'Master Speaker' Button. Select the Blue box displayed for the Master Speaker that is selected.

Confirm you want to disconnect the Master Speaker.

The box will turn from Blue to Grey and the speaker will disconnect from all the Slave Speaker(s).

To reconnect refer back to the instructions on Page 29.



## Using the OontZ app for Speaker selection

The OontZ app allows you to control different supported OontZ speakers.

The OontZ app currently supports the following OontZ speaker models:

 
- OontZ Angle 3 ULTRA 4th Generation
- OontZ Angle 3 Pro
- OontZ Angle 3 Shower with Alexa (OontZ app support only for Alexa function)
- OontZ Bluetooth Adapter 2nd Generation

For the latest list of supported OontZ speakers please visit [TheOontZ.com/OontZapp](https://TheOontZ.com/OontZapp)

To utilize the OontZ app with a different supported OontZ speaker.

- Select the Menu ☰ in the upper left hand corner of the OontZ app and select 'Speakers' from the menu
- Select the desired speaker from the available list of OontZ speakers
  - Speaker icon is Blue - the OontZ app is already enabled with this speaker
  - Speaker icon is Grey - press and the OontZ app will be enabled with this speaker.

**Note:** The OontZ app will only control one speaker at a time.



Menu screen



Speaker screen

## Using the OontZ app for Support

Select the Menu ☰ in the upper left hand corner of the app and select 'Support' from the menu to access the Support screen.



Press 'User Guide' to display the latest version of the online user guide and FAQ for the OontZ Angle 3 ULTRA.

Press 'Update Speaker' to check the version of the current firmware version on the OontZ Angle 3 ULTRA and whether there is a new version available.

Press 'Contact Us' to display the customer support form. Fill in the information in the displayed form to email to our OontZ support team.



The firmware version of the OontZ Angle 3 ULTRA is shown under 'Current Firmware Version'.

If there is a new version of firmware for the OontZ Angle 3 ULTRA it will be displayed under 'New Firmware Version' along with the version number of the update.

To update the OontZ Angle 3 ULTRA to the 'New Firmware Version' press 'Update Speaker' and follow the instructions in the OontZ app.

**Note:** The update may take up to 30 minutes. Make sure the OontZ Angle 3 ULTRA is plugged into power and the iPhone or Smartphone is not interrupted by a phone call during the update of the OontZ Angle 3 ULTRA.

## Customer Support

If you have a question about your OontZ Angle 3 ULTRA or experience an issue with the speaker, our Customer Support Team wants to assist you.


For online troubleshooting tips please visit:  
**TheOontZ.com/troubleshooting**  
and select the OontZ Angle 3 ULTRA (4th Generation)

For latest version of this manual please visit:  
**TheOontZ.com/pages/manuals**  
and select the OontZ Angle 3 ULTRA (4th Generation)

Contact us at:  
**TheOontZ.com/support**  
and fill in our customer support form

## Reset Function

**Step 1:** Remove the Type C USB Charging Cable and 3.5mm Audio Cable, if connected.

**Step 2:** Press and hold down the **Power button**  for approximately 15 seconds until the white and green lights come on together and then turn off together, then release the Power button.

**Step 3:** The speaker has now been reset and you can turn it on.

## Safety and Precautions

- 1. When the OontZ Angle 3 ULTRA speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**
2. Read and follow all instructions – All operating and use instructions should be followed.
3. Protect the USB Type C Charging Cable from being pinched, particularly at the connectors.
4. Unplug the USB Type C Charging Cable during lightning storms or when unused for long periods of time.
5. Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
7. Do not make alterations to this speaker.
8. The battery in the speaker is not replaceable. Do not attempt to change it.
9. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
10. Do not place near naked flame sources, such as lighted candles, on or near the speaker.
11. Do not expose this speaker to excessive heat  
(e.g. from storage in direct sunlight, fire or the like)
12. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

## Safety and Precautions (continued)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Apple, iPhone, iPad, iPod, Mac and Siri are registered trademarks of Apple Inc.

Amazon, Amazon Echo Input, Amazon Echo and Amazon Echo Dot are registered trademarks of Amazon.com, Inc.

Windows is a registered trademark of Microsoft Corporation

Bluetooth is a registered trademark of Bluetooth SIG, Inc

UL is a registered trademark of UL.

## OontZ Bluetooth Adapter (2nd Generation)

*Sold separately*

- Allows you to play wirelessly over Bluetooth from your TV and Devices that do not have built-in Bluetooth.
- When playing with two OontZ Angle 3 ULTRA speakers, using the OontZ Bluetooth Adapter with it's low latency technology removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video.
- Pairs with a single button to one or two OontZ Angle 3 ULTRA speakers



## OontZ True Wireless BudZ

*Sold separately*

- Amazing Sound and Rich Bass
- Ultra Small, Comfortable and Secure Fit
- Sweatproof, Weaterproof, Splashproof
- Quick and Easy Connection
- Noise Cancellation of Background Noise
- Playtime up to 3 Hours with 9 Extra Hours from Small Compact Charging Case



Available at [TheOontZ.com](https://TheOontZ.com)