

_____ _____

NCREDIBLE BLUETOOTH[®] EARBUDS

3301757, 3301758, 3301759

User's Guide




We hope you enjoy your NCREDIBLE Bluetooth Earbuds. Designed with an adjustable cable, this water-resistant sporty earbuds allows you to listen music wirelessly during workouts. Please read this user's guide before using your earbuds.

Package Contents

- Earbuds
- 3 pairs of tips (S/M/L)
 USB Charging Cable

Carry Case

• 3 pairs of ear hooks (S/M/L) • User's Guide

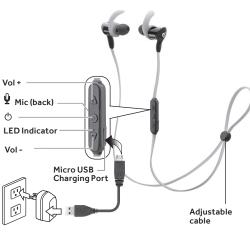

Charge

When the earbuds indicator flashes red or has no response charge your earbuds. Normal charging takes about 2 hours.

- 1. The LED indicator lights red when charging and turns blue when fully charged.
- 2. Unplug the charging cable when the earbuds is fully charged.

Pairing

- 1. Press and hold the 🖞 button for 4 seconds to enter pairing mode. The LED indicator flashes red and blue as your earbuds searches for Bluetooth-enabled devices.
- 2. On your device, turn on the Bluetooth function, and set it to search for Bluetooth devices.
- 3. Select and connect to Ncredible Earbuds from the list of found devices. When paired, the LED Indicator flashes blue every 4 seconds and the earbuds enters standby mode

Note: If your Bluetooth-enabled device is out of connection range and disconnect, move back within 5 minutes to reconnect automatically.

Changing Bluetooth Devices


Your earbuds automatically reconnects to the most recently paired device when it is powered on.

To pair a new device, you must disconnect the current device's Bluetooth functions first. See your Bluetooth device's instructions for details.

Using the Earbuds

То	Button	Press
Turn earbuds on/off	Q	hold for 2 seconds
Adjust volume	Vol +/-	≥1
Calls		
Answer / end a call	Φ	x1, or use phone keys
Reject a call		hold for 1 seconds
Last number redial		x2 quickly
Toggle a call between your earbuds and your connected phone		hold for 1 seconds
Answer a second call during a call		x2 quickly
Answer a second call and end the current call		×1
Mute or unmute a call	Vol +	hold for 2 seconds
Music		
Play/Pause	Q	×1
Previous Track	Vol -	hold for 2 seconds
Next Track	Vol +]

 Note: The button functions may vary depending on your device and phone's protocol and devices.



3301756 7 8 9 UG EN.indd All Pages

Listening Safely

Do not wear earbuds while driving a vehicle or cycling. This can create a traffic hazard and could be illegal in some areas. To protect your hearing:

- Do not listen at high volume. Extended high-volume listening can lead to permanent hearing loss
- Set the volume to the lowest setting, then adjust to a comfortable level.
- Avoid increasing the volume. Your ears adapt to volume, so a level that does not cause discomfort could still damage your hearing.

Specifications

ttery charge time	approx. 2 hours
peration time	
andby time	
ttery charging voltage	
arging current	
letooth protocol	
perating distance	
equency response	20Hz - 20KHz
nsitivity	
pedance	
ble length (max. extended)	
<	level 3

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Lithium Battery Safety

 Do not burn or bury batteries. Do not puncture or crush. Do not disassemble. Recycle lithium batteries. Do not dispose of in the trash.

- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention
- The built-in battery may discharge completely after a long period without use. Recharge.
- Follow the instructions for charging. Do not charge longer than recommended. Unplug the USB cable when the battery is charged. The headphones should never be left unattended while charging.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help. If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Go to <u>www.radioshack.com/help</u> for details.

RadioShack Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102

The Bluetooth[®] word mark and logos are owned by Bluetooth SIG. Inc. and any use of such marks by General Wireless Operations Inc. is under license.

Complies with the European Union's **RoHS** "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2016 General Wireless Operations Inc. All rights reserved. The NCREDIBLE logo is a trademark of Nick Cannon Inc. used under licence by General Wireless Operations Inc. dba RadioShack. radioshack.com

10A16 3301757 3301758 3301759 Printed in China