



# NCRECIBLE BLUETOOTH® HEADPHONES



3301704  
3301705  
User's Guide

We hope you enjoy your headphones from NCRECIBLE. Foldable, comfortable and convenient design with controls on the earcup for music and calls on the go. Please read this user's guide before using your headphones.

## Package Contents

- Headphones
- User's Guide
- Micro USB charging cable
- Carry case
- 6.3mm stereo adapter
- 3.5mm audio cable

## Compatibility

The earcup controls only work in Bluetooth mode. Functions may vary depending on your device's compatibility:


- **iOS** and **Android** smartphones with **Bluetooth**
- Laptops, tablets and MP3 players with **Bluetooth**

## Listening Safely

Do not wear headphones while driving a vehicle or cycling. This can create a traffic hazard and could be illegal in some areas. To protect your hearing:

- Do not listen at high volume. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting, then adjust to a comfortable level.
- Avoid increasing the volume. Your ears adapt to volume, so a level that does not cause discomfort could still damage your hearing.

## Controls and Connections

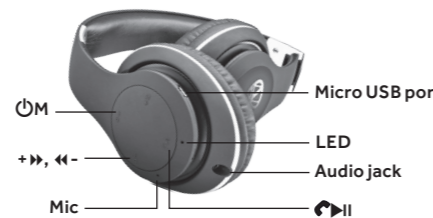

To...	Button	Press
Turn on headphones	Power	...and hold 5 sec
Turn off headphones		...and hold 3 sec
Start Bluetooth pairing		...and hold 1 sec
Clear Bluetooth pairing		x2 quickly
Play/Pause		Play/Pause
Volume up / down	Volume	≥ 1
Go to next / previous track	Next/Prev	...and hold
Answer / end call	Call	x1
Reject an incoming call		x2 quickly
Last-number redial		x2 quickly

## Charge

1. Connect the USB charging cable to the headphones and a USB source.
2. LED lights red during charging, and turns off when charged.



## Pair

1. Press and hold Power for 5 seconds to turn on. LED flashes blue quickly.
2. Press and hold Power for 1 second to start pairing. LED rapidly flashes blue and red.
3. On your device, turn on the Bluetooth function, and set it to search for Bluetooth devices.
4. Select **Ncredible One** from the list of found devices.
5. When paired, the LED flashes blue slowly.

**Note:** If the headphones are not connected to a device within 3 minutes, they automatically turn off.

## Clear Bluetooth Pairing

 
Your headphones automatically reconnects to the most recently paired device when switched on.

If you want to change to other Bluetooth devices, or in case of problems with pairing, do the following:

1. Switch on the headphones, then press Power twice quickly.
2. The headphones beeps to confirm disconnection. LED turns from flashing blue slowly to rapidly flashing red and blue.
3. Press and hold Power to turn off. When you next switch on, the headphones no longer pair automatically.

## Wired Mode

- Use the 3.5mm audio cable. Make sure the headphones are switched off to save power. A handy option when your headphone battery power is depleted.
- The stereo adapter can be used to connect to an audio source.



## Lithium Battery Safety

- Do not burn or bury batteries. Do not puncture or crush. Do not disassemble. Recycle lithium batteries. Do not dispose of in the trash.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.
- The built-in battery may discharge completely after a long period without use. Recharge.
- Follow the instructions for charging. Do not charge longer than recommended. Unplug the USB cable when the battery is charged. The headphones should never be left unattended while charging.

## Specifications

Charging time.....approx. 2 hrs  
 Operation time..... up to 15 hrs play, 100 hrs standby  
 Bluetooth connection range..... 30 ft. (9.14m)  
 Bluetooth Protocol..... V4.0  
 Frequency Response ..... 20Hz – 20KHz (Speakers)  
 ..... 100Hz - 10KHz (Mic)  
 Impedance ..... 32 Ω ± 15% (Speakers)  
 ..... 2.2K Ohms (Mic)  
 Sensitivity..... 111±5dB (Speakers)  
 ..... -42±4dB/4.5V 2.2KΩ, 1KHz (Mic)  
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

General Wireless Operations Inc., doing business as RadioShack (hereafter "RadioShack") warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date

of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack-authorized service facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same product, or (b) replace the product with a comparable product (as determined by RadioShack). All replaced products become the property of RadioShack. **RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.**

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY

DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Contact General Wireless Operations Inc. at: RadioShack Customer Relations 300 RadioShack Circle Fort Worth, TX 76102 12/15

[www.radioshack.com](http://www.radioshack.com)

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and are used under license.

**RoHS** "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

© 2016 General Wireless Operations Inc. All rights reserved. The NCRECIBLE logo is a trademark of Nick Cannon Inc. used under licence by General Wireless Operations Inc. dba RadioShack. Printed in China 01A16 3301704 3301705