



# NCRECIBLE KID BLUETOOTH® HEADPHONES

For age 6+



3301747  
3301748  
3301749

User's Guide

We hope you enjoy your NCRECIBLE Kid Bluetooth Headphones. The headphones, designed for kids, can automatically cap maximum volume to safe sound levels (75 or 85 decibel). Foldable, comfortable and convenient design with controls on the earcup for music and calls on the go. Please read this user's guide before using our headphones.

## Package Contents

- Headphones
- Micro USB charging cable
- 3.5mm audio cable
- User's Guide

## Compatibility

The earcup controls only work in Bluetooth mode. Functions may vary depending on your device's compatibility:


- **iOS** and **Android** smartphones with **Bluetooth**
- Laptops, tablets and MP3 players with **Bluetooth**

## Listening Safely

Do not wear headphones while driving a vehicle or cycling. This can create a traffic hazard and could be illegal in some areas. To protect your hearing:

- Do not listen at high volume. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting, then adjust to a comfortable level.
- Avoid increasing the volume. Your ears adapt to volume, so a level that does not cause discomfort could still damage your hearing.

## Controls and Connections

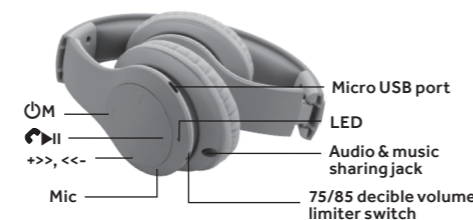

To...	Button	Press
Turn on/ off headphones	⏻	...and hold 4 sec
Start Bluetooth pairing		When headphones turned off, press and hold 6 sec
Play/Pause	⏮	×1
Volume up / down	⏮ / ⏭	≥ 1
Go to next / previous track	⏭ / ⏮	...and hold
Answer / end call	⏮	×1
Reject an incoming call		×2 quickly
Last-number redial		

**Note:** Music playback is paused during call functions and resumes when the call is ended.

## Charge

1. Connect the USB charging cable to the headphones and a USB source.
2. LED lights red during charging, and turns off when charged.



## Pairing

1. With the headphones turned off, press and hold ⏻ until the LED flashes blue and red rapidly.
2. On your device, turn on the Bluetooth function, and set it to search for Bluetooth devices.
3. Select **Ncredible Kid** from the list of found devices.
4. When paired, the LED flashes blue slowly.

### Notes:

- During pairing, if the headphones are not connected to a device within 3 minutes, they automatically turn off.
- When successfully paired, your headphones automatically reconnects to the most recently paired device when switched on.

## Multipoint Connection

Your headphones are multipoint-enabled. This allows you to easily access and play music or audio from either one of two connected Bluetooth devices.

1. To use multipoint, make sure you pair each of your devices separately. See the **Pairing** chapter.
2. Keep your first paired device switched on when you pair your second device.
3. After your second device is successfully paired and connected, the Bluetooth status on your first device will automatically disconnect. To enjoy multipoint, go to the Bluetooth menu on your first device to reactivate Bluetooth connection status. Both your devices are now connected.

## Volume Limiter

Slide the volume limiter switch to 75 or 85 dB to limit the output volume at the desired sound level. Volume is reduced when 75dB is selected.



## Share your Music

In Bluetooth mode, plug in another set of headphones into the audio & music sharing jack to share music.



**Note:** Volume Limiter is not available for the additional headphones plugged into the music sharing jack.

## Wired Mode

Use the 3.5mm audio cable to connect the headphones to your audio source.

Make sure the headphones are switched off to save power. A handy option when your headphone battery power is depleted.



## Troubleshooting Pairing

In case of problems pairing, you may need to clear pairing before you attempt to pair again.

1. Switch on the headphones, then press and hold ⏭, ⏮ for 5 seconds. The LED rapidly flashes blue and red twice at the same time, then flashes blue and red alternately.
2. Press and hold ⏻ to turn off. When you next switch on, the headphones no longer pair automatically.

**Note:** To delete **Ncredible Kid** completely from your device memory, you need to go to your device's Bluetooth setting menu to find **Ncredible Kid**, then select to remove it.

## Specifications

Charging time	.....approx. 1.5 hrs
Operation time	.....up to 15 hrs play, 100 hrs standby
Bluetooth connection range	.....33 ft (10m)
Bluetooth Protocol	.....V4.0
Frequency Response	.....100Hz - 10KHz (Speakers)
	.....100Hz - 10KHz (Mic)

Impedance	.....32 Ω ± 15% (Speakers)
	.....2.2K Ohms (Mic)
Sensitivity	.....85±5dB/1KHZ, 178mV (Speakers)
	.....75±5dB/1KHZ, 679mV (Speakers)
	.....-42±4dB/4.5V 2.2KΩ, 1KHz (Mic)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## Lithium Battery Safety

- Do not burn or bury batteries. Do not puncture or crush. Do not disassemble. Recycle lithium batteries. Do not dispose of in the trash.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.
- The built-in battery may discharge completely after a long period without use. Recharge.
- Follow the instructions for charging. Do not charge longer than recommended. Unplug the USB cable when the battery is charged. The headphones should never be left unattended while charging.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

Go to [www.radioshack.com/help](http://www.radioshack.com/help) for details.

RadioShack Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76102

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and are used under license.

**RoHS** Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2016 General Wireless Operations Inc. All rights reserved. The NCRECIBLE logo is a trademark of Nick Cannon Inc. used under licence by General Wireless Operations Inc. dba RadioShack. [radioshack.com](http://radioshack.com)

10A16  
3301747  
3301748  
3301749  
Printed in China