 


TWS09 User manual

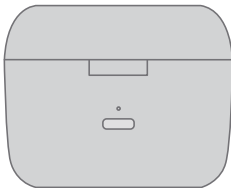

Thank you very much for choosing the TWS09 Bluetooth earphones. To have a great experience, please read this manual carefully before use.

Product Specifications

Load Impedance 32Ω
Operating Voltage : Earbuds 3.7V Charging Box:3.7V
Battery Capacity : Earbuds 45mAh Charging Box:400mAh
Frequency Range 2.402G-2.480G
Charging Time: 2 Hours
Battery Life : 1000Times
Maximum Noise Cancelling Level : >-26dB
Waterproof Grade:IPX5
Sensitivity : -94dBm
Duration : 6h

Precautions

 
The device is powered by a built-in rechargeable lithium battery.Charge the device for at least 8 hours before first-time use.

- Rechargeable batteries can only be recharged under adult supervision.
- Only the attached Type-C cable can be used to charge the Wireless charger is also applicable. Incorrect charging may cause damage to the battery and the device.
- Do not attempt to disassemble rechargeable batteries or battery packs.
- Keep the battery out of reach of children. Swallowing may cause suffocation and need to be sent to hospital immediately.
- Do not dispose of batteries in the fire as it may explode.Batteries may also explode if damaged .Please handle and dispose according to local laws & regulations.

1


Enter Pairing Mode

Open of the top cover of the charging box would enter the automatic pairing mode with both indicator lights flashing.The pairing takes about 10s and the sound"connected"indicates its success.

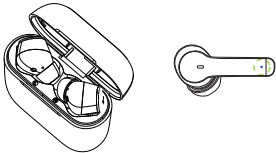

Start Pairing

 
Turn on "Bluetooth" function on the phone, search for "TWS09",click to connect and wait for the sound"connected" indicating it success.Both indicator lights would turn off first and then the blue indicator light would turn to slow flashing. When pairing with other device , please disconnect or unpair the Earbuds in the"Bluetooth" control panel so that the Earbuds would enter standby mode.The Earbuds would automatically shut down for power saving if it is not connected to the Bluetooth device for 5 minutes.

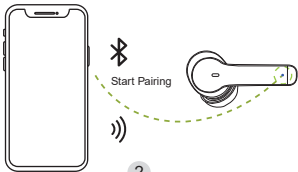

2

Charging the Charging Box

 
Use attached USB Type-C Cable to charge the Charging Box. It takes about 2 hours to fully charge the Earbuds and the Charging Box.



Charging Box Indicator lights
Earbuds: Charging (Blue indicator light on)
 Fully-charged (Blue indicator light off)
Charging Box Charging (Red indicator light on)
 Fully-charged (Green indicator light on)
 Low Battery level (Blue indicator light flashing)


Mobile Charging

 Put left and right Earbuds into the corresponding position of the charging Box.The magnet parts inside would adjust the Earbuds to a fit condition. It takes about 2 hours to fully charge both Earbuds.

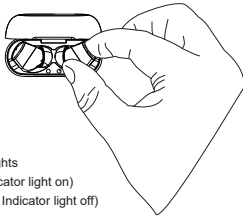

Earbuds Indicator lights
Charging (Blue Indicator light on)
Fully-charged (Blue Indicator light off)

 3

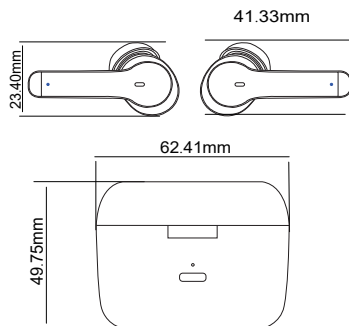


4

Operation of Touch Panel


L Left ear

 - Tap: Pause/ Play/ Answer call/ Hang up call
- Double Click: APT ON → ANC ON → ANC OFF
- Triple Click: Volume-
- Incoming call: Press to answer/ Hold to hang up
- Press 10S to turn off the Earbuds, then press 12S to reboot and restore the Earbuds to factory settings.
- Press 2S: Switch to last song
- Press 10S: Turn off the Earbuds
- Gaming mode: When connected to the phone, press 4 times to enter the gaming mode and one tap to exit.



R Right ear

 - Tap: Pause/ Play/ Answer call/ Hang up call
- Double Click: APT ON → ANC ON → ANC OFF
- Triple Click: Volume+
- Incoming call: Press to answer/ Hold to hang up
- Press 10S to turn off the Earbuds, then press 12S to reboot and restore the Earbuds to factory settings.
- Press 2S: Switch to next song
- Press 10S: Turn off the Earbuds
- Gaming mode: When connected to the phone, press 4 times to activate Voice Assistant and one tap to exit.



5

Follow below steps to reset the device during malfunction.

If only one Earbud is producing sound, please put both Earbuds back to the Charging Box, Close the top cover, then open the top cover so that the Earbuds may enter pairing mode again.

Follow below steps to reset the device, If only one Earbud is functioning

1. Take the Earbuds out of the Charging Box, Press and hold both Earbuds simultaneously for 10 seconds to power off.

2. Press and hold both Earbuds simultaneously for 12 seconds to reboot and restore to factory settings.

Follow the below steps to enter automatic pairing mode

- a. Press and hold both Earbuds simultaneously for 5 seconds to power on. The Earbuds would enter automatic pairing mode with both indicator lights flashing.

- b. Put both Earbuds back to the Charging Box, Close the top cover, then open the top cover. The Earbuds would enter automatic pairing mode with both indicator lights flashing.

Operation of Touch Panel

1. To ensure the normal use of the battery, if the Earbuds are not used for a long time, please put the Earbuds into the Charging Box to avoid loss of power and influence the playing time when the Earbuds cannot be automatically shut down in the ANC and APT mode.

2. The risk of hearing loss can be reduced by following the below safety guide lines when using the device:

When wearing the Earbuds, adjust the volume to the minimum, and then slowly adjust the volume to a comfortable level. Keep the volume as low as possible. When the volume needs to be increased, please adjust the volume slowly. Stop using immediately if you feel unwell in the ear or if you have tinnitus. Listening at a high volume for a long period of time will make your ears used to such volume, causing permanent damage to your hearing without any apparent discomfort.

3. If you are wearing a pacemaker or other electronic medical equipment, Please seek medical advice before using this device.

4. The packaging contains small parts that can endanger children. Please keep them out of the reach of children. Swallowing plastic bags can cause suffocation.

5. Do not attempt to disassemble the device or insert any objects device on your own. Otherwise it may cause a short circuit, resulting in a fire or electronic shock. Abnormal use would shorten battery life. Fully-charged battery would gradually run out when not in use. Do not expose the device to direct sunlight, dust or heat source nearby.

6. Customers shall not replace or repair any component. Only authorized dealers or repair services center can open the finished devices. If any part of the device needs to be replaced for any reason (including normal wear & tear, damage or cracking), please contact the vendor.

7. Keep the device from rain, moisture or close contact with other liquids.

6

8. If the device is overheated, dropped & damaged or fell into liquids, please stop using.

9. Wearing Earbuds while driving may be restricted by local laws regulations. Please consult with local authorities. Please precautions when using the Earbuds under situations requiring attention.

10. Maintenance of built-in battery :

The device is powered by a rechargeable battery. New Battery needs to be recharged and discharged two or three times before its function is released.

Fully-charged battery should be disconnected from the charger to avoid loss of capacity during over charging

11. Battery warning:

Improper use of batteries may cause fire or chemical burns.

12. Refer to the user manual for the description of the charging indicator light status.

13. When unplugging the charging cable or any enhanced accessories, please hold the plug and pull it out instead of plugging the charging wire directly. Do not use a damaged charger.

External Device

Used recommended adapter to charge.

*Dispose of batteries according to local laws & regulations.

*Please recycle if possible.

*Do not dispose of the batteries as household garbage or into the fire to avoid explosion.

* Unless otherwise specified in this manual or quick start guide, users are not allowed to remove or replace the battery on their own. Such operations may damage the device.

7

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment