 
 
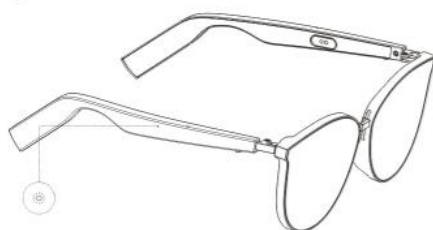 


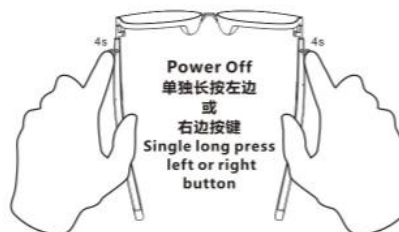

**(ZH-CN)** 开机：请长按左边和右边眼镜腿按键各3秒；眼镜停止充电时自动开机 (提示音:power on)。  
关机：请长按左边或右边眼镜腿按键4秒，眼镜蓝牙关机(提示音:power off)；眼镜充电时自动关机。

**(EN)** **Power on:** please long press the button on the left and right leg for 3 seconds. Start automatically when stop charging (warning tone : power on)  
**Power off:** please long press the button on the left or right leg for 4 seconds when turn off the Bluetooth (warning tone : power off) ,Auto power off when charging.

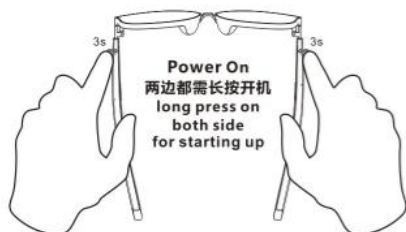 


红/蓝LED灯交替快闪等待蓝牙配对  
During pairing, red and blue light flash alternatively.

配对成功蓝色LED灯每隔5秒呼吸一次  
Bluetooth is paired, blue LED light flash once per 5 seconds.

**(ZH-CN)** 1. 眼镜开机, 打开手机蓝牙, 搜索设备名称 **Smart eyewear** 并连接。  
2. 眼镜与手机配对成功, 提示音 : connected。  
3. 眼镜与手机断开连接, 提示音 : Disconnected.

**(EN)** 1. Turn on glasses, open the phone's Bluetooth, and search the name of Smart eyewear, the device is connected.  
2. After successfully connecting, warning tone:connected.  
3. When the device disconnect, warning tone:disconnected.

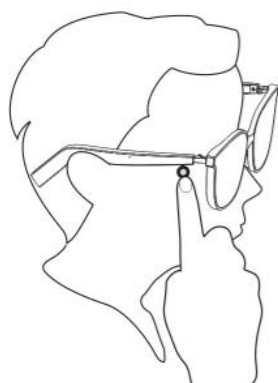


**(ZH-CN)** 1. 短按左/右镜腿接听/挂断电话；  
2. 长按左/右镜腿按键1秒拒绝来电；  
3. 通话声音从眼镜切换到听筒: 长按左/右镜腿按键1秒；  
4. 通话中调节音量: 双击左腿音量减小, 双击右腿音量增大(三方通话不支持调节音量)；  
5.在通话状态时, 接通第二来电/切换三方通话, 短按左/右镜腿按键1次；  
6.在通话状态时, 挂断当前通话, 接听第二来电, 长按左/右镜腿按1秒；  
7.在通话状态时, 保留当前通话, 拒绝/挂断后台通话, 双击左/右镜腿按键。

**(EN)** 1. Short press button on the left or right leg for answering or hanging up calls.  
2. Long press button on the left or right leg for 1 second for refusing calls.  
3. The conversation from glasses to receiver, long press button on the left or right leg for 1 second.  
4. Adjust the volume during a call, double click button on the left leg to decrease speaker volume, double click button on the right leg to increase speaker volume (clicking the button not support adjusting volume during three way call)  
5. When making a call, another call coming in and transfer calls to three way, short press button on the left or right leg for 1 time.  
6. When making a call, hang up a call to answer another call, long press button on the left or right leg for 1 second.  
7. When making a call, keep one current call and reject another call, double click button on the left or right leg.




- (ZH-CN)**
1. 短按左/右镜腿按键播放/暂停音乐。
  2. 双击左镜腿按键音量减小。
  3. 三击左镜腿按键播放上一曲。
  4. 双击右镜腿按键音量增大。
  5. 三击右镜腿按键播放下一曲。

 - (EN)**
1. Short press button on the left or right leg to play or pause music.
  2. Double click button on the left leg to decrease the volume.
  3. Click 3 times button on the left leg to play the last music.
  4. Double click button on the right leg to increase the volume.
  5. Click 3 times button on the right leg to play the next music.

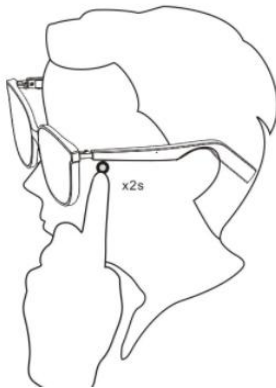


- (ZH-CN)** 待机或听音乐时，  
长按左/右镜腿按键2秒激活/关闭语音助手。

 - (EN)** Standby or listening music, long press button on the left or right leg for 2 seconds to activate or deactivate the voice assistant.

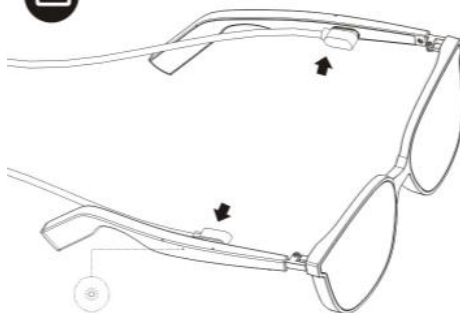

- (ZH-CN)**
1. 眼镜无操作,手机蓝牙无连接的情况下5分钟自动关机；
  2. 充电中: 红色LED灯常亮；
  3. 充满电: 灯灭。

- (EN)**
1. When there is no activity for 5 minutes, the glasses turning itself off.
  2. During charging, the red LED long bright.
  3. When charging is completed, the light display turn off.

 充电中:红色LED灯常亮  
During charging, the red LED long bright.

 充满电:灯灭  
When charging is completed, the light display turn off.

6

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment