


## Label Location Information



EUT

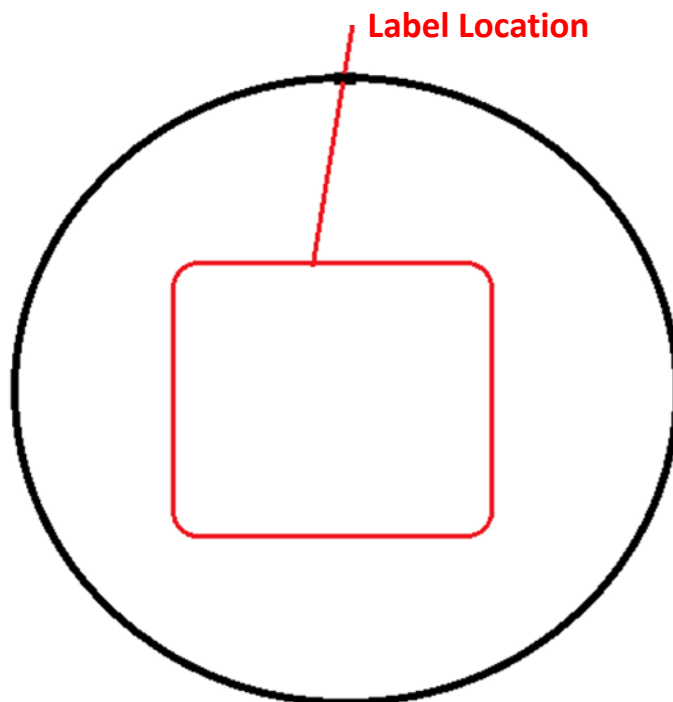

The label is indicated in exterior of the device and it is always visible without using any tool.