

## Features and Specifications

• Media	Bluetooth, Auxiliary, CD, CD-R, CD-RW, and MP3 and WMA CD formats
• Controls	Power on/off, volume +/-, play/pause, stop, skip forward, skip back, repeat, program, shuffle, play introductions
• Power requirements	120 volts AC, 60 Hz or 8 “AA” batteries
• Dimensions	7 1/2" x 7 1/2" x 2 1/2"
• Weight	1.5 lbs (without batteries)
• Output jacks	Eight 1/4" stereo jacks for headphones
• Power jack	DC6volts

FCC Caution:

- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

**Lakeshore®**

LA620

# All-In-One CD Player

with  **Bluetooth®**

©2016 Lakeshore • (800) 428-4414 • www.lakeshorelearning.com

This sturdy CD player is designed to provide years of trouble-free classroom use! You can listen to almost any audio CD, from commercially recorded CDs to CD-Rs, CD-RWs, and MP3 and WMA CD formats. Plus, the Bluetooth-enabled player is loaded with other features you'll appreciate—from anti-skip technology to a versatile auxiliary jack.

### Inside this manual:

	<i>Page</i>
<b>Features and general information</b> .....	<b>2</b>
<b>Safety instructions</b> .....	<b>3</b>
<b>Location of controls and parts</b> .....	<b>6</b>
<b>Operating instructions</b>	
<b>Power source</b> .....	<b>7</b>
<b>Adjusting the sound</b> .....	<b>7</b>
<b>Using the CD player</b> .....	<b>8</b>
<b>Using your headphones</b> .....	<b>9</b>
<b>Care and maintenance</b> .....	<b>10</b>
<b>Troubleshooting guide</b> .....	<b>11</b>
<b>Features and specifications</b> .....	<b>12</b>
<b>Warranty</b> .....	<b>12</b>

## Warranty

*Your satisfaction is our number one priority. If you are unhappy with this item for any reason, return it to us for a full refund or exchange.*

This CD player is guaranteed to be free from defects for one year. In the event of a defect during this period, please call our customer service department at (800) 428-4414. We will replace the CD player or refund the purchase price.

## Features

- Dual power—runs on 8 “AA” batteries, or plug it into a standard wall outlet.
- Digital display—displays information, such as volume and track number, when power is on.
- Four 4-ohm high-quality speakers are built in.
- Headphone jacks allow up to eight children to listen at the same time.
- Plays CDs, CD-Rs, CD-RWs, and MP3 and WMA CD formats.
- Automatically sample the first 10 seconds of each track to find the one you want.
- Skip to the start of a track, or fast-forward or reverse to any point.
- Play tracks in order or at random.
- Anti-skip technology reduces sound skipping when player is moved while in use.
- Auto-off feature—player turns itself off when not in use.
- Power indicator—light is green when power is on.
- Bluetooth indicator—light is blue when connected.

Features and specifications can be found on page 12 of this guide.

## Before You Begin

1. Read the important care and safety notes on pages 3–5.
2. Review the diagram on page 6 to locate features and controls.
3. Read the operating instructions beginning on page 7.
4. Troubleshooting tips begin on page 11.

## Troubleshooting Guide

If your CD player isn't operating properly, check the troubleshooting guide below. If you cannot resolve the problem, call Lakeshore's customer service department at (800) 428-4414.

### Problem:

Player will not operate.

### Possible causes:

- The power is not on. (The green light will glow when the power is on.)
- The power cord is not plugged in fully.
- The batteries are incorrectly positioned.
- The batteries are not fresh. (The green light will flash when battery power is low.)
- The power is not on. (The green light will glow when the power is on.)
- The CD player is paused. (The track will be flashing on the display.)
- The CD is upside down.
- The cover is not closed.
- The CD is very dirty.
- The CD is loaded incorrectly.
- The CD is very dirty.
- The CD is badly scratched or very dirty.
- The CD player is being shaken or vibrated too much.
- Press *Stop*, then press *Play/Pause* again.
- The volume is too low.
- Your Bluetooth-enabled device is not connected. (The blue light will glow when the device is connected.) Make sure your device is updated to the latest software.
- The player is not turned on.
- Your device is paused or otherwise not playing.

CD will not play.

CD begins to play, then stops.

The sound jumps or skips.

CD starts only after a long wait.

CD spins, but no sound is heard.

Bluetooth function does not work.

## Care and Maintenance

This extra-sturdy CD player is designed to withstand heavy use in a classroom. Follow these guidelines for years of trouble-free operation.



Avoid liquids, which can corrode the circuits and cause malfunctions. If water gets spilled on the CD player, wipe it dry immediately.



Avoid extreme temperatures, which can damage the batteries and cause cracking or warping of the plastic case and other parts.



Avoid dust and dirt, which can cause friction and wear to moving parts.



Avoid dropping the CD player, which can crack the case and damage the moving parts and circuit boards.



Use only fresh batteries, and remove them if the CD player will not be used for an extended period. Old or mismatched batteries may leak and damage the circuits.



Avoid chemicals, solvents, cleansers, and detergents. To clean the CD player, simply wipe the case with a damp cloth.

## WARNING

To prevent fire or shock hazard, do not use the plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. To prevent electrical shock, match wide blade plug to wide slot, fully insert.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and no objects filled with liquids, such as vases, shall be placed on the apparatus.
15. Power sources: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
16. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
17. Servicing: Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Safety check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Do not apply oil or petroleum products or solvents to any part of this player.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. This compact disc player is classified as a CLASS 1 LASER PRODUCT, as stated at the back of the player.

Please read important information displayed on the rating plate located on the bottom enclosure before connecting to AC Mains or any operation.

## FCC NOTES

### Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Radiation Exposure Statement:

The transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

## Playing CD Tracks in Random Order

- You can let the CD player surprise you by playing tracks in random order.
- Press the *Shuffle* button while the CD is playing. (If the CD player is stopped, press the *Shuffle* button and then press *Play/Pause*.) The next song and the songs after that will be selected in random order.
- To cancel random playing, press the *Shuffle* button again.

## Playing CD Track Intros

 
- During regular play, you can sample the first 10 seconds of each track by using the "Intro" function. (Note that any preset program must be cleared first.)
- Press the *Program* button three times while the CD is playing. "Intro" will appear on the display.
- To return to normal play mode, press the *Program* button again so the display is cleared. Press *Stop* to stop playing.

## Using the Bluetooth and Auxiliary Functions


- Press the *Mode* button to switch between the CD, Bluetooth, and Auxiliary functions.
- To pair the player with your Bluetooth-enabled device, select *LA620* on the device's menu. During connection, the Bluetooth indicator light will flash; when connection is complete, the light will be solid blue.
- To change tracks while using your Bluetooth-enabled device, press the skip buttons on the device or on the player.
- To pair the player with an auxiliary device, simply use an auxiliary cable (not included) to plug the device into the *AUX-IN* jack on the front of the player.
- To change tracks while in Auxiliary mode, press the skip buttons on your device.

## Using Your Headphones

You can listen to recordings privately using your own headphones. The eight jacks on the CD player accept 1/4" (6.5 mm) stereo plugs, which are found on many headphones and junction boxes. Simply insert the plug into a jack and listen through the headphones. Use with 1/8" (3.5 mm) mini headphone plugs requires an adaptor.

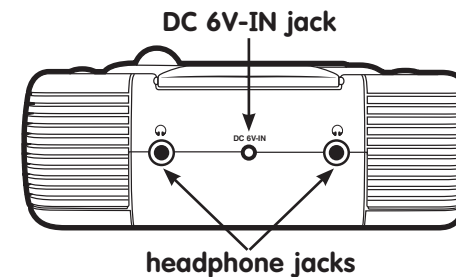

## Using the CD Player

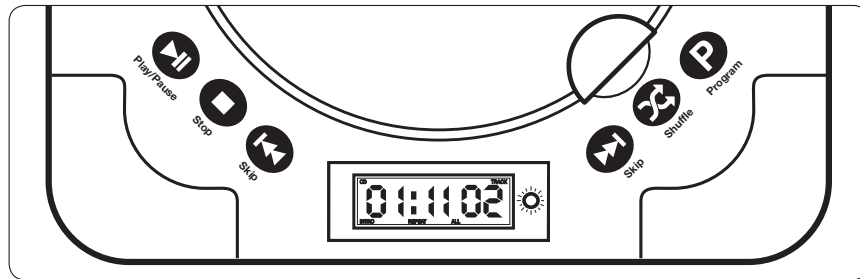 

### Playing CDs, CD-Rs, CD-RWs, and MP3 and WMA CD Formats

- Turn the power on by pressing the *On/Off* button once.
- Lift the cover to insert a CD and close the cover again.
- Press the *Play/Pause* button. The disc will spin while the CD player reads the track information. Then it will begin playing track 1. (**Note:** If the display shows a "NO DISC" message, it means the CD player cannot read the disc or no disc has been inserted. Open the cover and make sure the disc is properly positioned with the label facing up.)
- To pause the play, press the *Play/Pause* button. Press it again to restart.
- To stop playing the disc, press the *Stop* button.
- To play a specific track, press one of the *Skip* buttons repeatedly until the display shows the desired track number. Then press *Play/Pause*. (If the disc is already playing, pressing *Skip* will immediately advance the player to the next track.)
- To repeat a track, press the *Program* button once. The display will show "REPEAT," and the track will play again. To repeat all the tracks on the CD, press the *Program* button again. The display will show "REPEAT ALL," and the CD will start over again when it reaches the end. To cancel, press the *Program* button repeatedly until the display is cleared.
- To fast-forward or backward within the same track, press and hold the corresponding *Skip* button.

 
 
## BATTERY SAFETY INSTRUCTIONS

**CAUTION: TO REDUCE THE RISK OF FIRE OR PERSONAL INJURY OR DAMAGE TO YOUR PLAYER, READ AND FOLLOW THESE INSTRUCTIONS.**

1. Use only the type and size of batteries mentioned in the operating instructions booklet. (Batteries are not included with this player. Please buy the proper batteries.)
2. Do not dispose of the batteries into a fire; the cells may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. When handling, be careful not to short the batteries with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to recharge nonrechargeable batteries. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may cause burns or irritation to eyes or skin.
7. All batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the batteries.
8. When inserting batteries into this product, the proper polarity (+ and -) or direction must be observed. Reverse insertion of some or all of the batteries may result in battery electrolyte leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more), since during this period, the batteries could leak, damaging the product.
10. Discard weak or dead batteries as soon as possible, since they are more likely to leak in the product. Batteries should be replaced (depending on the product) when the display gets dim, the power indicator light flashes, or the sound gets distorted.
11. Do not store this product in high-temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If this product does not operate normally, see the TROUBLESHOOTING section in this instruction manual. If you can't resolve the problem or if the product is damaged, refer to the WARRANTY INFORMATION. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. If liquid leaks from the batteries, carefully wipe this liquid. Do not allow it to touch your skin, and discard the leaking batteries.
14. Do not mix batteries (old and new or carbon and alkaline, etc.).
15. The use of rechargeable batteries is not recommended for this product, because their voltage and life is lower than standard batteries.
16. Installation of batteries should be done by an adult only.

**SAVE THESE INSTRUCTIONS.**

## All-In-One CD Player with Bluetooth

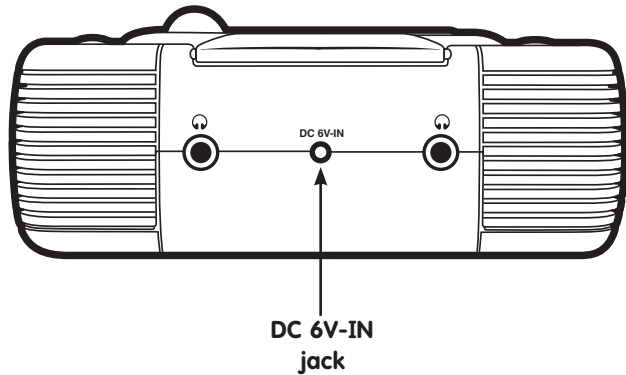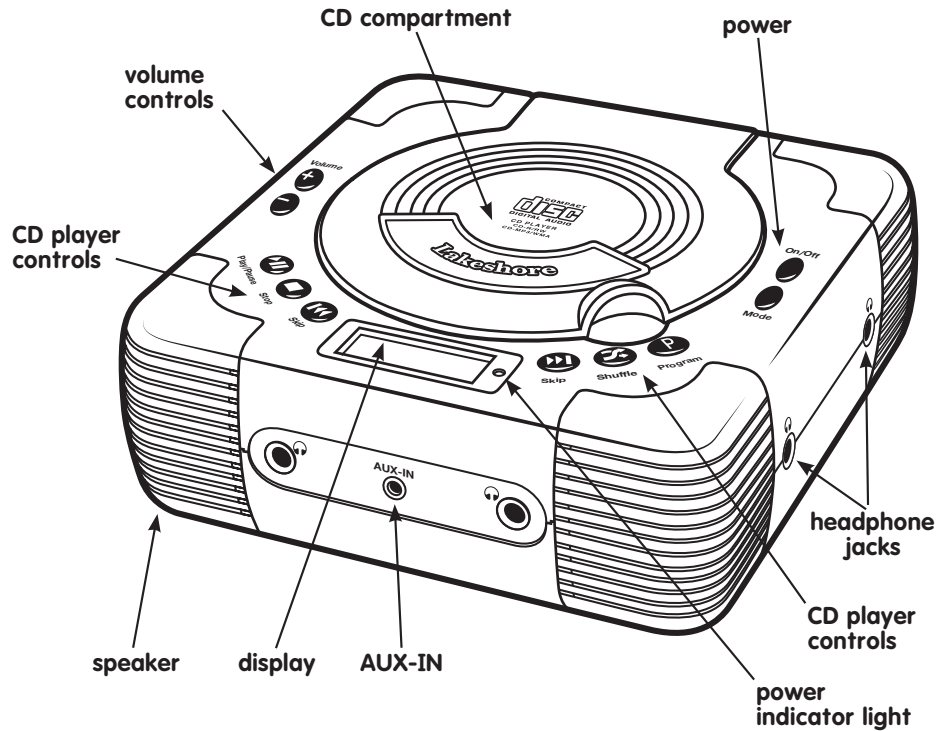


6

## Operating Instructions
 
### Power Source

- Insert the AC adapter plug into the *DC 6V-IN* jack on the back of the player.
- Connect the adapter's plug into a standard wall socket. (This will disconnect any batteries that are in the CD player.)
- Or open the battery compartment at the back and insert 8 new "AA" alkaline batteries, positioning the + and - poles as shown inside the compartment.
- To turn the power on, press the *On/Off* button. The green indicator light will turn on.

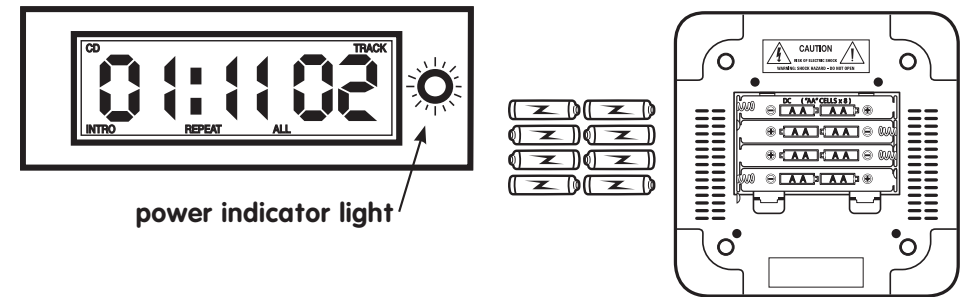


- To turn the power off, press the *On/Off* button, or simply wait for the player to shut itself off automatically after 30 seconds of inactivity. (The player will not shut itself off when it is in "pause" mode.)

**Caution:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Dispose of old batteries properly. If the CD player will not be used for several weeks, remove the batteries to prevent damage.

### Adjusting the Sound

 To adjust the volume, press the *Volume +* or *-* buttons on the top of the CD player.

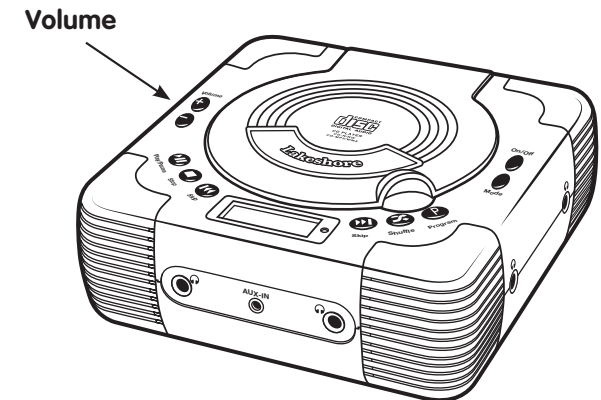

7