



## TDBU Programming Guide




SAFETY	FCC & ISED STATEMENT	BATTERY MANAGEMENT	INSTALLER BEST PRACTICE AND TIPS	PRODUCT RANGE	P1 LOCATIONS
<p><b>WARNING: Important safety instructions to be read before installation and use.</b></p> <p>Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions.</p> <p><b>Save these instructions for future reference.</b></p> <ul style="list-style-type: none"> <li>Do not expose to water, moisture, humid and damp environments or extreme temperatures.</li> <li>Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.</li> <li>Use or modification outside the scope of this instruction manual will void warranty.</li> <li>Installation and programming to be performed by a suitably qualified installer.</li> <li>Follow installation instructions.</li> <li>For use with motorized shading devices.</li> <li>Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.</li> <li>Keep clear when in operation.</li> <li>Replace battery with correctly specified type.</li> </ul> <p><b>WARNING: Do not ingest battery, Chemical Burn Hazard.</b></p> <p>This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.</p> <p>Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.</p> <p>If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.</p> <p><b>Do not dispose of in general waste.</b></p> <p>FCC ID: 2AGGZ003B9ACA3E IC: 21769-003B9ACA3E</p> <p><b>FC</b></p> <p>Operation Temperature Range: -10°C to +50°C Ratings: 3VDC, 15mA</p>	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Caution:</b> Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.</p> <p>L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the equipment and receiver.</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul>	<p>For battery motors: Prevent discharging the battery completely for extended periods, recharge as soon as the battery is discharged</p> <p><b>CHARGING NOTES</b></p> <p>Charge your motor for 9-12 hours, depending on the motor model, as per motor instructions</p> <p><b>DANGER</b> During operation, if the battery is low, the Endcap LED indicator will flash red to prompt the user to charge the system.</p>	<p><b>SLEEP MODE</b></p> <p>If pre-programmed: before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit.</p> <p><b>LOCK REMOTE</b></p> <p>Prevent users accidentally changing the limit; ensure the remote is locked as your last step of programming.</p> <p><b>ZONE / GROUPS</b></p> <p>Ask the customer the day before to think how shades will be zoned on the remote. This may save an extra call out.</p> <p><b>SETTLE FABRIC</b></p> <p>Run the fabric up and down several times to ensure fabric has settled to some extent and re-adjust the limits if needed.</p> <p><b>CHARGE 100%</b></p> <p>For battery motors ensure the motor is fully charged as per instructions.</p> <p><b>INSTALLERS REMOTE</b></p> <p>Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.</p>	<p>This Quick Start Programming Guide is for the Top Down Bottom Up system (controller and remote).</p> <p><b>Top Down Button Up System</b></p> <p><b>RF Controller</b></p> <p><b>LED Status:</b></p> <ul style="list-style-type: none"> <li><b>Blinking Red:</b> Low battery alert</li> <li><b>Blinking Green:</b> Charging in process</li> <li><b>Solid Green:</b> Battery has finished charging</li> </ul> <p><b>USB Cable</b></p> <p><b>USB Power Supply</b></p>	


# INSTALLER

QUICK START PROGRAMMING


## STEP 1 ON REMOTE

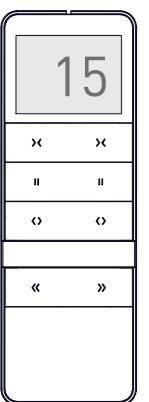

## STEP 2 PAIRING REMOTE WITH MOTOR

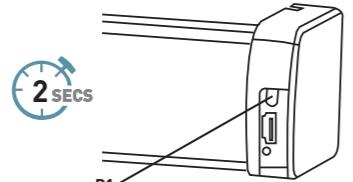

Press the **P1** button on the motor for **2 Seconds** until the motor responds. The motor will respond with **Jog x1**. Within 10 seconds hold the **Left STOP** button on the remote until the motor **Jogs x2**:

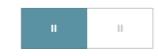

Press **«** (lower channel) or **»** (higher channel) buttons to select the channel that needs to be programmed


## STEP 3 CHECK DIRECTION



Press **»** (Up) or **«** (Down) to check the motor direction. If correct skip to **step 5**.

## STEP 4 CHANGE DIRECTION

If the shade direction needs to be reversed; press and hold the **»** (Up) & **«** (Down) buttons together for **2 seconds** until the motor **Jog x1**.

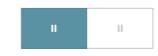

The operation is only valid when there are no limits.

This setup wizard should be used for new installation or factory reset motors only. Individual steps may not work if you haven't followed the wizard from the beginning.


## STEP 5 SET UPPER LIMIT



Move the middle hembar to the desired top limit by pressing the right **»** (Up) button repeatedly.



Then press and hold right **»** (Up) & right **STOP** buttons together for **2 seconds** to save the top limit.

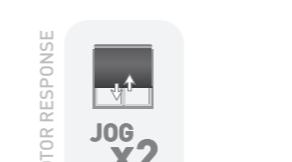

Repeat this process using the left **»** (Up) button to set desired top limit and left **»** (Up) & left **STOP** for **2 seconds** to set the lower hembar top limit.

## STEP 6 SET BOTTOM LIMIT



Move the middle hembar to the desired bottom limit by pressing the right **»** (Down) button repeatedly.




Then press and hold right **»** (Down) & right **STOP** buttons together for **2 seconds** to save the bottom limit.




Repeat this process using the left **»** (Down) button to set desired bottom limit and left **»** (Down) & left **STOP** for **2 seconds** to set the lower hembar top limit.

## STEP 7 SAVE YOUR LIMIT

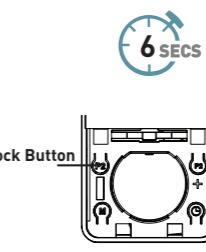


Repeat steps 1-6 for all motors. Once complete **Press the lock button for 5 seconds** to lock the remote, the **L** will briefly appear on the screen.

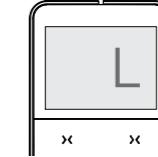

## FACTORY RESET MOTOR RESET PROCEDURE

To reset all settings in the motor press and hold the **P1 Button** for **14 seconds**, you should see **4 independent jogs**.

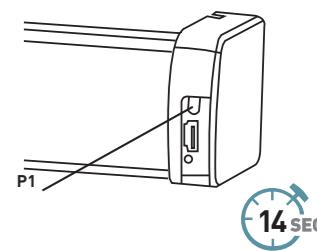

## MOTOR RESPONSE



