

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

IC :

-English:

This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

-French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio Exemptés de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."


MT02-0101-069005
MT02-0101-069006

3. PRODUCT RANGE

The 1WAY Quick-Start Programming Guide is for 1WAY Automate Motors



PI LOCATIONS

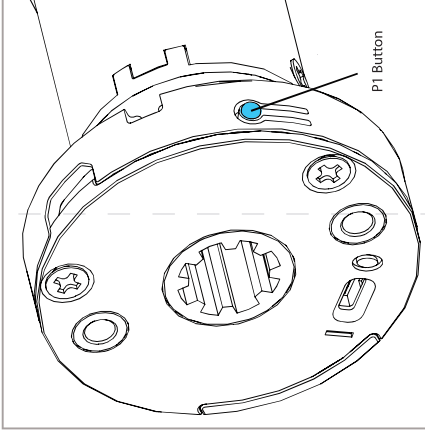

SAFETY

WARNING: Important safety instructions to be read before installation and use.

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions. *Save these instructions for future reference.*

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions
- For use with motorized shading devices.
- Keep away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.

INSTALLER
BEST PRACTICE AND TIPS

SLEEP MODE

If pre-programmed, before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit.

CHARGE 100%

For battery motors ensure the motor is fully charged as per instructions.

INSTALLERS REMOTE

Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.

DISPOSAL AND RECYCLING



Do not dispose of in general waste.



Automate Motor
Programming
Guide

1. ASSEMBLY
Please refer to separate Rollease Acmeda System Assembly Manual for full assembly instructions relevant to the hardware system being used.

2. BATTERY MANAGEMENT

For battery motors:
Prevent discharging the battery completely for extended periods, recharge as soon as the battery is discharged

CHARGING NOTES

Before first use please charge motor for 6 hours, using the recommended AC charger




During operation, if battery is low, the motor will beep 10 times to prompt the user it needs charging.



QUICK START PROGRAMMING
INSTALLER

This setup wizard should be used for new installation or factory reset motors only. Individual steps may not work if you haven't followed the wizard from the beginning.

STEP 1 ON REMOTE

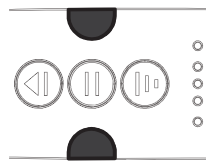

Press the channel buttons to select the channel that needs to be programmed

STEP 2 ON REMOTE



Press the PI button on the motor for 2 Seconds until the motor responds as below



Within 4 seconds hold the stop button on the remote for 3 seconds. The motor will respond.

STEP 3 CHECK DIRECTION



Press up or down to check the motor direction, if correct skip to step 5

STEP 4 CHANGE DIRECTION



If the shade direction needs to be reversed, press and hold the up & down arrow together for 5 seconds until the motor logs



Reversing motor direction using this method is only possible during initial set-up.

STEP 5 SET UPPER LIMIT



Move shade to desired top limit by pressing the up or down button as required. Then press and hold up & stop together for 5 sec to save limit.



Tap the arrow several times or hold down if needed, press arrow to stop

STEP 6 SET BOTTOM LIMIT



Move shade to desired bottom limit by pressing the down or up button as required. Then press and hold down & stop together for 5 sec to save limit.



Tap the arrow several times or hold down if needed, press arrow to stop


Once limits are set, the motor will exit initial setup mode.

FACTORY RESET
MOTOR RESET PROCEDURE

To reset all settings in the motor press and hold the PI Button for 14 seconds, you should see 4 independent jogs followed by 4x Beeps at the end.



* Internal tubular pictured above. Refer to 'PI Locations' for specific devices


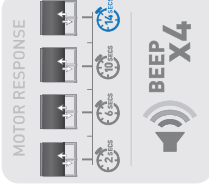




USER GUIDE

QUICK START GUIDE

BUTTON OVERVIEW

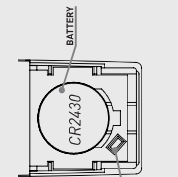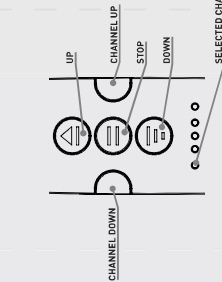

REPLACE BATTERY


Remove cover from remote press gently in and down to disengage cover.



Install battery with positive (+) side facing up


WALL MOUNTING

Use supplied fasteners and anchors to attach the base to wall.

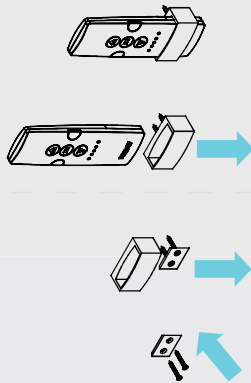

SELECTING A CHANNEL


Note: If no button is pressed, the first channel selection will be used as default.

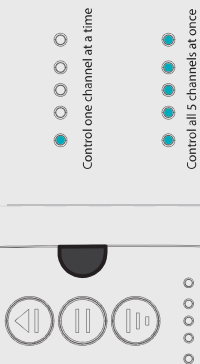

Press the channel buttons to cycle through the channels

CONTROLLING A SHADE

CONTROL SHADE UP OR DOWN

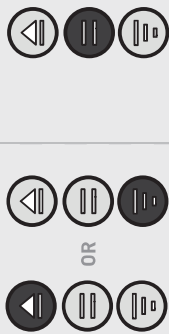

Press the stop button to stop shade at any point

ADJUSTING UPPER LIMIT



Hold STOP & UP



ADJUSTING LOWER LIMIT



Hold STOP & DOWN



TILT MODE

DEFAULT IS ROLLER MODE



Hold UP & DOWN



ROLLER MODE

CHANGE FROM TILT MODE




Press STOP



CONTROLLERS


ADD ADDITIONAL CONTROLLER "B"

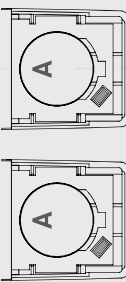

Press P2



REMOVE ADDITIONAL CONTROLLER "B"

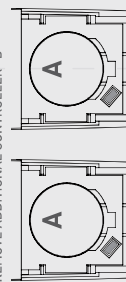


Press P2



FAVORITE POSITION


MOVE SHADE TO FAVORITE POSITION

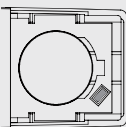

Press STOP



HOLD STOP TO SEND SHADE TO FAVORITE POSITION ONCE SET

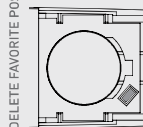

Press STOP



USER GUIDE

ADVANCED PROGRAMMING

