

billboard®

ACTIVE NOISE CANCELATION WIRELESS HEADPHONES



Device Guide



Pairing Your Headphones

Your headphones can be paired with most Bluetooth™ devices including most smartphones, laptops and tablets. In order to pair your headphones with a phone, follow the steps below:

1. Press and hold the ON/OFF button in order to power on your headphones. Once your headphones are powered on, the LED indicator light will alternately blink red and blue. This indicates that your headphones are in pairing mode.
2. Go to the Bluetooth™ Manager of your Bluetooth device.
3. Search Bluetooth™ devices and select "BB-BT-HP" to start connecting.
4. Enter "0000" if your device asks for the PIN code.
5. Once paired, the LED indicator light will stop blinking and steadily shine blue. Note that anytime music is playing, the light will slowly blink blue every few seconds.

Using Your Headphones

1. Press and hold the ON/OFF button in order to power on your headphones. If you have paired your headphones to your Bluetooth™ device previously, they will automatically remain paired each time you power on your headphones.
2. Press and hold the ON/OFF button in order to power off your headphones.

Listening to Music

- Play/ Pause Button : Press to play or pause a track.
- Press and hold the "NEXT TRACK/ VOLUME UP" button to advance to the next song in a playlist.
- Press and hold the "PREVIOUS TRACK/ VOLUME DOWN" button to go back to the previous song in a playlist.
- Quickly tap the "NEXT TRACK/ VOLUME UP" button to increase the volume.
- Quickly tap the "PREVIOUS TRACK/ VOLUME DOWN" button to decrease the volume.

Using the Phone Function

- Last Number Re-dial: Double tap the Answer Call button to re-dial the last number called.
- Answering a Call: Quickly press the Answer Call button to answer an incoming call.
- Reject an Incoming Call: Press and hold the Answer Call button to reject an incoming call.
- Ending a Call: Quickly press the Answer Call button to end a call.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.

Device Safety

- Your Wireless Headphones have an internal rechargeable battery. Improper usage may result in the Headphones becoming hot, igniting or bursting and causing injury if exposed to conditions of abuse.
- Do not disassemble, throw away or damage the Wireless Headphones.
- Store the Wireless Headphones in a dry place, keeping them away from damp corrosive materials and environments such as salt air.
- Keep the Wireless Headphones away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Headphones inside a car during hot weather. Remember a closed car acts as a green house allowing the inside to reach high temperatures.
- The Wireless Headphones are not a toy. Please keep them out of the reach of young children.
- Please do not discard the Wireless Headphones. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.



Charging The Battery

1. Plug the charger cable into the charge port.
2. Connect the charger to a USB power source. The red indicator light will display during charging. If charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the Headphones. The fully charged battery has power for hours of music time.
4. Important! To prevent a complete discharge of your Headphones' battery, charge them up at least every six months.

This device has quick-charge technology. 10 minutes of quick charge time will give you up to 2.5 hours of playback at medium volume. A full charge gives you up to 8 hours of playback.

Battery Information

Your Headphones are powered by a rechargeable battery. The full performance of new batteries is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

- Do not leave fully charged Headphones connected to a charger, overcharging may shorten their lifetime. If left unused, fully charged Headphones batteries will lose their charge over time.
- Never use any charger or cord that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the batteries. Optimal temperature for the batteries is between 59°F and 77°F. A device with a hot or cold batteries may not work temporarily, even when the batteries are fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Technical Support

techsupport@esicellular.com or call (212) 883-8838

©2019 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated Characters, trademarks, and design elements are owned and licensed by Billboard IP Holdings, LLC.

Bluetooth is a registered trademark of Bluetooth SIG

All other trademarks are property of their respective companies.

FCC Information

FCC ID: 2AGKLB2692

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Limited Warranty

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send device with the product to:

ESI Cases and Accessories
44 East 32nd Street, 6th floor, New York, New York 10016

*Enclose proof of purchase and \$11.95 for Shipping and Handling.

USER MANUAL

INTRODUCTION

Thank you for purchasing the Billboard® Wireless Headphones. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.


Package contains:

- a. Wireless Headphones
- b. USB charging cable
- c. User manual
- d. AUX Cable

a.



b.

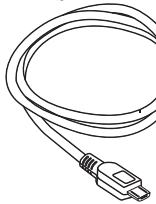

c.

d.

