

Jawku Operation Manual

Normal Operation	2
Cold Start – Unit is powered off	2
Warm Start – Unit is in Sleep mode.....	2

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Normal Operation

Cold Start – Unit is powered off

1. Press pushbutton and quickly release
 - a) LED flashes once followed by a series of short flashes
 - b) User app can see and connect during short flashes
 - c) If no connection in 30 secs, long flash and unit goes to sleep
 - d) During normal operation, unit will go into Sleep mode after 30 secs of inactivity
2. Press pushbutton and hold for 2 seconds
 - a) LED is on solid
 - b) Unit goes into boot loader
 - c) If no action in 30 secs, unit powers off

Warm Start – Unit is in Sleep mode

1. Press pushbutton and quickly release
 - a) LED flashes once followed by a series of short flashes
 - b) User app can see and connect during short flashes
 - c) If no connection in 30 secs, long flash and unit goes to sleep
 - d) During normal operation, unit will go to sleep after 30 secs of inactivity
2. Press pushbutton and hold for 2 seconds
 - a) LED flashes twice
 - b) Unit powers off