

www.neutab.us
Congratulations!
Your NeuTab tablet is here in your hand. This guide is provided to help you get started quickly with your tablet. Please read it carefully and save it for future reference. Interesting information at
Need detailed instructions, up-to-date information, and helpful tips? You can find those and much more at
THANK YOU FROM NEUTAB

Predominant Quality Persistent Perfection
neutab.

FEATURES

WEB BROWSING

Visit your favorite websites

E-MAILING

Set-up your email

VIDEO WATCHING

YouTube application pre-installed

BOOK READING

Download thousands of books with the included Google reader, Google books

GOOGLE PLAY STORE

Games, applications, and more with the installed marketplace

WIRELESS INTERNET

High-speed Wi-Fi 802.11 b/g/n networking

ENTERTAINMENT ALL THE WAY

Portable powerhouse plays popular music, video, and photo formats

EXPAND YOUR TABLET CAPACITY

Micro-SD card slot supports up to 32GB card.

BUILT-IN CAMERA

Designed for video chatting

02

PACKAGE CONTENTS

This package includes your tablet and basic accessories. Please contact us at contact@neutab.us if any items are missing.

- NeuTab Tablet
- USB cable
- Power adapter

Tips: This manual is available for download from the NeuTab website as a PDF file.

Warning: This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

GETTING TO KNOW YOUR TABLET

(The location of different buttons and other components are subject to change, please refer to the icon or text for identification)

- Speaker
- Micro USB port
- Camera
- Power jack
- Power button
Reset/Restart key
- Headphone jack
- Volume +/-
- Micro TF card slot
- HDMI Output (OPTIONAL)

Tips: Please refer to the icon on tablet to find those buttons/ports

03

PACKAGE CONTENTS

Your tablet comes equipped with an easy-to-use touchscreen. Our capacitive multi-touchscreen requires gentle fingertip touch on the screen to activate tablet's functions.

Multiple fingers may be used to perform gestures (e.g. 2-finger picture zoom).

Please note: Your fingertips must not be covered. A stylus may be used. Make sure it is designed for capacitive touchscreens.

Tips: To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touch screen controls.

PROTECTIVE FILM

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

04

PACKAGE CONTENTS

Your NeuTab tablet comes with a built-in rechargeable lithium polymer battery. Before 1st time using the tablet, the battery should be charged fully to extend future battery life.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

Warning: The battery used in this device may present a fire or chemical burn if misused. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Resetting/Restarting the Tablet

Reset the tablet if it should freeze and not respond or otherwise malfunction.

1. Disconnect your tablet if it is connected to a computer.
2. Press and hold the POWER key for about 10 seconds to turn off the tablet, and then press and hold the POWER key until you see NeuTab logo.

05

GETTING STARTED

 
TURNING THE TABLET ON AND OFF

To turn the tablet on:

1. Press and hold the Power key until the LCD screen turns on and you see NeuTab Logo, then wait until you see the Unlock screen.

To turn the tablet off:

1. Press and hold the Power key until the "turn tablet off" message appears.
2. Touch OK to turn off the tablet.

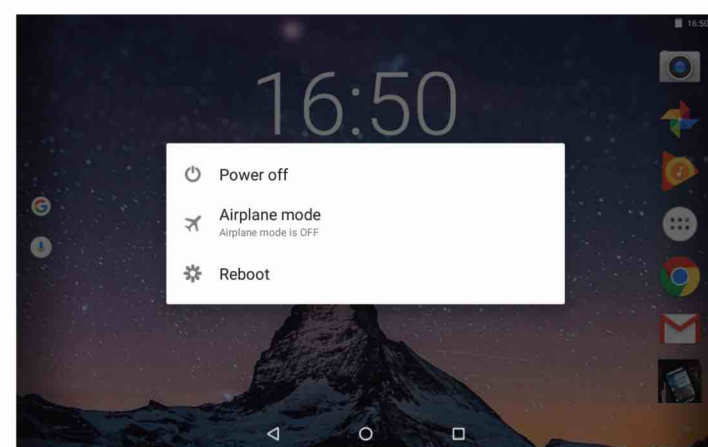

06

TURNING THE SCREEN ON AND OFF (CONTD)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power button once to turn the screen off. Press the Power button again to turn the screen back on.

Tips: To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Sleep option can be found in the Display menu.

UNLOCKING THE SCREEN

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, touch and drag the lock icon to the edge of the circle that appears (or swipe up to unlock).

If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the Security settings menu.

Warning: Please write down your password lock pattern/PIN/password. Misplacing or forgetting this method will lock the user out. Updating device firmware will reset the device to factory default and remove password, but all your data & programs will be lost. NeuTab takes no responsibility of retrieving information and data on locked devices.



07

 
YOUR TABLET HOME SCREEN

The home screen is the starting point for all of the features of your tablet.

- 1 **Google Search**
Touch to search with Google Search Engine.
- 2 **VOICE Search**
Search by voice input.
- 3 **Home icon**
Touch to back to the central Home Screen.
- 4 **Back icon**
Touch to go back to the previous screen.
- 5 **Recent Apps**
Touch to display the list of thumbnails of apps you have worked recently. Touch a thumbnail to open it.
- 6 **Applications Tab**
Open the Application Launcher to view the list of all Applications and Widgets installed on the tablet. Touch the applications tab to open the Launcher.
- 7 **Icons**
Touch an icon to open an application or application folder.
- 8 **Notification bar**
Shows notification icons and time, battery level, plus the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.



08

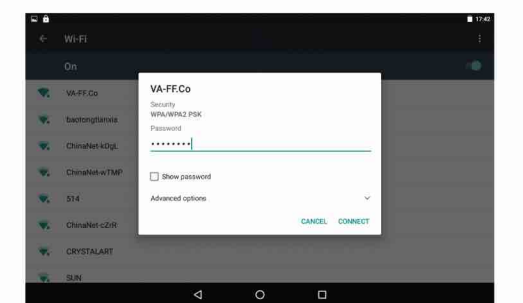


DOWNLOAD APPLICATIONS

This tablet is Google certified and has Google Play Store pre-installed. When connected to WiFi network, you can browse apps in Play Store and download/install them.

THE PLAY STORE

 Google Play Store can be found in the applications menu, you can always tap-hold-drag it to the main screen to make it easier to access.

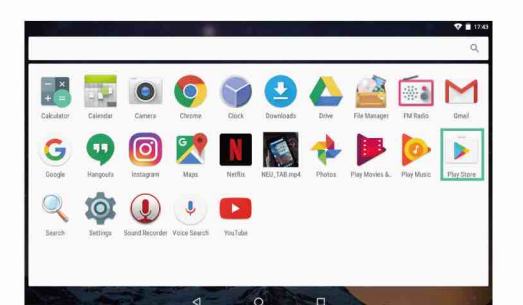

12

CONNECTING TO THE INTERNET

This tablet can utilize Wi-Fi data networks to connect to the Internet. Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router. In general, being closer to Wi-Fi router improve performance.

REQUIREMENTS

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection. The tablet can receive 802.11 b/g/n Wi-Fi radio. The tablet will also work with wireless routers that only support 802.11 b/g.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Tips: You may encounter open Wi-Fi networks, or "hotspots". These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

Warning: Open Wi-Fi networks operates under the risk of information surveillance, your account information, especially password and other credentials might be audited by third parties. Please use caution when connected to open hotspots.

CONNECT TO A WI-FI NETWORK

The Notification bar displays icons that indicate your tablet's Wi-Fi status.

 
Connected to a Wi-Fi network (waves indicate connection strength). [no icon] There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

10

1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

- Go to the Home screen: Touch the Home icon.
- Open the Launcher screen: Touch the Launcher Tab, then touch Settings.
- Open the Wireless & networks menu: Touch WIRELESS & NETWORKS.
- Open the Wi-Fi settings menu: Touch Wi-Fi.
- Make sure that the Wi-Fi option box is settled to ON: Touch and slide the block right to enable the Wi-Fi connection.

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

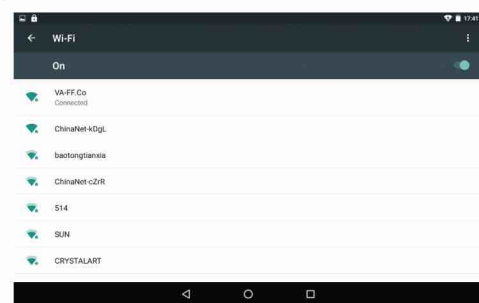

2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the tablet will prompt you to confirm connection to the network. Touch Connect to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm.

When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.

11

ADDITIONAL INSTRUCTIONS

Other attachments may be hazardous. Use only attachments recommended by the manufacturer. Use of improper attachment or use of force may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.

Adjust only those controls that are covered by the operating instructions. If the product does not operate normally by following the operating instructions, the product has been exposed to rain or water.

If liquid has been spilled or objects have fallen into the product, or when the power supply or plug is damaged:

Change Required Service: Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

Service: Do not attempt to service the product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Object and Liquid Entry: Never push objects or liquid into the product. This could result in a fire or electric shock. Never spill liquid of any kind on the product.

Overheating: Do not overheat wall outlets, extension cords, or integral rechargers. Do not use the product in a high temperature location, in a direct strong sunlight, or in a high temperature environment. Do not put, store or leave your product in a near source of heat.

Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power source to use, contact your product dealer or local power company. For products designed and used in non-enclosed wall air conditioned environment:

Environment: Even if the device does not have ventilation slots, make sure to ensure reliable operation of the product and protect it from overheating. These components should never be blocked by the manufacturer's instructions have been followed. Do not attempt to disassemble, modify or alter the product in any way.

Water and Moisture: Do not use the product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).

Legal and Trademark: This product should not be placed in a bin or container for recycling or other similar facilities. This product is not intended for use in a hospital or other medical facility. The product is not intended for use in a hospital or other medical facility. The product is not intended for use in a hospital or other medical facility.

Support: If you have a problem with this device, please check our website at www.neutab.us for frequently asked questions (FAQ) and product Technical Support.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device must accept any harmful interference received, including interference that may cause undesired operation.

2. This device must not cause harmful interference.

3. Clearing: Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

4. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.

SUPPORT

LEGAL AND TRADEMARK NOTICES

No portion of this package, including these, graphics, and design, is allowed to be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or web or any information storage and retrieval system without written permission from Neutab Electronics, Inc. Unauthorized reproduction or distribution of tablet design or any portion of this package will be prosecuted to the maximum extent possible under the law.

FCC DECLARATION

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your Tablet PC is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use on the body, as described in this user guide, is **1.409W/Kg**(Body-worn

measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2AGNK-I7 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance

of 10mm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters,

and similar accessories used by this device should not contain any metallic components.

Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.