


## Set WIFI or BT

Step 1: choose tool



Step 2: Choose settings

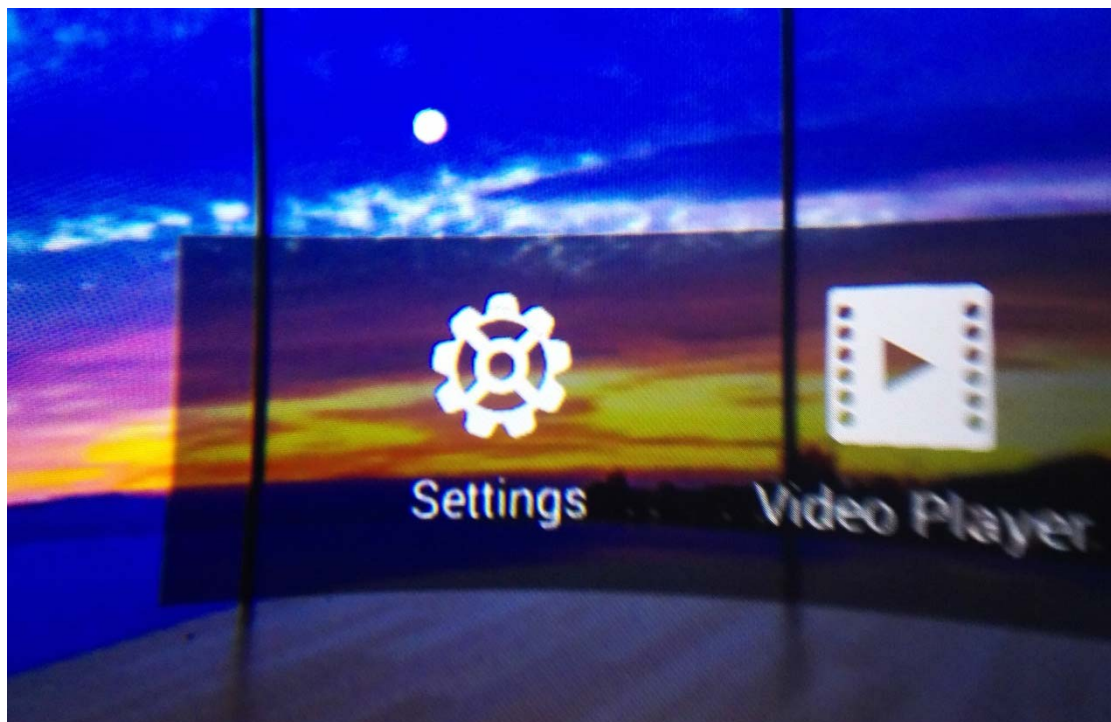

Step 3: set WIFI or BT

