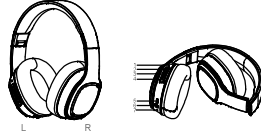


size :76.2X76.2mm

76.2mm	<p>Odyssey Bluetooth® Headphones</p> <p>100252-001B</p> <p>IC: 21530-100252 FCC ID: 2AGR4-100252</p> <p style="text-align: right;">Instruction Manual</p>	<p>OVERVIEW</p>  <p>1. LED Indicator Light 2. Volume Up / Next Track Button 3. Power/Multifunction Button 4. Volume Down / Previous Track Button 5. Micro USB Charging Port 6. 3.5mm AUX Port 7. Mic</p>	<p>SPECIFICATION</p> <p>Bluetooth specifications: Bluetooth® version 5.0 Support profile: A2DP, AVRCP, HFP, HSP, AVCTP, AVDTP, SPP Transmission distance: up to 10m (This may vary based on environmental factors or the type of Bluetooth® device being used) Built-in battery: 350 mAh Lithium Battery USB Recharge voltage: 3.7V Frequency Response: 20Hz-20KHz Sensitivity: 100dB ± 3</p> <p>PACKING LIST</p> <ul style="list-style-type: none"> • Bluetooth® Headphones • USB Charging Cable • 3.5mm AUX cable • Storage Pouch • User Manual • Gift Box 	<p>BLUETOOTH® OPERATION</p> <ol style="list-style-type: none"> 1. Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device. 2. Turn the headphones on by pressing the power/multifunction button until the LED indicator light begins to flash. The LED indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode. 3. "GEMLINE HP" will appear on the Bluetooth device list, select "GEMLINE HP" to establish pairing. 4. When you want to play audio from another Bluetooth device, disconnect the headphones from the original device and follow steps 1-3 to re-pair the headphones with a new Bluetooth enabled device. <p>BUTTON CONTROL</p> <ul style="list-style-type: none"> • Power On/Off: Press and hold the power/multifunction button for approximately 4 seconds. • Play/Pause: Press the power/multifunction button once to Play/Pause. 	<ul style="list-style-type: none"> • Volume Up/Next Track: Press "▲" button once to increase volume, press and hold for next track. • Volume Down/Previous Track: Press "▼" button once to decrease volume, press and hold for previous track. • Hands-free Phone Use: Press the power/multifunction button once to answer an incoming call. While on a call, press the power/multifunction button once to end the call. • Reject a call: Press and hold the power/multifunction button to reject a call. <p>AUX PLAYBACK OPERATION</p> <ol style="list-style-type: none"> 1. Connect the headphones to a smartphone, audio device, or laptop with the 3.5mm AUX cable (included). 2. The next/previous song button can only be adjusted on the device that is connected through the 3.5mm AUX cable.
	封面	1	2	3	4

5	6	7	8	封底												
<p>CHARGING THE HEADPHONES</p> <ol style="list-style-type: none"> 1. When the battery is low, please charge via the included USB cable. The charging time is approximately 2-3 hours, and provides up to 15-16 hours of continuous operation. 2. The LED indicator light will be red during charging and will turn off once it is fully charged. When the battery is low, the LED indicator light will flash red. <p>WARNING</p> <ol style="list-style-type: none"> 1. Do not disassemble, repair, or modify the headphones. 2. Do not place product in or near fire to avoid danger, as it uses a lithium battery. 3. Avoid storage at extreme temperatures, this can shorten the battery life and may affect the headphones. 4. Keep the headphones dry and do not store the headphones in damp areas to avoid damage to the headphones. 5. Avoid dropping the headphones as it may cause damage to the product. 	<p>KIND REMINDER</p> <ol style="list-style-type: none"> 1. To prolong the headphones life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time. 2. When an error occurs with the headphones, please turn off the headphones and restart it to troubleshoot. 3. When the headphone power is low, the Bluetooth range may be affected. Please charge the headphones to avoid disruptions during use. <table border="1" style="width: 100%;"> <thead> <tr> <th>PROBLEM</th> <th>TROUBLESHOOTING METHOD</th> </tr> </thead> <tbody> <tr> <td>Unable to pair the headphones with a mobile device</td> <td> <ol style="list-style-type: none"> 1. Inspect whether the headphones are searching for a Bluetooth-enabled device to connect to. If not, restart the headphones. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the headphones. </td> </tr> </tbody> </table>	PROBLEM	TROUBLESHOOTING METHOD	Unable to pair the headphones with a mobile device	<ol style="list-style-type: none"> 1. Inspect whether the headphones are searching for a Bluetooth-enabled device to connect to. If not, restart the headphones. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the headphones. 	<table border="1" style="width: 100%;"> <thead> <tr> <th>PROBLEM</th> <th>TROUBLESHOOTING METHOD</th> </tr> </thead> <tbody> <tr> <td>The music stops from time to time</td> <td> <ol style="list-style-type: none"> 1. Inspect the distance between the headphones and the Bluetooth-enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the headphones and the Bluetooth-enabled device. 3. The power of the battery is insufficient, please recharge the headphones. </td> </tr> <tr> <td>The sound is low or distorted</td> <td> <ol style="list-style-type: none"> 1. Inspect the volume of the connected headphones or Bluetooth-enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the headphones. </td> </tr> <tr> <td>The Bluetooth indicator light remains OFF</td> <td> <ol style="list-style-type: none"> 1. The power of the battery is insufficient, please recharge the headphones. 2. Restart the headphones. </td> </tr> </tbody> </table> <p>The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective owners.</p>	PROBLEM	TROUBLESHOOTING METHOD	The music stops from time to time	<ol style="list-style-type: none"> 1. Inspect the distance between the headphones and the Bluetooth-enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the headphones and the Bluetooth-enabled device. 3. The power of the battery is insufficient, please recharge the headphones. 	The sound is low or distorted	<ol style="list-style-type: none"> 1. Inspect the volume of the connected headphones or Bluetooth-enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the headphones. 	The Bluetooth indicator light remains OFF	<ol style="list-style-type: none"> 1. The power of the battery is insufficient, please recharge the headphones. 2. Restart the headphones. 	<p>This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.</p> <p>Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular</p>	<p>installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
PROBLEM	TROUBLESHOOTING METHOD															
Unable to pair the headphones with a mobile device	<ol style="list-style-type: none"> 1. Inspect whether the headphones are searching for a Bluetooth-enabled device to connect to. If not, restart the headphones. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the headphones. 															
PROBLEM	TROUBLESHOOTING METHOD															
The music stops from time to time	<ol style="list-style-type: none"> 1. Inspect the distance between the headphones and the Bluetooth-enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the headphones and the Bluetooth-enabled device. 3. The power of the battery is insufficient, please recharge the headphones. 															
The sound is low or distorted	<ol style="list-style-type: none"> 1. Inspect the volume of the connected headphones or Bluetooth-enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the headphones. 															
The Bluetooth indicator light remains OFF	<ol style="list-style-type: none"> 1. The power of the battery is insufficient, please recharge the headphones. 2. Restart the headphones. 															

76.2mm