

# RC CAR

Model:7777-04, TG659, 7777-01, 7777-02, 7777-03,  
7777-05, 7777-06, 7777-07, 7777-08, 7777-09,  
7777-10, 7777-21, 7777-22, 7777-23, 7777-24,  
7777-25, 7777-26, 7777-27, 7777-28, 7777-31,  
7777-32, 7777-33, 7777-34, 7777-35, 7777-36,  
7777-37, 7777-38, 7777-39, 7777-40

## User Manual



English p 1

Deutsch p 8

Français p 15

Italiano p 22

Español p 29

This product may contain small parts that could be a choking hazard. Small Children under 3 years old should be closely supervised while using this product.

PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP THIS INSTRUCTION BOOKLET FOR FUTURE REFERENCE.

DUE TO CONTINUAL IMPROVEMENTS ACTUAL PRODUCT MAY BE DIFFERENT TO ILLUSTRATIONS

# ENGLISH MANUAL - CONTENTS

1.	<b>IMPORTANT INFORMATION</b>	
	1.1 Safety Information .....	3
	1.2 Battery Safety .....	3
2.	<b>USAGE</b>	
	2.1 Battery Installation .....	4
	2.2 Activation the Digger .....	4
	2.3 Adjusting the Directional Movement .....	4
3.	<b>USAGE CONTINUED</b>	
	3.1 Controlling the Digger .....	5
4.	<b>MAINTENANCE &amp; TROUBLESHOOTING</b>	
	4.1 Care & Maintenance .....	6
	4.2 Troubleshooting .....	6
5.	<b>WARRANTY</b>	
	Warranty Information .....	7

**If you have any issues with your product or have any questions, please contact us via email:**

**[help@thinkgizmos.com](mailto:help@thinkgizmos.com)**

**This is the quickest way to resolve any problems. You will be surprised how fast we will get back to you on email with a resolution.**

**All our products are covered by our manufacturer's warranty, details can be found on page 7.**

**For more of our brilliant products, search Amazon for "ThinkGizmos".**

***ThinkGizmos "Small enough to care big enough to deliver".***

# 1. IMPORTANT INFORMATION

## 1.1 Safety Information

Thank you for purchasing the RC Digger. Please read through this instruction manual before use as it contains all the information you need about how to correctly enjoy this product.



### CAUTION

#### ELECTRONIC PRODUCT

Do not give this product to children aged 3 or below. This product should be used in accordance with this user manual in a safe way to avoid electric shock.

#### ADULT SUPERVISION REQUIRED

WARNING! Do not try to modify this product in any way as this may invalidate your warranty.

WARNING! Contains small parts, child supervision is required at all times.

## 1.2 Battery Safety

- 1) Use only brand new batteries of the correct size and power.
- 2) Do not mix old and new batteries, different types of batteries (zinc, alkaline or rechargeable).
- 3) If using rechargeable batteries, ensure they are all the same capacity.
- 4) Do not try and charge non-rechargeable batteries.
- 5) Rechargeable batteries should be charged by an Adult or under Adult supervision. Stop charging immediately if you notice any abnormal behaviour.
- 6) Do not throw batteries in the fire.
- 7) Replace all batteries of the same type/brand at the same time.
- 8) The supply terminals are not to be short circuited.
- 9) Remove empty batteries from the product.
- 10) Batteries should be changed by an Adult.
- 11) If the RC Digger is going to be inactive for a long period of time, please remove all batteries.
- 12) For your safety, please operate according to these instructions.

## 2. USAGE

### 2.1 Battery Installation



- Ensure the Digger and Remote are switched off, remove the battery covers.
- Insert 3x AA batteries (supplied) into the digger and 2xAAA (supplied) into the remote observing the correct polarity as indicated.
- Re-fit the battery cover and secure.  
**(Warning - Remove the batteries if the toy is not going to be used for a long time.)**

### 2.2 Activating the Digger



- Slide the switch on the remote and digger to the ON position to turn on. Slide switch to the OFF position to turn off.

### 2.3 Adjusting the Directional Movement

- It may be necessary to fine tune the steering via the steering adjustment control, located on the underside of the Digger.
- If while travelling in a straight line you find that the Digger strays to the left or right, then you will need to adjust the steering control to correct this issue.
- It is best to make several small adjustments to the steering this allows for an accurate adjustment of the steering.
- If the Digger strays to the left, then you will need to move the steering adjustment to the right (R).
- If the Digger strays to the right, then you will need to move the steering adjustment to the left (L).

### 3. USAGE CONTINUED

#### 3.1 Controlling the Digger



FORWARDS



BACKWARDS

- In order to make the Digger travel forward, hold the controller and press forward on the left control stick. The Digger will begin to travel forward.
- In order to make the Digger travel backwards, hold the controller and press backwards on the left control stick. The Digger will begin to travel backwards.
- Releasing the left control stick at any time will result in the Digger coming to a full stop.



LEFT



RIGHT

- To make the Digger turn you will also need to use the right control stick on the controller at the same time as traveling forwards or backwards.
- When travelling forwards, press the right control stick right to turn right and to the left to turn left.
- When travelling in reverse, you will need to press the right control stick in the opposite direction. E.g. to turn the Digger right you will need to press the control stick to the left.

# 4. MAINTENANCE & TROUBLESHOOTING

## 4.1 Care & Maintenance

- Keep the RC Digger clean by wiping it with a soft dry cloth.
- Keep away from exposure to direct sunlight for extended periods and keep away from direct heat sources.
- Remove batteries when not in use for an extended time.
- Do not drop on a hard surface or disassemble the unit.
- Do not immerse in water.

## 4.2 Troubleshooting

If you are experiencing problems with your Digger, here are some quick and easy checks that you can carry out, which may help to resolve the problem.

### **No Response from the Digger:**

- Please ensure that the Digger is in range of the controller and that there are no obstructions between the controller and the Digger which could block the signal.
- Make sure that the batteries in the Controller are fitted correctly and that they have not reached the end of their life. If required replace the batteries in the controller.
- Make sure that the batteries in the Digger are fitted correctly. If required replace the batteries in the Digger.
- Please ensure that the power switch on the Digger and Controller is switched to 'ON'.

### **The Digger does not travel straight:**

- Please adjust the steering using the steering adjustment control located on the underside of the Digger.

### **The Digger Starts to Run Slow:**

- The batteries in the Digger are running low, please insert new batteries.

If this does not resolve your issue. Please contact ThinkGizmos via email:

**[help@thinkgizmos.com](mailto:help@thinkgizmos.com)**

and we will endeavor to resolve your problem as quickly as possible.

# WARRANTY

## Warranty Information

### What is Covered:

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

### How Long Coverage Lasts:

This warranty runs for 1 Year from the date your RC Digger is delivered.

### What is not covered:

Any problem that is caused by abuse, misuse, or an act of God (such as a flood) are not covered.

### What We Will Do:

If the Product proves defective during the warranty period, we will provide you with the instructions for the return, and we will take one of the following actions: (i) replace the Product with a product that is the same or equivalent to the Product you purchased; (ii) repair the Product; or (iii) refund to you the whole of or part of the purchase price of the Product.

### How To Get Service:

To obtain instructions on how to obtain service under this warranty, contact our customer service by phone or email. You will find the contact details of our customer service below. Customer service may ask you questions to determine your eligibility under this warranty, and if you are eligible you'll be given instructions for returning the defective Product. If we send you a replacement or repair your Product, we will pay the cost of delivering the replacement or repaired Product to you.

**Do not return the item to the original place of purchase, please contact Think Gizmos direct.**



Think Gizmos, Unit 19, Lawson Hunt Industrial Park,  
Broadbridge Heath, West Sussex, RH12 3JR

Tel.: +44/(0)203 384 8304

help@thinkgizmos.com • www.thinkgizmos.com

## **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications made to this device not expressly approved by MEKBAO PLASTIC ELECTRONIC INDUSTRIAL CO.,LTD may void the FCC authorization to operate this device.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.