

Prowise ProWrite Pen
User's Operating Manual



◆ Safety Warning

Before operating the unit, please read and observe the following precautions to avoid dangerous or illegal operating conditions.

Environment

Do not use the device in dusty, damp places to avoid electrical fault inside the device.

Do not put the device in the vicinity of electric heating and other hot objects.

Normal operating temperature is $-5 \sim 40^{\circ}\text{C}$. Normal operating humidity is 10~85%.

Children's Health

The device and accessories may contain small parts, please put it out of reach of children to avoid danger.

Battery

Please keep the battery away from kids and don't throw the battery into fire.

Do not use metal objects with the battery poles butting or contacting the endpoint of the battery to avoid short circuit.

Waterproof

This device is not waterproof, please keep it dry.

Maintenance

This device can only be maintained by certified engineer.

Do not insert any sharp objects into the device.

Do not drop, collision of the device, so as not to damage the device.

◆ Note:

Image shown in this manual is indicative only. If there is any inconsistency between the image and the actual product you receive, the actual product will govern.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product Functions

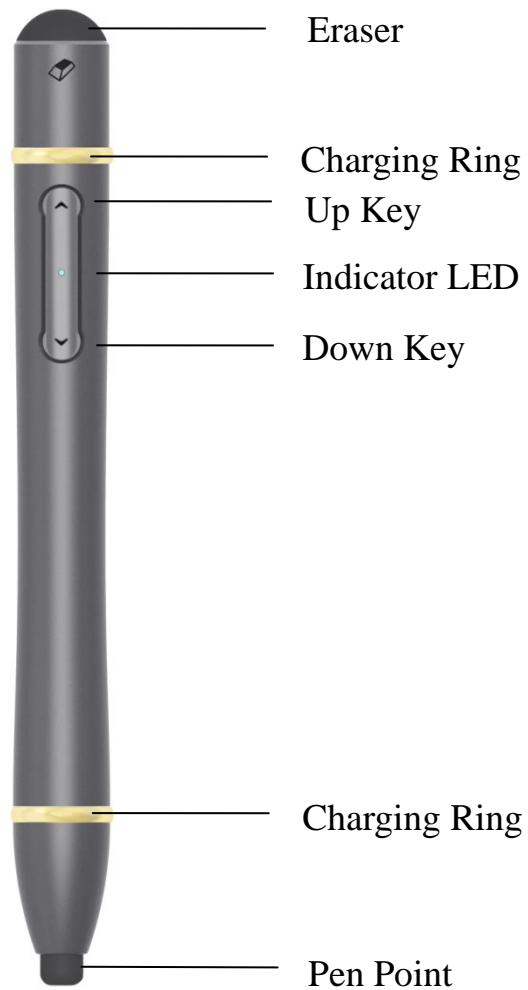


◆ Function List

Function key	Funtion Description
Eraser	Erase function
Charging Ring	For pen charging
Up Key	Page up
Indicator LED	Display working status
Down Key	Page down
Pen Point	Write on the intelligent tablet

◆ Operating Introductions

1. Exit the sleep lock mode: keep pressing the “Eraser” and then press the key “Up”, “Down”, “Up”, “Down” in turn, then the pen will exit the sleep lock mode.
(Note: Sleep lock mode is only for long-distance transport. If the indicator LED is off , and the indicator LED turn red when you hold down the “Eraser”, the pen is in sleep lock mode. Please operate as the first step to exit this mode.)
2. Operating tips: The equipment with pen receiver should install the “smartpen” software. The pen can only be used in PC channel and it can support Windows XP software and above versions.
3. Press the “Eraser” and the “Up” key at the same time for 5 seconds, while the distance between the pen and the antenna of receiver is controlled in 10cm, the pen can connect the equipment with pen receiver. The connection time costs about 8 seconds. The Indicator LED turns green means that the connection is successful and the pen is in range. The matching operation only need to be done at first time.
4. Software operating instructions: After connection, you can write on the writing area of the software interface. You can change the thickness of script by changing the pressure of writing.
5. Use your finger to slide in the writing area can move the position of script.
And use zoom gestures can zoom in and out.
6. Use the “Eraser” can clean script.
7. Press “Page up” and “Page down” can move up and down the page.
8. In the right bottom part ,it will light up when the pen is “inputing” after man press the button to write.

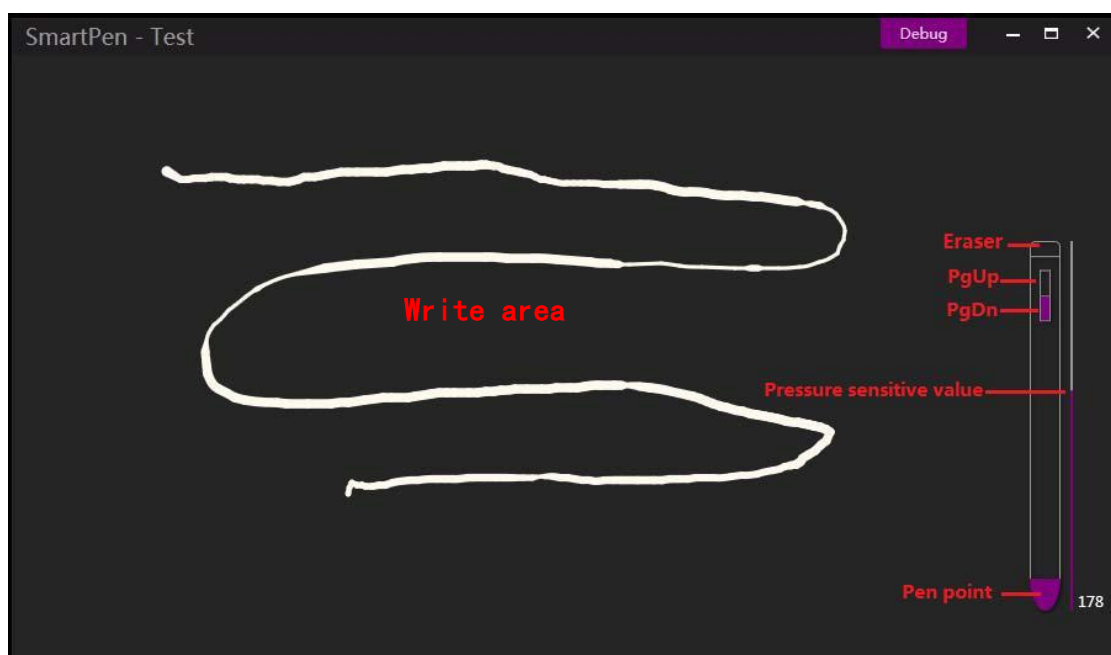

9. The wireless receiving distance between the pen and receiver is 5 meters. Once the distance is out of 5 meters, the pen will be out of connection. The pen will connect automatically again once the distance is less than 5 meters.
10. If there is no key input or no sense of pressure change, the pen will enter the sleep mode, only after you press any key or pick it up, it can be waken up.
11. Power supply: Charging in the pen slot of the equipment

◆ **Indicator LED Status Description**

1. Weak flashing green: Unconnected
2. Flashing green: Connecting
3. Slowly flashing green: Connected successfully
4. Green always on: In normal operation
5. Red and green flashing: Charging
6. Red always on: Full charged
7. Slowly flashing red: Low battery
8. Indicator LED off: Sleeping