

Smart Mobile Theater)

### **Important Safety Instructions**

- 1) Read these instructions All the safety and operating instructions should be read before this product is operated.
- 2) Keep these instructions The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings All warnings on the apparatus and in the operating instructions should be adhered to.
- 4) Follow all instructions All operating and use instructions should be followed.
- 5) Clean only with dry cloth.
- 6) Only use attachments/accessories specified by the manufacturer.
- 7) Unplug the apparatus during lightning storms or when unused for long periods of time.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- 9) Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 10) The use of apparatus in tropical and/or moderate climates.
- 11) The direct-plug adapter is used as the disconnect apparatus, the disconnect apparatus shall remain readily operable.
- 12) CAUTION: This battery is irreplaceable. Attention should be drawn to the environmental aspects of battery disposal.
- 13) To prevent possible hearing damage, do not listen at high volume levels for long periods.

### Warning

- Do not expose the apparatus to rain or moisture.
- Do not cover the ventilation opening of the apparatus with newspapers, table-cloths, curtains, etc.
- Do not expose the apparatus to naked flame sources, such as lighted candles.
- Do not expose the apparatus near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not expose the apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.
- Do not expose battery or apparatus with battery installed to excessive heat, such as sunshine, fire or the like.

# Health

### Ages

Near-to-eye devices may affect kids' health. Please keep it from younger kids.

### Adverse reaction

While using the device, Royole suggests you take a break periodically, and the break duration and interval depend on each individual. In case of any discomfort (such as eyestrain, malaise, nausea or blackout), please stop using the device immediately until the symptoms disappear and visit a doctor if necessary.

Prolonged excessive volume may damage the hearing, which should be avoided for safety purpose. If you are allergic to the headset, please stop using the device immediately and visit a doctor.

# Usage

## Comfortable use

Make sure you are properly wearing Royole-X. Align the window with your eyes if the image looks distorted. You may refer to the startup tips for details.

Drop or brutal usage of the device may lead to distortion of images.

Do not touch the processor unit (BOX) or power adapter for a long time while using. Prolonged skin contact may cause low temperature burns.

Royole-X PD adjustment range is 56 mm - 70 mm. If this is not applied, please do not use the product anyway.

Royole-X DPT adjustment range is myopic  $500^{\circ}$  to hyperopic  $200^{\circ}$ . If your eyesight degree is out of the range, you should wear glasses, but the view will be affected.

### Power adapter

- Do not use any non-specified adapter or USB cable, which may otherwise cause product failure, or even damage the product.
- Do not dismantle or restructure the power adapter.
- Do not touch the metallic area of the power adapter. Especially, metal tools may cause direct short and damage the power adapter.
- Problems caused by any USB hub or USB extension cords are not covered by warranty (for repair, replacement or compensation of faulty products).
- As the device can be disconnected by unplugging the power connector from the wall socket, please connect it to an
  available AC power socket. Once the device goes wrong, switch off the AC socket immediately, and unplug the connector.

### Built-in battery

The battery is irreplaceable.

Please do not put the device in extreme environments, such as under the sunlight or fire.

A fully discharged battery can be recharged for approximately 500 times, which depends on the using conditions. In order to prevent degradation, the battery should be charged every six months if the device is out of operation for a long time.

#### Wireless communication

The device uses the 2.4 GHz frequency band and adopts the OFDM mode for modulation.

If there are more than 3 pairs of 2.4 GHz wireless devices (including this product) within an area of 20 sqm, the wireless communication function may be disabled due to signal interference.

Do not use the wireless communication function where it is prohibited or limited (during flight or in the blasting operation area, etc.).

The device uses the 2.4 GHz frequency band which may be used by other wireless devices as well. In order to avoid signal interference between the system and other devices,

O Do not change the transmission frequency, increase the emission power (including assembling an extra power amplifier), mount external antenna or change to other antennas without permission.

② Do not cause harmful interference to all legitimate radio services while using. Once any interference is detected, the function should be disabled.

### Condensation

Bringing the device from cold to warm environment or opening the heater in the room may cause condensation on the surface of or inside the device. If condensation happens, do not use or charge the device, to avoid electric shock or damage.

#### Electrostatic

In dry seasons, using the device may cause tingle to ears occasionally. It may be caused by ESD from human body.

### Lens Care

Please carefully protect the lens from stains or scratches. If the lens is blurred, please softly wipe the lens with soft cloth. Do not shake or press the lens with a large force. The breached or broken lens may do harm to human body. In case of such situation, stop using the device at once and replace with the new ones.

### Cleansing


Clean the outer surface of the device by using soft cloth with a bit of mild detergent. Do not use dissolvent such as diluents, gasoline or alcohol since these dissolvent may cause damage to the device surface.

# Environmental protection

Do not dispose the abandoned product together with household wastes. Proper disposal of the abandoned product will help avoid the potentially negative impacts on the environment and human body. Please follow the local rules and regulations for more details.

# Overview

Quick preview of all the function keys

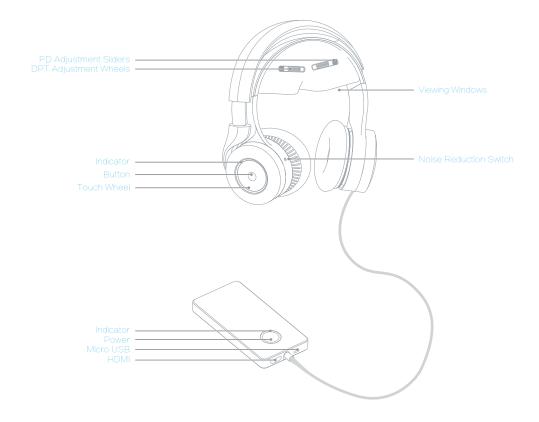

# Connection

Enjoy infinite resources with multiple connection methods.



### **HDMI** connection

Using the HDMI cable, you can see the content on PC, player, STB and other devices after being connected.



# **OTG** connection

The OTG function is available for the Micro USB interface. The device can read data from the mobile storage device through an OTG data cable.



### Storage

The device provides 16 GB storage, to store multimedia resources via Micro USB.



### Discover

Using the Discover function, you can access shared multimedia files from the other devices on the LAN.



### Multi-screen interaction

Transfer images and sound from other mobile devices and play them in the device.



# Multimedia Cast

Cast multimedia files from other mobile devices and play in the device.

# Packing list

After purchase, please confirm you have all the following items in the pack. If any item is missing, please contact your local retailer, or call the Royole service center.



### Royole-X (foam cushioning included)

Smart mobile theater device, including a replaceable foam cushioning.



 
# "USB to Micro USB" cable

Charge the device together with the power adapter.



# Portable storage box

Easy for carrying.



# OTG cable (giveaway)

The OTG function is available for the Micro USB interface. The device can read data from the mobile storage device through the OTG data cable.



Light-tight hood included including a mobile light-tight hood.



### Power adapter

Charge the device together with the "USB to Micro USB" cable.



# Manual/Quick Guide/Guarantee Card/Lens Cloth

Provide more information about the product.

# Smart Mobile Theatrer


For more information, service or support, please visit our website: www.royole.com, Model No.; RY0101

# Quick setup

Quickly know about the device.

# 1 Start the device

Long press the Power button until the indicator is on.

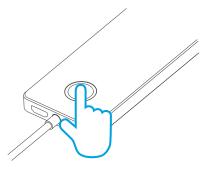

# **2** Wear the device

Unfold the display unit and adjust it to the optimum fit.



# 3 Display setup

 
Adjust the DPT and PD to make images clear.

#### 

# Adjust the focus for (left/right) eye

Rotate the left/right Focus Adjustment Wheel until images are clear.

\*Note: When adjusting the focus following the startup guide, the device will close the images on the other side, just to make the focus adjustment more accurate.



# 2

### Adjust the Pupil Distance


Press the PD adjustment sliders, and slide to adjust the lens spacing until you cannot see double vision.

# 4 Start enjoyment

Enjoy the infinite fun Royole-X brings to you.

# Operations

Quickly know how to use the device.

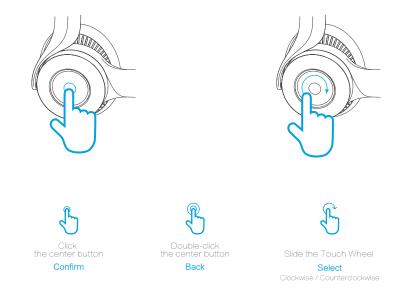

0	Click	Pause or start playing
<u>०</u>	Click and slide	Fast-Forward/Fast-Rewind
<b>C D</b>	Slide (clockwise/counterclockwise)	Volume up/down
0	Long press	Delete the local file(s) Show the playlist on the player interface

You can operate the device by means of sliding clockwise/counterclockwise, click, double-click, and long press.

# Ports and buttons



# Indicators

By default, the device will enter the standby mode automatically when no video file is played and the touch wheel is not used for 10 minutes.

Display unit		Breathing indicator	properly functioning
	Ċ.	Fast blinking at an interval (twice every 10 seconds)	Low battery
	÷Ċ:	Always on	Charging completed
	÷Ċ:	Slow blinking(once every 3 seconds, until charging co	mpleted) Charging
Processor unit	<del>.</del> 0 1	Blinks once	Entering/Exiting the standby mode
	ġ.	Breathing indicator	Standby mode
	<b>O</b> 4	Blinks 4 times consecutively flash	Power off
	ġ.	Light on for 1 second	Power on

# Royole-XOS Operation Panel



Slide the touch wheel to switch the options



You can play videos stored in this device or use the OTG connection to play videos in other devices.



#### During video playing:

If you want it to	Please operate as below
Pause or play	Click
Fast forward/rewind	Click and slide
Volume up/down	Slide (clockwise/counterclockwise)
Display the playlist	Long press

#### Deleting video files

Select a file to be deleted, and long press the touch wheel. When the delete dialog box appears, select "Yes". The file will be deleted.

#### Supported file formats


Royole-X supports multiple formats of video files, including MP4, FLV, MKV, AVI, MPEG, WEBM, MOV, 3GP, F4V, 3GPP, VOB, MPG, M1V, M2V, DAT, TS, TP, M2TS, ASF, WMV, PMP, AWTS, 3DM, 23DV, and OGM.

#### Supported formats of caption files

Royole-X supports multiple formats of external subtitle files, such as SRT, ASS, SSA, etc. You can name the caption files as the video files and store them in the same directory. When videos are played, the subtitles will be displayed as well.



You can play music stored in this device or use the OTG connection to play music in other devices.

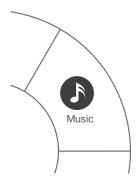

#### During music playing:

If you want it to	Please operate as below
Pause or play	Click
Fast forward/rewind	Click and slide
Volume up/down	Slide (clockwise/counterclockwise)
Display the playlist	Long press
Switch the play modes (shuffle off, repeat one, shuffle)	Pause and then long press

#### Deleting music files

Select a file to be deleted, and long press the touch wheel. When the delete dialog box appears, select "Yes". The file will be deleted.

#### Supported file formats


Royole-X supports multiple formats of music files, including MP3, AAC, FLAC, WMA, AMR, OGG, WAV, MID, SMF, XMF, IMY, RTTTL, RTX, OTA, APE, and ARAC.

#### Supporting lyrics

Royole-X supports lyric display. When the device is connected to the Internet and plays music, it will automatically download and display the lyrics. If the Internet is not connected, you can name the LRC files as the music files and store them in the same directory. Then, the device will display the lyrics when playing music.



You can browse pictures stored in this device or use the OTG connection to browse pictures in other devices.

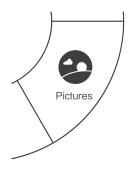

#### During picture browsing:

If you want it to	Please operate as below
Switch to the previous picture	Slide counterclockwise
Switch to the next picture	Slide clockwise
Auto play	Click
Display the picture list	Long press

#### Deleting picture files

Select the file to be deleted, and long press the touch wheel. When the delete dialog box appears, select "Yes". The file will be deleted.

#### Supported file formats

Royole-X supports multiple formats of picture files, including JPEG, PNG, BMP, and GIF.



# Multi-Screen Interaction

You can transmit the screens and sound of smart phones, Pads or computers directly to Roycle-X for playing.

The procedure is as follows (using a smart phone for example):

 
- 1. Start Roycle-X and enter the Cast > Multi-Screen Interaction page.
- Search for Roycle-X on the phone for connection. After the connection succeeds, multi-screen interaction can be implemented.

# **Multimedia Cast**

Video, music and picture files in your smart phone, pad or computer can be transferred to Royole-X through wireless network and display.

The procedure is as follows (using a smart phone for example):

- 1. Start Roycle-X and enter the Cast > Multimedia Cast page.
- 2. Start an APP that supports multimedia cast on the phone and select Roycle-X for cast.




#### Notes

- 1. Make sure that Roycle-X and your device are in the same valid network. If there is no external network, you can enable the Hotspot function of the phone for connection.
- 2. Only certain APPs support digital media sharing; therefore, relevant software must be installed on the computer for casting.
- 3. When the cast function is used, Roycle-X supports operations such as play/pause, volume control, and fast forward/rewind



Connect Royole-X to a valid wireless network (if no external network is available, you may also use the Hotspot function of the smart phone for connection). You can search for the smart phones, pads or computers in the same LAN, and then browse and play the video, music or picture files which are shared by them.

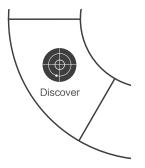

The procedure is as follows (using a smart phone for example):


- 1. Start an APP that supports multimedia resource sharing in your mobile phone, and select the directory and contents to be shared.
- 2. Start the Royole-X and access the Discover page.
- 3. Select your shared mobile phone after scanning to view the shared contents.

#### Notes

- 1. Make sure that Roycle-X and your mobile phone, Pad and computer are in the same valid network
- 2. Relevant APPs or software (supporting multimedia resource sharing) in your mobile phone, pad or computer.
- 3. Only the shared videos, music or pictures can be viewed by Royole-X.



The Settings consist of seven items, which are About, System, Reminders, Language, Sound, Display and WLAN. You can perform personal settings and view the information about Royole-X.

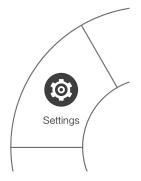

Operation instructions:

If you want it to	Please operate as below
Select the next/previous one	Slide clockwise/counterclockwise
Access the current option for setting	Click
Adjust setting parameters	Slide clockwise/counterclockwise
Return to the previous level	Double-click

(About)

You can view information about Royole-X, including the system version, serial number, and storage

#### System

- 1. Update (Choose Settings > System > Update)
  - A. When a new system version is available, Royole-X will automatically detect it through the wireless network and give notifications.
  - B. It may take a long time to download upgrade files. To avoid interruption, please make sure the battery capacity is over 30%, or directly connect the device to power supply. When the downloading is complete, Royole-X will automatically reboot and install the upgraded version.
  - C. Don't shut down Royole-X during upgrade.
- 2. Reset device (Choose Settings > System > Reset device)
  - A. Click it to reset device. The system will reboot automatically.
  - B. Your personal settings will be deleted after Reset.

#### **Reminders:**

1.Eye caring (Choose Settings > Reminders > Eye Caring)

When you watch Royole-X for a long time, it will remind you to take care of your eyes. You can set the reminding cycle to 45 minutes or 90 minutes. You can also choose the Don't Disturb mode to disable this reminder function.

2. Startup gesture guide (Choose Settings > Reminders > Startup Gesture Guide)

If this function is enabled, a guidance page for new users will be displayed every time you start Royole-X. You can also disable it to make sure that it will not appear any longer.

#### Language

Choose Settings > Language to select the language you want.

#### Sound

- 1. Volume up/down; Adjust the volume. You can also adjust the volume when a video or music is being played.
- 2. System sound on/off; Turn on or off the system sound.

#### Display

- 1. Brightness adjustment; Adjust the brightness of the screen as you wish.
- 2. Auto standby mode; You can enable or disable the auto standby mode.
- 3. Headset light; Turn on or off the headset light.

# WLAN (Choose Settings > WLAN)

- 1. Connection procedure: Enable the WLAN, Search a network, join a network, and input the password. Then, the connection succeeds.
- 2. After inputting the password, select "Connect" in the keyboard for connection.
- 3. To ignore the currently connected network, long press this network, and then select "Ignore".
- 4. A WLAN is required for the Cast, Discover, and Update function. You are advised to disable the WLAN and only enable it as required, so as to save power.

# Standby Mode

#### Active standby:

When the device is working, short press the Power button to enter the standby mode (if the device is playing music, only the screen is turned off but the music continues).

### Passive standby:

If no operation is performed and no video is played for 10 minutes, the system will enter the standby mode. (The default standby time is 10 minutes. You can adjust it in Settings.)

#### Wake-up:

Short press the Power button to wake up the system.

# Active Noise Reduction

Royole-X is equipped with a high-quality audio device and provides the active noise reduction function.

To enable or disable the active noise reduction function, toggle the noise reduction switch at the right lower part of the headset.

# Battery charging

When you use the device for the first time or its battery is of low capacity, you should charge the battery with its original matching data cable and power adapter.

During charging, the indicator of the processer unit will blink slowly (blink once every 3 seconds).

After the charging is finished, the indicator will keep on until the power supply is cut off.

After the charging is finished, please unplug the data cable, and remove the power adapter from the socket.

# Specification

# Display unit

Size:	Approximate 230x230x100 mm
Resolution;	3300ppi
Supported resolutions;	XGA, HD, FHD, etc.
Pupil distance;	56 mm – 70 mm
Diopter;	-500° – 200°
Headset:	Aactive noise cancelling Max. reduced noise amplitude; 22dB Distortion; <1% Reduction degree; >92% Impedance; 32a
Operating temperature;	0-45°C
Storage temperature;	-20 <b>-</b> 60 °C
Operating humidity;	≤90%RH
Storage humidity;	≤90%RH

(Notes)

Based on users' using modes and actual environment, the specifications mentioned above may be slightly different. We will not give notices if the system specifications or appearance are changed.

ODM Manufacturer: Shenzhen Royole Technology Corporation

Address; Bld. 43, Dayun Software Town, No. 8288, Longgang Blvd., Longgang District, Shenzhen City.

Size:	Approximate133x61x18 mm
Capacity;	6000mAh
Power dissipation;	Standby: <1W Operating: 3.5W
Operating duration;	Approximate 5-7hours
Charging duration;	2 hours for≥ 80%
Input interface;	HDMI Micro USB
Wireless network;	Compatible mode; 802.11b/g/n Usable frequency; 2.4GHz

# Processer unit

# Power adapter

Size:	Approximate 40x44x60 mm
Rated input;	100-240V~50/60Hz, 0.35A
Rated output:	5V <del></del> 2A
Operating temperature;	0-45°C
Storage temperature:	-25–85°C
Operating humidity;	≤90%RH
Storage humidity;	≤90%RH

# (Notes)

Based on users' using modes and actual environment, the specifications mentioned above may be slightly different. We will not give notices if the system specifications or appearance are changed.



www.royole.com

# FCC Compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

1) this device may not cause harmful interference, and

2) this device must accept any interference received, including interference that may cause undesired operation.

# Warning Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- □ Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Specific Absorption Rate (SAR) information

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This model (FCC ID; 2AGVM-RY0101) has also been tested against this SAR limited.

# 

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

# EU Declarations of Conformity

# CE

This product compliances with the requirements of the following Directives and carries the CE mark accordingly. LVD Directive 2006/95/EC & 2014/35/EU, EMC Directive 2004/108/EC & 2014/30/EU, R&TTE Directive 1999/5/EC & 2014/53/EU, RoHS Directive 2011/65/EU, Eco-design requirements for energy-related products Directive 2009/125/EC.

# X

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# Specific Absorption Rate (SAR) information

This apparatus is also designed to meet the requirements for exposure to radio waves established by the EU.

The SAR limit of EU is 2.0 W/kg averaged over one gram of tissue. This apparatus has also been tested against this SAR limited.