 


## 6.FLIGHT CONTROL

PLEASE USE THE CONTROLLER TO PRACTICE SIMULATED FLIGHTS BEFORE YOU ACTUALLY TAKE THE NANO DRONE PRO IN THE AIR FOR THE FIRST TIME

Place the NANO DRONE onto a flat surface, making sure that the Front Green O LED are facing away from you. This ensures that you and the drone are both facing the forward direction.

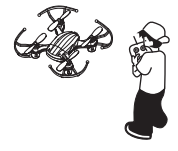

<p>Ascending ↑</p> <p>Descending ↓</p>	<p>When you push Up on the Up/Down Lever the NANO DRONE will start to go Up (please do this slowly at first till you learn the sensitivity). When you push Down on the Up/Down Lever the NANO DRONE will start to go Down.</p>	
<p>Right sideways ↻</p> <p>Left sideways ↻</p>	<p>When you push Left on the Spin Left/Spin Right Lever the NANO DRONE will start to spin Left. When you push Right on the Spin Left/Spin Right Lever the NANO DRONE will start to spin Right.</p>	
<p>Forward →</p> <p>Backward ←</p>	<p>When you push Forward on the Forward/Backward Lever the NANO DRONE will start to fly Forward (please do this slowly at first till you learn the sensitivity). When you push Backwards on the Forward/Backward Lever the NANO DRONE will start to fly Backwards.</p>	
<p>Left Bank ↶</p> <p>Right Bank ↷</p>	<p>When you push Left on the Bank Left /Bank Right Lever the NANO DRONE will start to Bank Left (please do this slowly at first till you learn the sensitivity). When you push Right on the Bank Left /Bank Right Lever the NANO DRONE will start to Bank Right.</p>	

**TIP:** It is much easier when you start to learn to fly the NANO DRONE, to ignore Spin Right / Spin Left. By using Up/Down, Forward/Backward, Bank Left/Bank Right, the NANO DRONE will still be able to fly anywhere. Also by keeping the Green LED facing forwards at all times, it is much easier to know which direction you will go in.

 
## 7.TRIMMING YOUR NANO DRONE PRO - Always needed before first flight

When you lift your NANO DRONE into the air, and don't use any of the other control levers, it should just HOVER in one spot. If it doesn't, you can follow the below instructions to bring your NANO DRONE back to a perfect HOVER.

	<p>If your NANO DRONE banks to the Left, keep pressing the Bank Left /Bank Right Trim Button to the Right till the NANO DRONE stops banking.</p>	
	<p>If your NANO DRONE banks to the Right, keep pressing the Bank Left /Bank Right Trim Button to the Left till the NANO DRONE stops banking.</p>	
	<p>If your NANO DRONE flies Backwards, keep pressing the Forward /Backwards Trim Button Up till the NANO DRONE stops flying Backwards.</p>	
	<p>If your NANO DRONE flies Forwards, keep pressing the Forward /Backwards Trim Button Down till the NANO DRONE stops flying Forwards.</p>	


## 8.ONE KEY RESET FUNCTION

Place the Nano Drone onto a flat surface, Press the Top Right Button for 3 Seconds, the LED Lights on the drone will flash indicating, the drone is being reset.

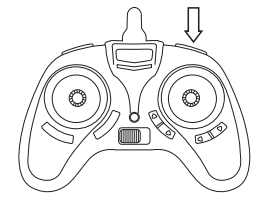

## 9.HOW TO DO A 360° FLIP

 - 1.Make sure the NANO DRONE is flying at least 1.5 meters above the floor, or 1.5 meters below a ceiling.
- 2.Press the Flip Button once to set the Nano Drone into Flip mode - you will hear a beep.
- 3.You now have a choice of which direction to perform your flip. Using the right hand lever on the controller, push it up to perform a forward flip, push it down to perform a backwards flip, push it right to perform a right flip and push it left to perform a left flip.
4. After one flip, the controller resets back to normal flying mode.

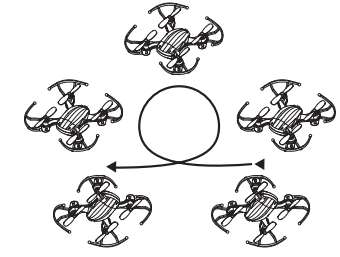


## 10.FEATURES

**SPEED CONTROL:** When you first connect your Nano Drone it will automatically be in Speed 1 mode, this is the slowest speed and great for indoor flying. Press the SPEED BUTTON and you will hear two beeps from the controller; you are now in Speed 2 which is great for Indoor/Outdoor flying. Press the SPEED BUTTON again and you will hear three beeps from the controller; you are now in Speed 3, the fastest speed, which is great for Outdoor flying. When you press the SPEED BUTTON again the controller will beep once and return back to Speed 1. Always learn to fly at the slowest speed, and then you can increase it as you get better at flying.

## 11.REPLACING BLADES

 During strong crashes your blades are designed to come off so as not to damage your Nano Drone. Certain blades MUST be replaced on certain motors, or your Nano Drone will not fly properly. If your Nano Drone is facing away from you, the A marked blades must be positioned Top Left and Bottom Right. The B marked blades must be positioned Top Right and Bottom Left.Sometimes the blades will have a number printed next to the A or B (eg. A1, B2). The number is not important; but YOU MUST make sure you always replace an A or a B blade in the positions as indicated in the diagram.

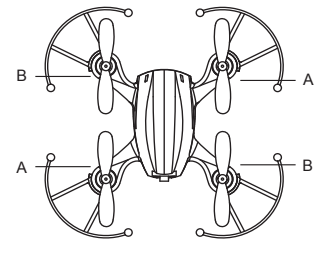

## 12.FIXING ISSUES

**NANO DRONE PRO NOT LIFTING OR NOT FLYING IN YOUR CHOSEN DIRECTION:**  
 1)The most common reason for a Drone not lifting or flying in your chosen direction properly is that you have hair and debris wrapped around one or more of the blades. This is simple to remove, just take off the blade. Remove the debris, and place the blade back on.  
 2) The batteries in either the NANO DRONE or Controller may need charging (or replacing if it's the batteries in the controller).  
 3) You may have knocked your Trim Button settings out of sync. Follow the instructions earlier in this booklet to reset them back to the factory settings, and then re-trim as desired.

 
## 13.WARNINGS

- . The NANO DRONE is designed for 8+
- . Adult supervision is always advisable with any form of flying toy
- . Always ensure your flight area is free of all obstacles before taking off, and ensure the Drone is always flown in excess of 1.5 meters from yourself and others
- . Remove all batteries from the Controller when not in use
- . Never overcharge
- . Never leave to charge unattended
- . Never touch the Drones motors during or after flying as they can get hot
- . Never touch the blades when they are in motion
- . If the Drone becomes damaged, stop using it immediately
- . Do not dispose of any parts of the Drone or Controller in the normal rubbish; all parts should be taken to your local recycling centre
- . The battery in the Drone should never be exposed to any form of high temperature or disposed of in a fire
- . Always charge the battery on a non-flammable surface, with non-flammable surroundings.


## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
 Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 --Reorient or relocate the receiving antenna.  
 --Increase the separation between the equipment and receiver.  
 --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 --Consult the dealer or an experienced radio/TV technician for help.

## 1.CONTROLLER COMPONENTS

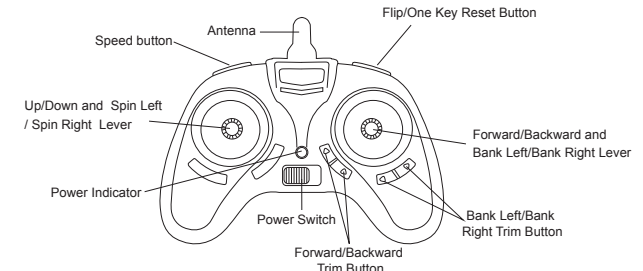

## 2. SETTING UP THE CONTROLLER

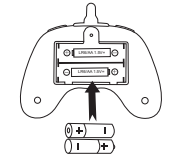 

2 Pcs "AA" batteries

1. Unscrew the battery cover, and insert 2 \*AA batteries, making sure you insert them following the correct polarity as shown.
2. Re-attach the battery cover

**NOTICE:**  
 1. Always have an adult install the batteries  
 2. Always use Alkaline Batteries  
 3. Never mix old and new batteries

## 3.CHARGING YOUR NANO DRONE PRO BATTERY

### IMPORTANT — READ BEFORE CHARGING:

**BATTERY WARNING:**  
 Lithium Polymer batteries can expand, burst or catch fire if used incorrectly, causing both property damage and or personal injury. It is essential that you follow all the included instructions and safety warnings in full. The manufacturer, distributors and retailers will assume no liability for the failure to comply with these safety instructions and warnings.

- INSTRUCTIONS WHEN CHARGING:**
- 1) Always let your Nano drone battery cool down before charging.
  - 2) Charging must only be undertaken by an Adult, and only using the included USB charger.
  - 3) Always charge the Nano Drone on a non-flammable surface, with non-flammable surroundings.
  - 4) NEVER leave the Nano Drone unattended whilst charging, and never overcharge.
  - 5) Only ever charge using the included USB charging cable.
  - 6) If your Nano Drone battery ever becomes damaged in a crash, or ever starts to smell, change colour or look swollen, stop using/charging it immediately and refrain from further use. If the battery is hot, place on a non-flammable surface.

# NANO DRONE HIGH PERFORMANCE RC



Congratulations on now owning one of our amazing Hamleys Space Academy NANO DRONE PRO. HAPPY PILOTING

## 4.SAFE FLIGHT ENVIRONMENT

- 7) Make sure the Nano Drone Power Switch is turned to the OFF position. Attach the USB end of the charging cable into a designated USB Charger socket on a PC, Laptop or USB Charging Plug (not mobile phone charging plug), and the other end into the Nano Drone. Make sure your Nano Drone is the right way up before inserting the USB charging cable, and make sure the little raised bump on the cable plug is facing downwards when you insert it. If the USB Charger cable is forced in upside down it can damage the Nano Drone and or cause a short circuit.
- 8) The USB Cable has a LED light which will light up whilst charging, and will turn off once fully charged. Always disconnect the USB Cable after charging.

**IMPORTANT BATTERY CARE INSTRUCTIONS:**  
 If your battery ever starts to smell, change colour or look swollen, you must stop using it immediately and must not attempt to recharge it. If the battery ever starts to smell, change colour or expand whilst charging, you must stop charging immediately, and place the battery. Do not attempt to recharge the battery. Be advised that the battery may be hot so be careful when handling it. Disposal of any battery should be done at your local recycling centre.



**IMPORTANT INFORMATION**  
 Do not plug the USB charger into AC adapter  
 USB charger must ONLY be plugged into a computer USB port with max output of 5V.  
 Do not overcharge, charging time 45 minutes.

## 4.SAFE FLIGHT ENVIRONMENT

1. Make sure the surrounding area is free of all people, pets or other obstacles before you start to fly.
2. The NANO DRONE is an Indoor/Outdoor Flyer, but care should be taken in strong wind.
3. Leave 1.5 meters between you and the NANO DRONE at all times.

## 4.SAFE FLIGHT ENVIRONMENT

<p>OFF ON Turn on the Power Switch</p>	<p><b>Step 1</b> Turn on the Power Switch of the NANO DRONE, The LED on the drone will start to flash. Place the NANO DRONE down on a FLAT surface.</p>
<p>CAUTION ON / OFF</p>	<p><b>Step 2</b> Then turn on the controller Power Switch, The controller will make two BEEP sound. To pair the signals of the NANO DRONE and the Controller, you must now RAISE the UP/DOWN Lever on the controller all the way to the TOP, then LOWER it all the way to the BOTTOM. The controller will make a BEEP sound. The next time you RAISE the UP/DOWN Lever the NANO DRONE will lift into the air.</p>
<p>OFF ON Turn off the Power Switch</p>	<p><b>Step 3</b> Always turn off the Power Switch of the NANO DRONE after flight.</p>
<p>Power switch</p>	<p><b>Step 4</b> Always turn the controller off after flight, and remove all batteries if leaving un-used for a long period of time.</p>