


Setup Photographs:


9kHz – 30MHz

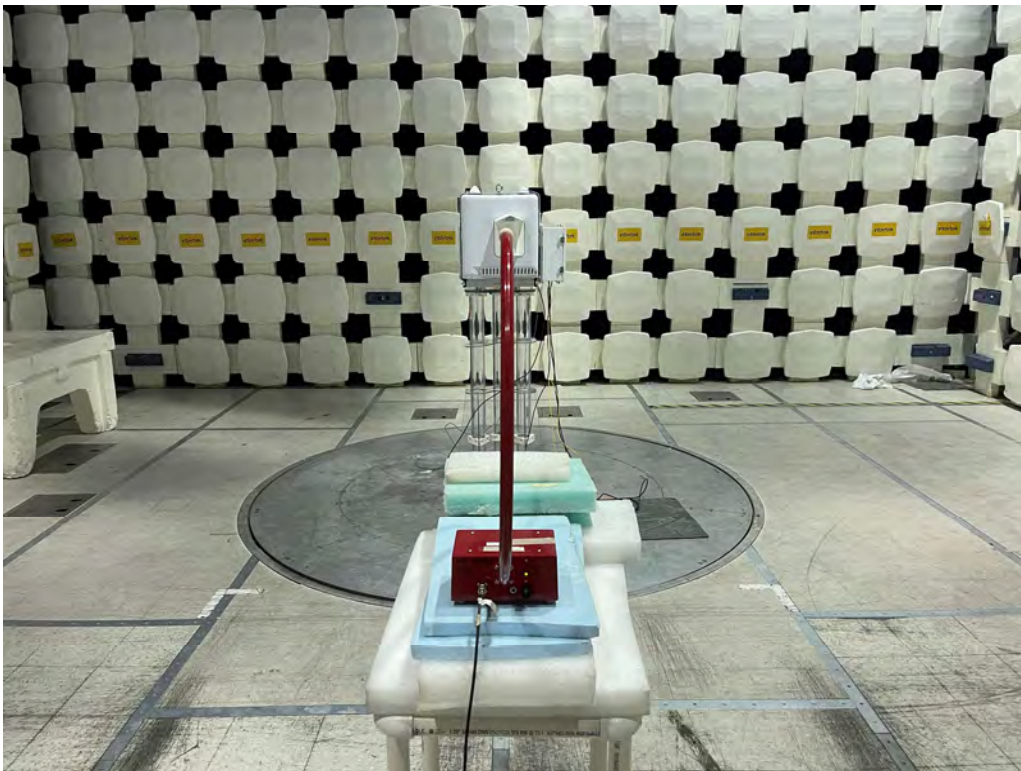

9kHz – 30MHz



9kHz – 30MHz

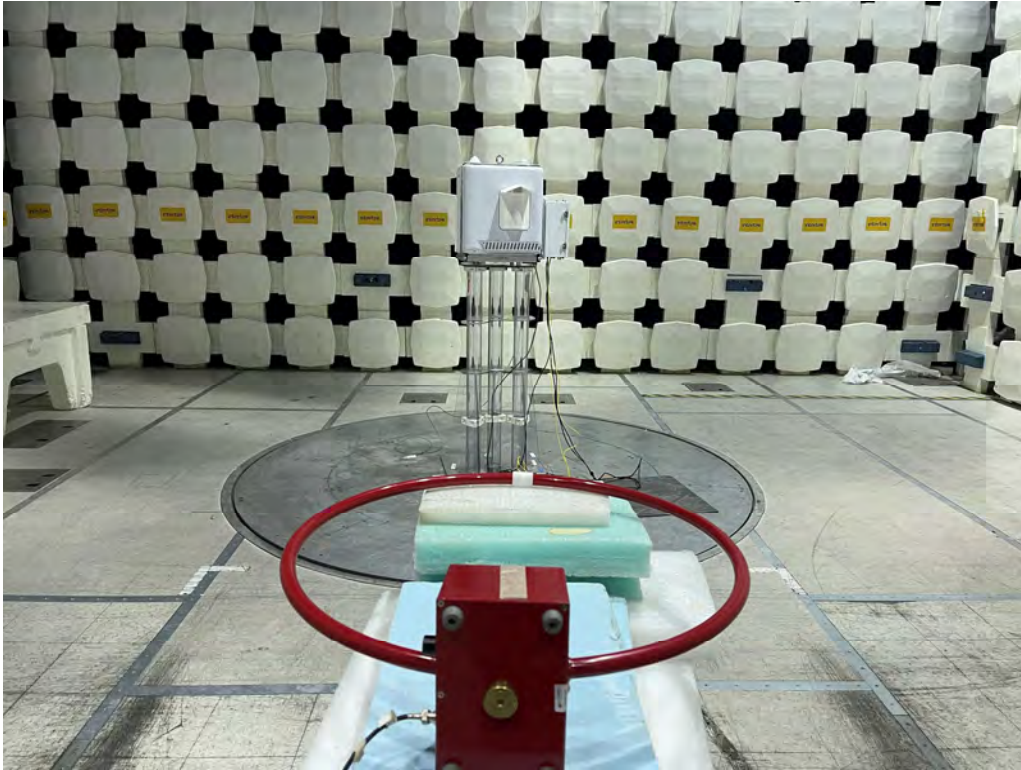




30 – 1000 MHz





1 - 18 GHz

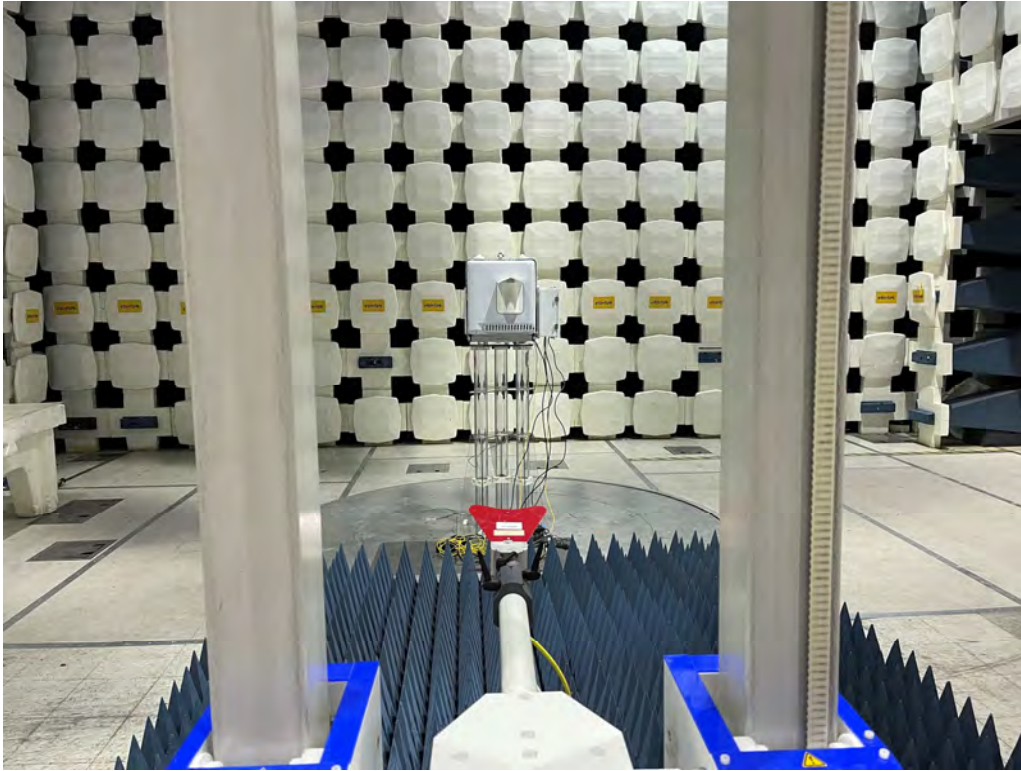



18 – 40 GHz

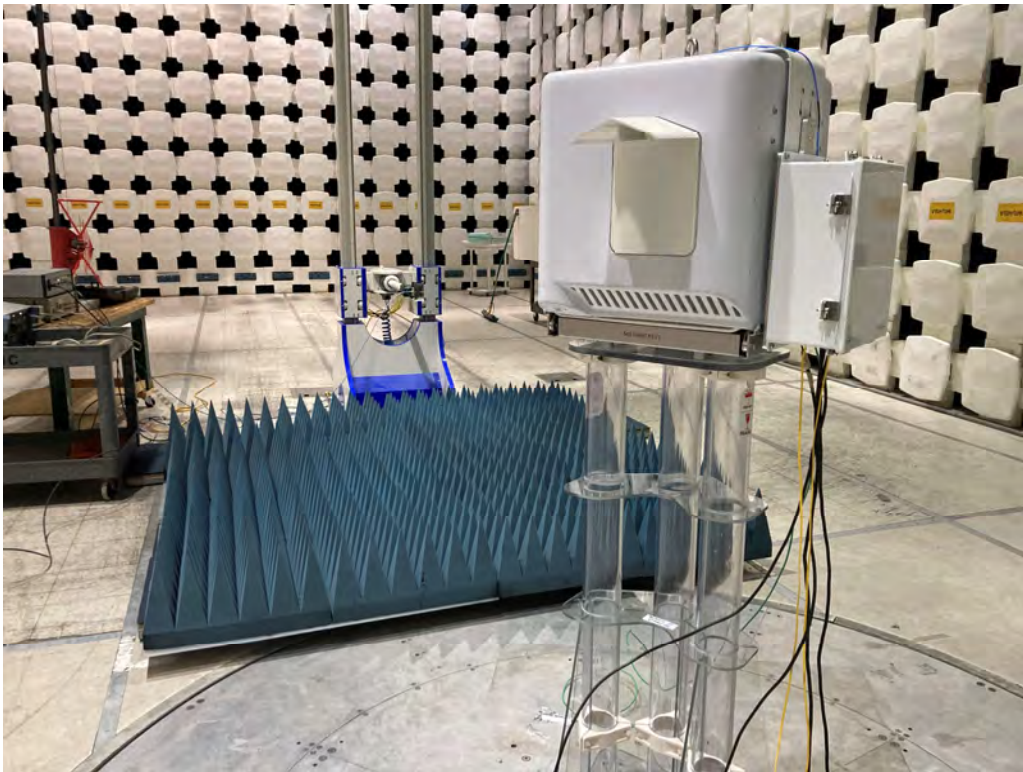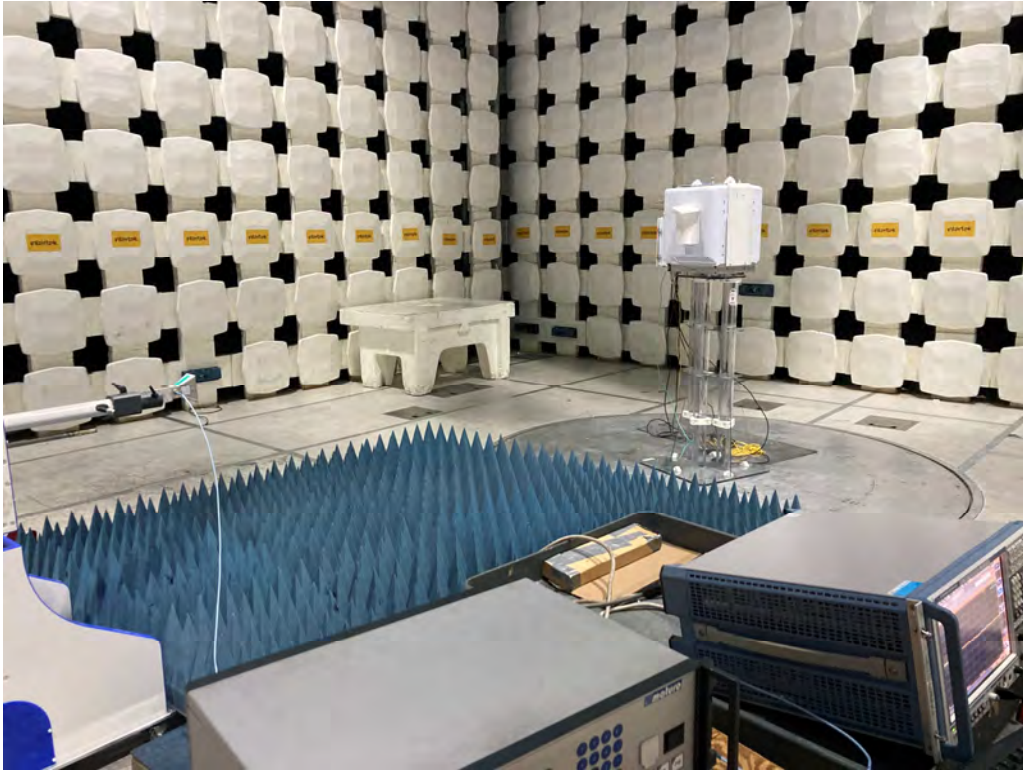

Above 40 GHz

