



POS System Quick Start Guide

L1583.L1582.L1581.L1563


Three Configuration Option



15.6" Touch Screen



15.6" Touch Screen
+ 10.1" Customer Screen



15.6" Touch Screen
+ 15.6" Customer Screen

+ Facial Recognition Camera (optional)

the camera is optional

Easy Setup

Get the device ready for use in a few steps.

- Press the power button to turn on the screen and enter into the boot interface, then operate following the onscreen instructions. Two network modes can be selected for the device.
- WiFi Setting
 - Click the button [Setting], and enable WLAN to enter into the interface for WiFi wireless. Wait for the available WiFi.
 - Click the WiFi to be connected, and a password is required if you want to connect to an encrypted network.
- LAN Setting

How to Download/Use Apps

With network connection, you can download and install apps you need from the App Store.

List of System Pre-set Software

App Store, Instruction, This Device, Feedback, Remote Assistance, Gallery, Download, Calculator, System Update, ShopCenter.

Note: the pre-set software list is subject to change due to software update.


For more help, please refer to the instruction App in the device.

Package Items List

- Smart terminal × 1
- Quick start guide × 1
- Power adapter × 1
- Printing paper roll × 1

Product Overview


"Take the facial recognition version as an example"

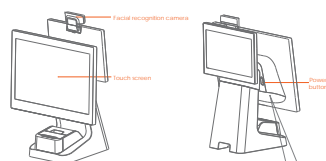


Power button
Press the button to boot up the device when it is off. Press and hold the button for 2-3 seconds to power off or reboot the device when it is on. Press and hold the button for 11 seconds to power off the device when it is locked.

Touch Screen
A touch screen for operators to use.


Facial Recognition Camera
Three options: monococular/bicocular/3D structured light camera.

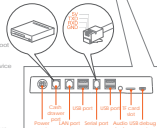

Device Installation

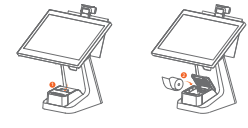

- Open the printer cover**
As shown in the figure, press the button at the bottom left corner to pop open the printer cover.
- Connect the power cable**
Connect the power adapter to the power port on the back of the display. Plug the other end of the power adapter into the main socket.
- Install the printing paper**
Load the 58mm thermal paper and pull out as much as possible outside the cutter, then close the cover.

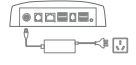

Attentions

Safety Warnings

- Please insert the AC plug into the AC socket corresponding to the label marked on the power adapter.
- Please use the device within the temperature range of 0 °C ~ 40 °C, and store the device and accessories within the range of -20 °C ~ 60 °C.
- It is strictly prohibited to use the device in places with any potentially explosive gas.
- *Non-professional personnel shall not open the power adapter as well to avoid damage.

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

Battery requirements

The life of the battery of the device is not affected by the use of the device.

The replacement and battery should be handled over to the maintenance personnel for disposal. Do not throw into the fire!

Important Safety Instructions

Do not install or use the device during lightning storms to avoid the potential risks of lightning shock. Cut off the power immediately when you find a lightning streak, overvoltage or surges.

Disclaimer

Due to the nature of the product, some details of the document may be inconsistent with the product, and the actual product shall prevail. Our company reserves the right to amend this guide as well as amend it without prior notice.

Troubleshooting

Trouble	Solution
Device Unusable	Press and hold the power button for 11 seconds to power off the device, then press to reboot.
The printer doesn't work	Check whether the printer cover is closed properly. Check whether there is a paper jam.
The printer prints blank pages	Check whether the paper roll is placed correctly. Check whether the 58mm thermal printing paper roll is used.
Blurry printouts	Check whether the thermal head is dirty. If it is dirty, please wipe it with a cotton swab dipped in alcohol solution. Replace the thermal paper with guaranteed quality to avoid blurry printouts caused by paper.
The paper does not come out	Check whether there is a paper jam. Open the cover, check the paper feeding channel and close the paper jam. There is one.

Note:
When cleaning the thermal head or paper feeding rubber roller, do not scratch the thermal head and rubber roller with third objects (such as tweezers). In order to improve the service life, it is recommended to clean the thermal head and rubber roller every month. When cleaning, please use a cotton swab dipped in alcohol solution to gently wipe the thermal head.

For more information, please visit www.sunnys.com or call at 400-6666-009.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED Canada compliance statements

This device complies with ISED Canada's radio-emit (ES) standards. Operation is subject to the following two conditions: (1) the device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED Canada applicables aux appareils radio exempts de licence. L'exploitation de cet appareil est soumise aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Do not drop, throw or bend the device.

Use this device in a clean and dust-free environment to prevent small items from falling into the device.

Do not use the device in elementary school and the environment, such as near fire source or flammable.

Do not drop, throw or bend the device.

EU regulatory conformance

Hendry, Shanghai Sunmi Technology Co., Ltd. declares that the device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU in the full text of the EU declaration of conformity is available at the following internet address: <https://www.sunnys.com/declaration-of-conformity/20240618>

INFORMATION ABOUT THE SOFTWARE

The description of accessories and components, including software, which allow the radio equipment to operate as intended, can be obtained in the full text of the EU declaration of conformity at the following internet address: <https://www.sunnys.com/declaration-of-conformity/20240618>

EU Representative: SAMM Service S.p.A.
EU Representative: SAMM Service S.p.A.
EU Representative: SAMM Service S.p.A.

The symbol means that it is forbidden to dispose the product of with uncontrolled waste. In the case of the product for repair, waste equipment should be taken to approved collection points, in order to be disposed of in an environmentally sound manner, in order to prevent the release of hazardous substances into the environment or into the ground.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits for use in an uncontrolled environment. This equipment must be installed and maintained with minimum distance as shown between the radio's antenna and you.

Manufacturer: Shanghai Sunmi Technology Co., Ltd.
Address: Room 208, Building 7, FCC, 300 Shanghai Road, Yangpu District, Shanghai, P.R. China.